

Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for
Cooper Lighting Solutions
(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P726676

Luminaire Tested: **MRI-DRV-FLD4C-10-L950 F4LC-M-X-LI**

Issue Date: 08/03/2023



Test Information

Test Method: LM-79-08
Report Number: P726676
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P205108)
Test Lab: INNOVATION CENTER-P3
Issue Date: 08/03/2023
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: FAIL-SAFE
Catalog Number: MRI-DRV-FLD4C-10-L950 F4LC-M-X-LI
Description: 4 INCH FAIL-SAFE MRI REMOTE DRIVER LED DOWNLIGHT WITH 5000K, 90 CRI
LEDS, 4LBMLI TRIM
Light Source: -
Ballast/Driver: -


Summary

Lumens per Lamp: N/A
Luminaire Lumens: 980.0 lumens
Efficiency: N/A
Efficacy: 100.5 lumens/watt
Spacing Criteria (0/90/45): 0.85 / 0.85 / 0.85
Luminous Opening: Circular (Dia: 0.33' x H: 0')
CIE Type: Direct

Input Watts (W): 9.75
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P726676
CATALOG NUMBER: MRI-DRV-FLD4C-10-L950 F4LC-M-X-LI

Luminous Intensity Polar Plot

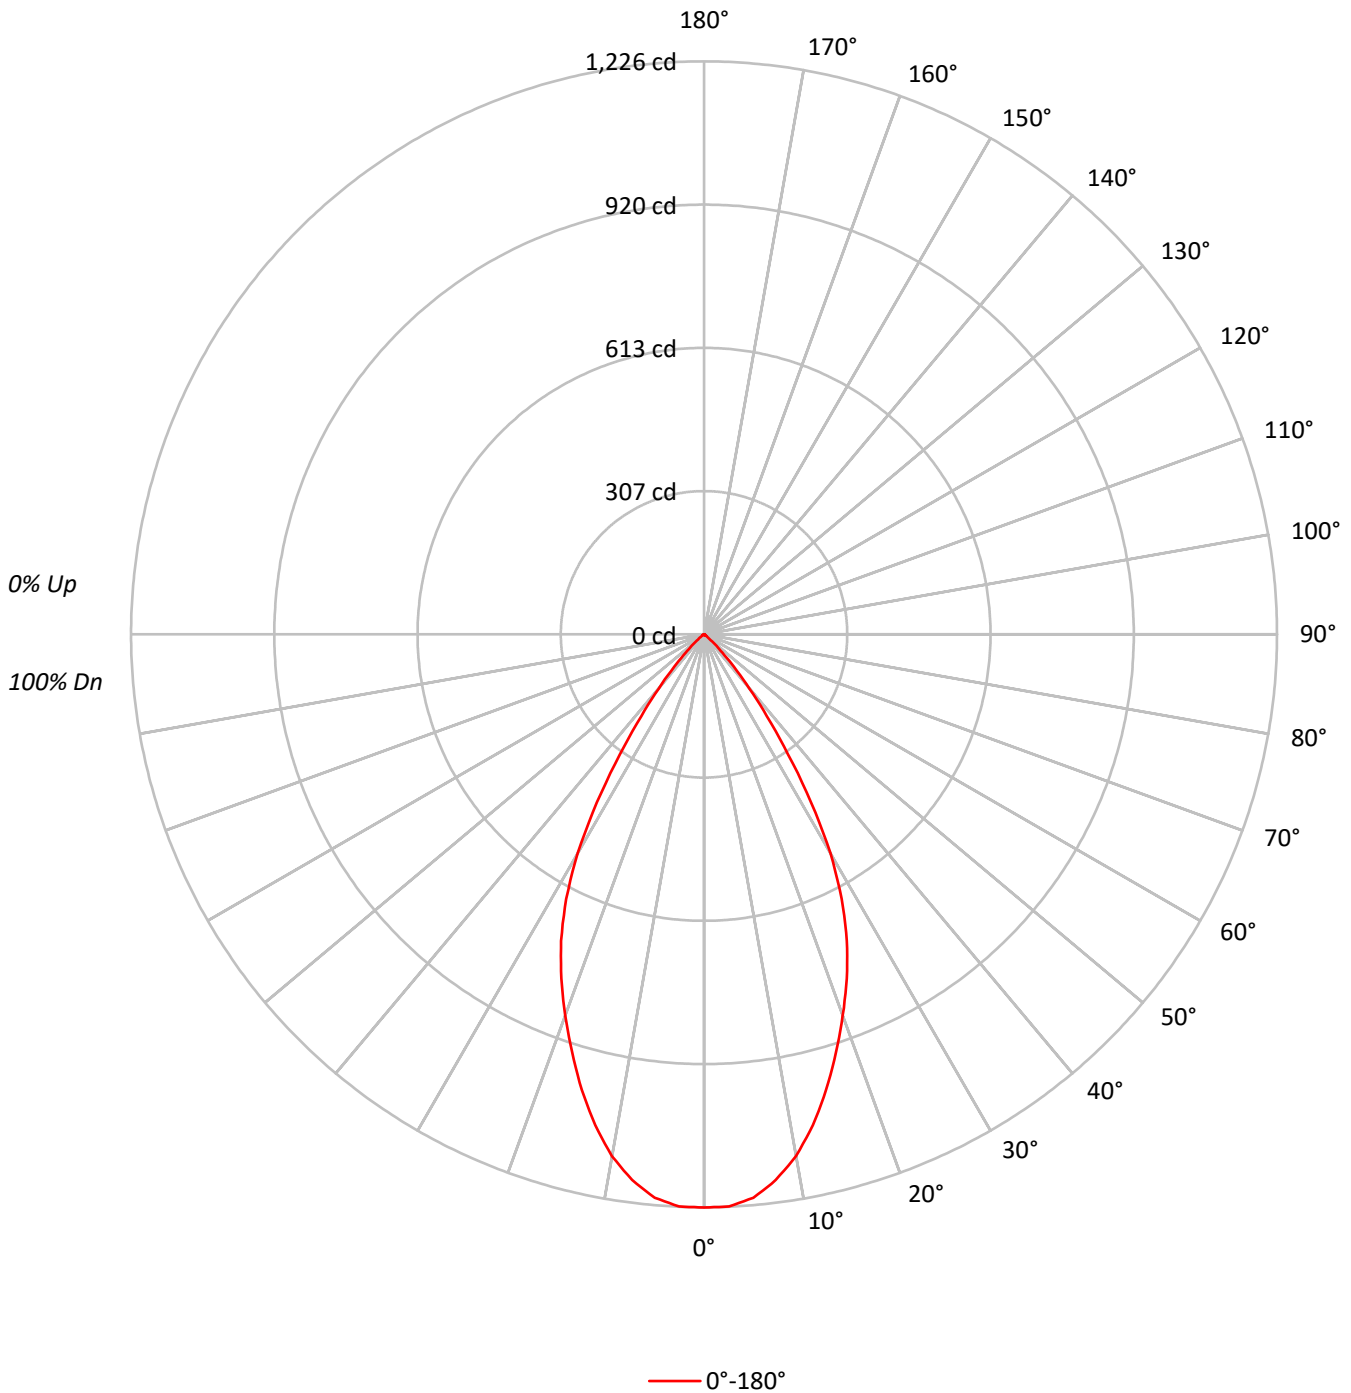



TEST NUMBER: P726676

CATALOG NUMBER: MRI-DRV-FLD4C-10-L950 F4LC-M-X-LI

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20				20	
RC	80				70				50				30				10				0	
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10	0	
RCR																						
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100				100
1	114	111	109	106	111	109	107	105	105	103	101	101	100	98	98	97	96	94				94
2	108	103	100	96	106	102	98	95	99	96	93	96	93	91	93	91	89	88				88
3	103	97	92	88	101	95	91	87	93	89	86	90	87	85	88	85	83	82				82
4	98	91	85	81	96	89	84	81	87	83	80	85	82	79	83	80	78	76				76
5	93	85	79	75	91	84	79	75	82	78	74	81	77	73	79	76	73	71				71
6	89	80	74	70	87	79	74	70	78	73	69	76	72	69	75	71	68	67				67
7	84	75	69	65	83	75	69	65	73	68	65	72	68	64	71	67	64	63				63
8	80	71	65	61	79	70	65	61	69	64	61	68	64	60	67	63	60	59				59
9	77	67	61	57	75	67	61	57	66	61	57	65	60	57	64	60	57	55				55
10	73	64	58	54	72	63	58	54	62	57	54	62	57	54	61	57	54	52				52

AVERAGE LUMINANCE (cd/sqm):

	0°
0°	150668
5°	149233
10°	141415
15°	128396
20°	113454
25°	98087
30°	76675
35°	47018
40°	24136
45°	9591
50°	3115
55°	1071
60°	909
65°	727
70°	467
75°	617
80°	0
85°	0



TEST NUMBER: P726676
 CATALOG NUMBER: MRI-DRV-FLD4C-10-L950 F4LC-M-X-LI

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	113.0	11.5
10°-20°	281.3	28.7
20°-30°	327.0	33.4
30°-40°	200.2	20.4
40°-50°	49.7	5.1
50°-60°	5.8	0.6
60°-70°	2.2	0.2
70°-80°	0.9	0.1
80°-90°	0.0	0.0
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	721.2	73.6
0°-40°	921.5	94.0
0°-60°	977.0	99.7
0°-90°	980.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	980.0	100.0

CANDELA DISTRIBUTION:

	0°	Flux
0°	1226	
5°	1210	113
15°	1010	281
25°	724	327
35°	314	200
45°	55	50
55°	5	6
65°	2	2
75°	1	1
85°	0	0
90°	0	



TEST NUMBER: P726676
CATALOG NUMBER: MRI-DRV-FLD4C-10-L950 F4LC-M-X-LI

CANDELA DISTRIBUTION (FULL):

	0°
0°	1226.4
2.5°	1225.2
5°	1210.1
7.5°	1177.5
10°	1133.6
12.5°	1075.9
15°	1009.5
17.5°	938.0
20°	867.8
22.5°	797.5
25°	723.6
27.5°	638.3
30°	540.5
32.5°	426.4
35°	313.5
37.5°	220.7
40°	150.5
42.5°	94.0
45°	55.2
47.5°	31.4
50°	16.3
52.5°	7.5
55°	5.0
57.5°	3.7
60°	3.7
62.5°	2.5
65°	2.5
67.5°	1.3
70°	1.3
72.5°	1.3
75°	1.3
77.5°	0.0
80°	0.0
82.5°	0.0
85°	0.0
87.5°	0.0
90°	0.0

(END OF REPORT)