

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: McGRAW-EDISON

Report Number: P316671

Luminaire Tested: **GLEON-SA7A-722-U-5MQ**

Issue Date: 3/3/2020

**Test Information**

Test Method: LM-79-08  
Report Number: P316671  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-1903-205-6)  
Test Lab: INNOVATION CENTER  
Issue Date: 3/3/2020  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: McGRAW-EDISON  
Catalog Number: GLEON-SA7A-722-U-5MQ  
Description: GALLEON AREA AND ROADWAY LUMINAIRE  
(7) 70 CRI, 2200K, 615mA LIGHTSQUARES WITH 16 LEDS EACH AND TYPE V MEDIUM OPTICS  
Light Source: -  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 25456 lumens  
Efficiency: N/A  
Efficacy: 112.6 lumens/watt  
Luminous Opening: Rectangular (W 2' x L: 1' x H: 0')  
IES Classification: Type V - Short  
BUG Rating: B5 - U0 - G3


Input Watts (W): 226  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



REPORT NUMBER: P316671  
 CATALOG NUMBER: GLEON-SA7A-722-U-5MQ

## Iso-Footcandle Lines of Horizontal Illumination


✕ Max cd  
 - - - 1/2 Max cd

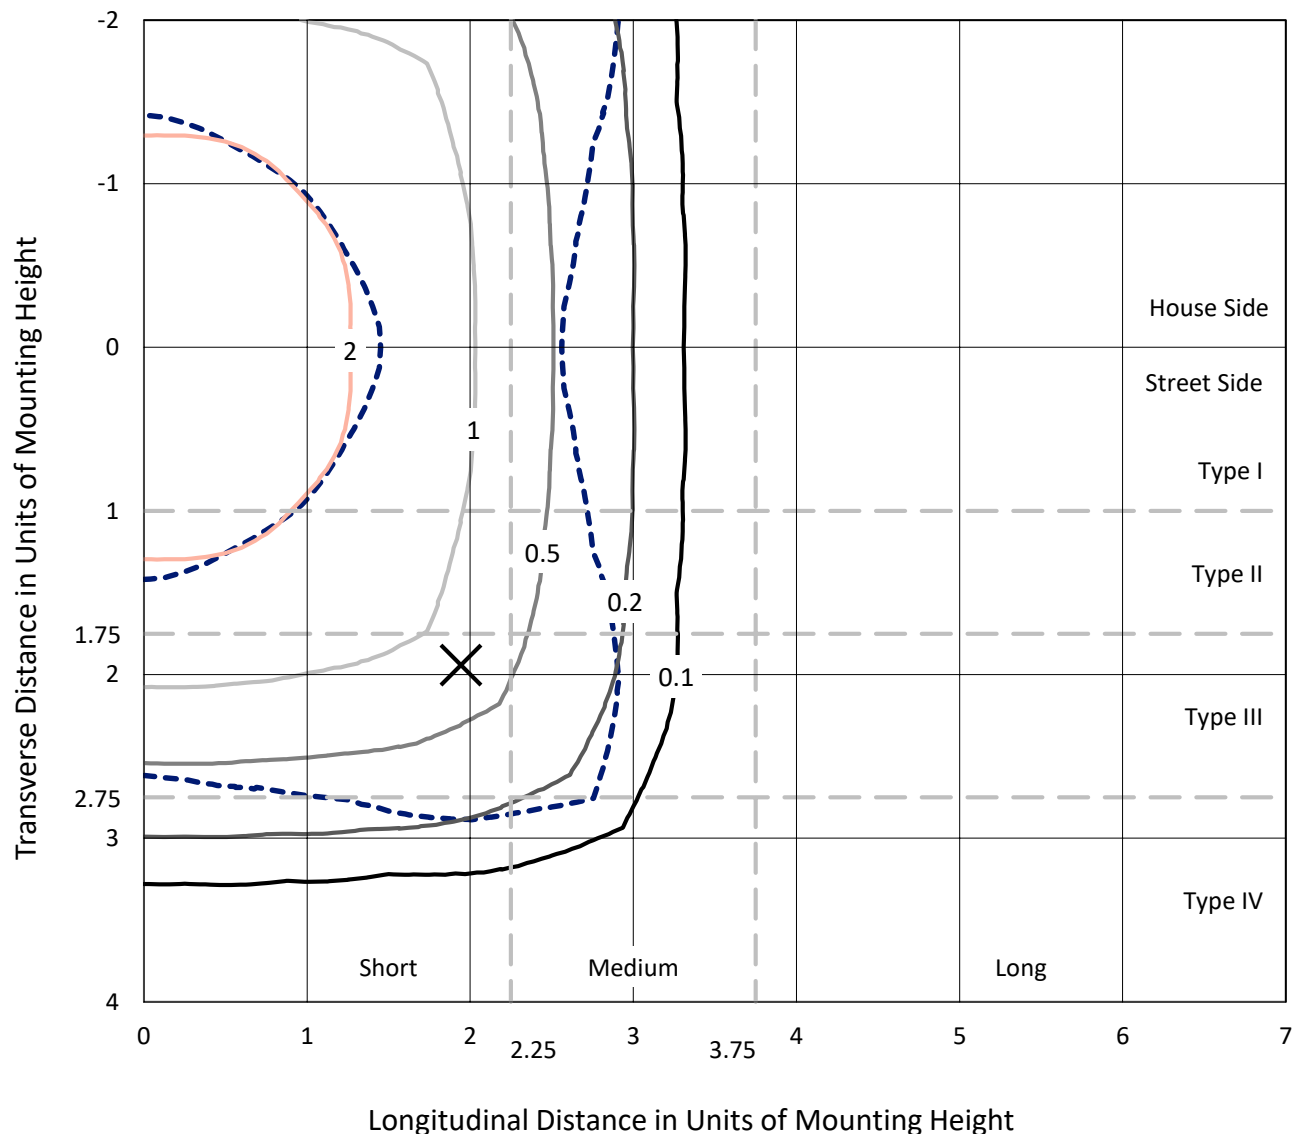

Based on 25 foot mounting height. Maximum calculated value = 4.4 fc  
 Type V - Short - N/A

REPORT NUMBER: P316671  
CATALOG NUMBER: GLEON-SA7A-722-U-5MQ

## Luminous Intensity Polar Plot

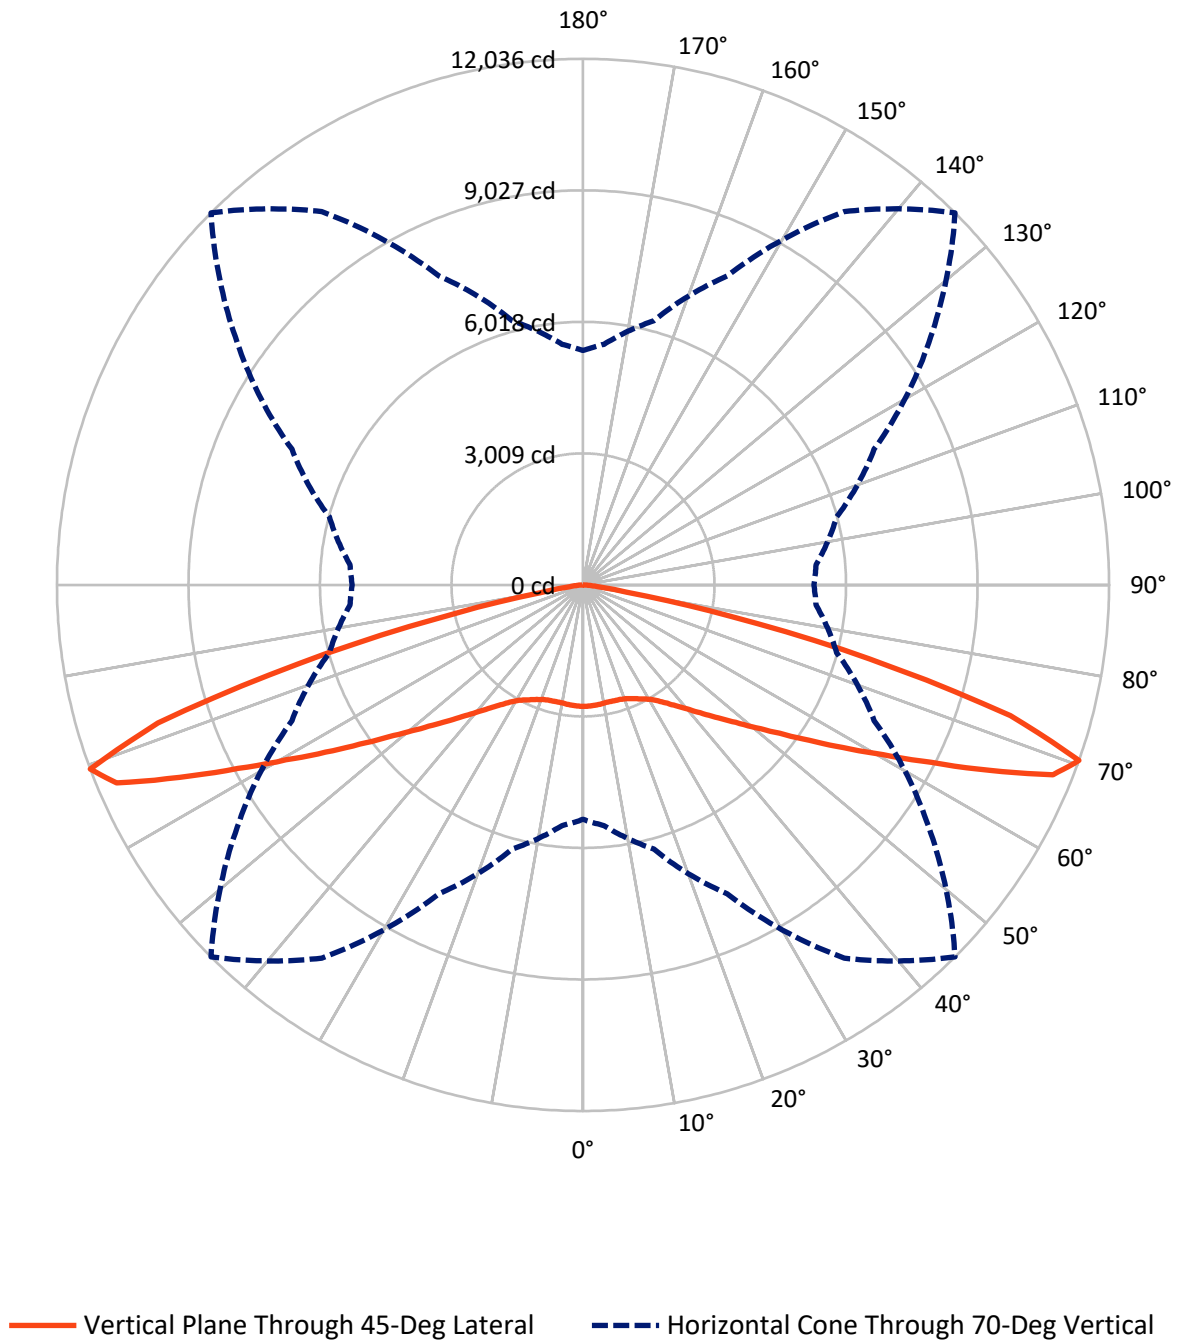

REPORT NUMBER: P316671

CATALOG NUMBER: GLEON-SA7A-722-U-5MQ

**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total   |
|--------------------|-----------|----------|--------|---------|
| <b>House Side</b>  | Lumens    | 12728.0  | 0.0    | 12728.0 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Street Side</b> | Lumens    | 12728.0  | 0.0    | 12728.0 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Total</b>       | Lumens    | 25456.0  | 0.0    | 25456.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0   |

**ZONAL LUMENS:**

| Zone      | Lumens  | % Fixture |
|-----------|---------|-----------|
| 0°-10°    | 263.3   | 1.0       |
| 10°-20°   | 773.0   | 3.0       |
| 20°-30°   | 1315.9  | 5.2       |
| 30°-40°   | 2087.1  | 8.2       |
| 40°-50°   | 3396.3  | 13.3      |
| 50°-60°   | 5599.8  | 22.0      |
| 60°-70°   | 8220.7  | 32.3      |
| 70°-80°   | 3635.2  | 14.3      |
| 80°-90°   | 164.6   | 0.6       |
| 90°-100°  | 0.0     | 0.0       |
| 100°-110° | 0.0     | 0.0       |
| 110°-120° | 0.0     | 0.0       |
| 120°-130° | 0.0     | 0.0       |
| 130°-140° | 0.0     | 0.0       |
| 140°-150° | 0.0     | 0.0       |
| 150°-160° | 0.0     | 0.0       |
| 160°-170° | 0.0     | 0.0       |
| 170°-180° | 0.0     | 0.0       |
| 0°-90°    | 25456.0 | 100.0     |
| 0°-180°   | 25456.0 | 100.0     |

**Coefficient of Utilization**



REPORT NUMBER: P316671


CATALOG NUMBER: GLEON-SA7A-722-U-5MQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 1176.1 | 4.6       |                         |      |         |
| FM   | (30°-60°)   | 5541.6 | 21.8      |                         |      |         |
| FH   | (60°-80°)   | 5928.0 | 23.3      |                         |      | G3/7500 |
| FVH  | (80°-90°)   | 82.3   | 0.3       |                         |      | G1/100  |
| BL   | (0°-30°)    | 1176.1 | 4.6       | B3/2500                 |      |         |
| BM   | (30°-60°)   | 5541.6 | 21.8      | B4/8500                 |      |         |
| BH   | (60°-80°)   | 5928.0 | 23.3      | B5                      |      | G3/7500 |
| BVH  | (80°-90°)   | 82.3   | 0.3       |                         |      | G1/100  |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B5-U0-G3**

Type V Short

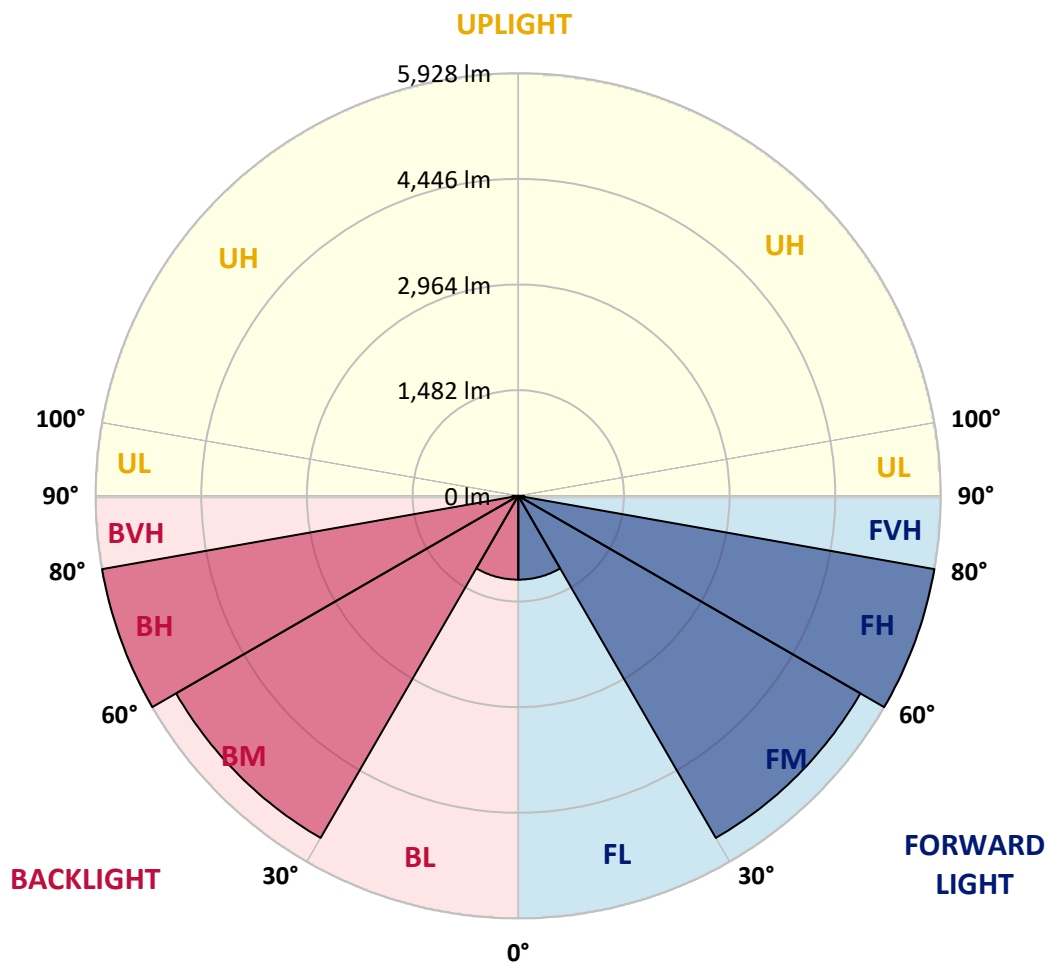

REPORT NUMBER: P316671

CATALOG NUMBER: GLEON-SA7A-722-U-5MQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 5°     | 15°    | 25°    | 35°     | 45°     | 55°     | 65°    | 75°    | 85°    | 90°    |
|-------|--------|--------|--------|--------|---------|---------|---------|--------|--------|--------|--------|
| 0°    | 2780.2 | 2780.2 | 2780.2 | 2780.2 | 2780.2  | 2780.2  | 2780.2  | 2780.2 | 2780.2 | 2780.2 | 2780.2 |
| 2.5°  | 2776.0 | 2773.5 | 2779.3 | 2778.5 | 2773.5  | 2774.3  | 2774.3  | 2776.8 | 2776.8 | 2775.1 | 2775.1 |
| 5°    | 2765.9 | 2764.2 | 2770.9 | 2770.9 | 2765.9  | 2767.6  | 2769.2  | 2771.8 | 2770.9 | 2769.2 | 2768.4 |
| 7.5°  | 2753.2 | 2752.4 | 2759.1 | 2759.1 | 2755.8  | 2757.4  | 2755.8  | 2756.6 | 2754.9 | 2753.2 | 2750.7 |
| 10°   | 2732.2 | 2733.9 | 2739.8 | 2741.4 | 2741.4  | 2742.3  | 2740.6  | 2736.4 | 2733.9 | 2731.3 | 2728.8 |
| 12.5° | 2712.8 | 2712.0 | 2720.4 | 2724.6 | 2731.3  | 2738.9  | 2733.9  | 2722.1 | 2717.0 | 2712.0 | 2710.3 |
| 15°   | 2700.2 | 2701.0 | 2709.4 | 2717.0 | 2728.8  | 2744.8  | 2738.9  | 2720.4 | 2710.3 | 2704.4 | 2702.7 |
| 17.5° | 2697.6 | 2699.3 | 2710.3 | 2723.7 | 2736.4  | 2754.1  | 2750.7  | 2732.2 | 2715.3 | 2704.4 | 2701.8 |
| 20°   | 2703.5 | 2704.4 | 2721.2 | 2740.6 | 2762.5  | 2779.3  | 2771.8  | 2751.5 | 2728.8 | 2712.0 | 2707.7 |
| 22.5° | 2714.5 | 2717.8 | 2738.9 | 2769.2 | 2802.9  | 2825.7  | 2816.4  | 2781.9 | 2746.5 | 2725.4 | 2719.5 |
| 25°   | 2749.0 | 2749.9 | 2778.5 | 2819.8 | 2860.2  | 2886.3  | 2875.4  | 2826.5 | 2781.0 | 2757.4 | 2749.9 |
| 27.5° | 2820.6 | 2823.2 | 2851.8 | 2899.8 | 2934.4  | 2951.2  | 2944.5  | 2904.9 | 2866.1 | 2840.9 | 2843.4 |
| 30°   | 2924.3 | 2927.6 | 2959.6 | 3012.7 | 3033.8  | 3038.0  | 3036.3  | 3017.8 | 2982.4 | 2948.7 | 2951.2 |
| 32.5° | 3050.6 | 3052.3 | 3095.3 | 3143.3 | 3160.2  | 3163.5  | 3160.2  | 3143.3 | 3101.2 | 3055.7 | 3058.2 |
| 35°   | 3213.2 | 3218.3 | 3259.6 | 3305.9 | 3319.4  | 3326.1  | 3320.2  | 3298.3 | 3254.5 | 3209.9 | 3208.2 |
| 37.5° | 3413.7 | 3414.6 | 3457.5 | 3505.6 | 3522.4  | 3524.1  | 3517.4  | 3503.0 | 3448.3 | 3407.8 | 3405.3 |
| 40°   | 3646.3 | 3649.6 | 3700.2 | 3751.6 | 3758.3  | 3750.7  | 3760.0  | 3751.6 | 3695.1 | 3648.8 | 3656.4 |
| 42.5° | 3929.3 | 3936.9 | 3997.6 | 4048.1 | 4028.8  | 4024.5  | 4030.4  | 4033.0 | 3987.5 | 3931.0 | 3926.0 |
| 45°   | 4258.7 | 4265.5 | 4341.3 | 4381.8 | 4369.1  | 4341.3  | 4353.1  | 4373.3 | 4310.1 | 4240.2 | 4247.0 |
| 47.5° | 4634.5 | 4651.3 | 4732.2 | 4770.1 | 4739.0  | 4701.1  | 4723.8  | 4754.1 | 4680.0 | 4593.2 | 4589.0 |
| 50°   | 5052.4 | 5073.4 | 5181.3 | 5234.3 | 5203.2  | 5133.2  | 5171.2  | 5191.4 | 5084.4 | 4972.3 | 4963.1 |
| 52.5° | 5498.0 | 5519.1 | 5654.7 | 5764.3 | 5744.0  | 5635.4  | 5688.4  | 5667.4 | 5544.4 | 5393.6 | 5381.8 |
| 55°   | 6002.7 | 6011.1 | 6157.7 | 6334.6 | 6354.8  | 6274.8  | 6271.4  | 6236.9 | 6054.9 | 5880.5 | 5872.1 |
| 57.5° | 6521.7 | 6527.6 | 6717.1 | 6926.0 | 7021.2  | 7021.2  | 6926.9  | 6853.6 | 6611.8 | 6409.6 | 6388.5 |
| 60°   | 7081.9 | 7103.0 | 7312.7 | 7596.7 | 7819.1  | 7884.8  | 7718.0  | 7518.3 | 7255.5 | 7008.6 | 6984.2 |
| 62.5° | 7580.7 | 7605.1 | 7926.1 | 8349.0 | 8706.2  | 8945.5  | 8537.7  | 8212.5 | 7734.0 | 7338.0 | 7291.7 |
| 65°   | 7643.8 | 7709.6 | 8177.1 | 8942.9 | 9742.5  | 10220.2 | 9438.3  | 8637.1 | 7765.2 | 7215.0 | 7167.8 |
| 67.5° | 6980.8 | 7092.0 | 7723.9 | 8916.0 | 10568.1 | 11593.4 | 10013.7 | 8394.5 | 7205.8 | 6597.5 | 6545.2 |
| 70°   | 5364.1 | 5525.8 | 6254.6 | 7798.9 | 10425.7 | 12035.7 | 9653.2  | 7349.0 | 6007.7 | 5353.1 | 5279.8 |
| 72.5° | 2942.8 | 3009.3 | 3664.8 | 5340.5 | 8358.3  | 10227.7 | 8051.6  | 5434.0 | 3984.1 | 3241.9 | 3118.9 |
| 75°   | 933.5  | 957.1  | 1290.7 | 2185.4 | 4728.0  | 6774.4  | 5114.7  | 2667.3 | 1468.4 | 1082.6 | 1070.0 |
| 77.5° | 414.5  | 417.0  | 466.7  | 637.8  | 1628.5  | 3432.3  | 1956.2  | 726.2  | 500.4  | 437.2  | 451.6  |
| 80°   | 262.0  | 262.0  | 289.0  | 315.9  | 443.1   | 996.7   | 529.1   | 345.4  | 294.9  | 273.8  | 279.7  |
| 82.5° | 125.5  | 139.0  | 187.9  | 202.2  | 243.5   | 335.3   | 271.3   | 225.8  | 197.1  | 146.6  | 136.5  |
| 85°   | 82.6   | 69.1   | 118.8  | 134.0  | 141.5   | 160.9   | 157.5   | 149.1  | 128.9  | 73.3   | 81.7   |
| 87.5° | 37.1   | 35.4   | 61.5   | 56.4   | 53.1    | 40.4    | 60.7    | 75.0   | 72.5   | 36.2   | 36.2   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0     | 0.0     | 0.0     | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2008: Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGRAW-EDISON

Report Number: SP1-1908-441-10-R4

Test Date: 10/25/2019

Luminaire Tested: SA1C-722-U-5WQ

Data in this report applies to families of products SA1C-722-U-5WQ.

### Test Information

Test Method: LM-79-2008 Report  
 Number: SP1-1908-441-10-R4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/28/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: MCGRAW-EDISON  
 Catalog Number: **SA1C-722-U-5WQ**  
 Description: MCGRAW EDISON ROADWAY AND AREA LUMINAIRE

\*\*\*THIS IS A REVISION OF SP1-1908-441-4-R3. TO UPDATE THE CATALOG INFORMATION.\*\*\*TESTED IN SITU. ROADWAY AND AREA LUMINAIRE. (1) 70 CRI, 5000K, 1050MA LIGHTSQUARE WITH 16 LEDS AND TYPE V WIDE OPTICS.

### Spectral Parameters

|                           |         |           |      |      |       |
|---------------------------|---------|-----------|------|------|-------|
| CCT (K):                  | 2237    | CRI (Ra): | 72.0 |      |       |
| CIE u':                   | 0.2876  | R1:       | 68.9 | R9:  | -17.4 |
| CIE v':                   | 0.5346  | R2:       | 83.0 | R10: | 61.3  |
| Duv:                      | -0.0006 | R3:       | 95.2 | R11: | 59.8  |
| CIE x:                    | 0.5005  | R4:       | 66.2 | R12: | 50.5  |
| CIE y:                    | 0.4134  | R5:       | 65.9 | R13: | 71.1  |
| CIE z:                    | 0.0860  | R6:       | 76.3 | R14: | 96.9  |
| Peak Wavelength (nm):     | 603     | R7:       | 76.7 |      |       |
| Dominant Wavelength (nm): | 587     | R8:       | 43.8 |      |       |
| Purity:                   | 74.5    |           |      |      |       |
| Rf:                       | 69.8    |           |      |      |       |
| Rg:                       | 99.2    |           |      |      |       |



### Test Conditions

Stabilization Time: 71M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.7/41%  
 Sphere Temperature (°C): 25.6

REPORT NUMBER: SP1-1908-441-10-R4

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/28/2019        | 12/28/2019           |
| Power Meter                    | IN0071                | 12/5/2018        | 12/5/2019            |
| AC Power Source                | IN0063                | 12/5/2018        | 12/5/2019            |
| DC Power Source                | IN0208                | 12/5/2018        | 12/5/2019            |
| Sphere Thermometer             | IN0085                | 12/5/2018        | 12/5/2019            |
| Room Thermometer               | IN0046                | 12/5/2018        | 12/5/2019            |

REPORT NUMBER: SP1-1908-441-10-R4

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 2200K 4-step quadrangle

REPORT NUMBER: SP1-1908-441-10-R4

**Photopic Flux vs. Wavelength**



#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1768             | NR               | 490       | 5206             | NR               | 620       | 130919           | NR               | 750       | 8553             | NR               | 880       | 2713             | NR               |
| 365       | 1569             | NR               | 495       | 7286             | NR               | 625       | 125335           | NR               | 755       | 7696             | NR               | 885       | 2316             | NR               |
| 370       | 1594             | NR               | 500       | 10654            | NR               | 630       | 118388           | NR               | 760       | 6978             | NR               | 890       | 2539             | NR               |
| 375       | 1744             | NR               | 505       | 15189            | NR               | 635       | 111855           | NR               | 765       | 6377             | NR               | 895       | 1933             | NR               |
| 380       | 1659             | NR               | 510       | 20541            | NR               | 640       | 104062           | NR               | 770       | 5600             | NR               | 900       | 2216             | NR               |
| 385       | 1504             | NR               | 515       | 26492            | NR               | 645       | 96365            | NR               | 775       | 5000             | NR               | 905       | 2067             | NR               |
| 390       | 1541             | NR               | 520       | 32294            | NR               | 650       | 88651            | NR               | 780       | 4709             | NR               | 910       | 1959             | NR               |
| 395       | 1355             | NR               | 525       | 38123            | NR               | 655       | 81152            | NR               | 785       | 4305             | NR               | 915       | 1874             | NR               |
| 400       | 1243             | NR               | 530       | 43232            | NR               | 660       | 73523            | NR               | 790       | 4040             | NR               | 920       | 1484             | NR               |
| 405       | 1417             | NR               | 535       | 48012            | NR               | 665       | 66123            | NR               | 795       | 3642             | NR               | 925       | 1914             | NR               |
| 410       | 2147             | NR               | 540       | 52623            | NR               | 670       | 58677            | NR               | 800       | 3594             | NR               | 930       | 1948             | NR               |
| 415       | 3837             | NR               | 545       | 57516            | NR               | 675       | 52349            | NR               | 805       | 3190             | NR               | 935       | 2079             | NR               |
| 420       | 7159             | NR               | 550       | 62613            | NR               | 680       | 46159            | NR               | 810       | 3241             | NR               | 940       | 2263             | NR               |
| 425       | 12599            | NR               | 555       | 68554            | NR               | 685       | 40525            | NR               | 815       | 2732             | NR               | 945       | 1688             | NR               |
| 430       | 19019            | NR               | 560       | 75325            | NR               | 690       | 35615            | NR               | 820       | 2612             | NR               | 950       | 1560             | NR               |
| 435       | 24875            | NR               | 565       | 82533            | NR               | 695       | 31158            | NR               | 825       | 2966             | NR               | 955       | 2826             | NR               |
| 440       | 29103            | NR               | 570       | 90909            | NR               | 700       | 27409            | NR               | 830       | 2574             | NR               | 960       | 1477             | NR               |
| 445       | 29901            | NR               | 575       | 99621            | NR               | 705       | 24204            | NR               | 835       | 2633             | NR               | 965       | 1568             | NR               |
| 450       | 24862            | NR               | 580       | 108484           | NR               | 710       | 21558            | NR               | 840       | 2526             | NR               | 970       | 2030             | NR               |
| 455       | 15942            | NR               | 585       | 116679           | NR               | 715       | 19222            | NR               | 845       | 2631             | NR               | 975       | 1986             | NR               |
| 460       | 9916             | NR               | 590       | 123752           | NR               | 720       | 17310            | NR               | 850       | 2079             | NR               | 980       | 2540             | NR               |
| 465       | 7051             | NR               | 595       | 129324           | NR               | 725       | 15280            | NR               | 855       | 2309             | NR               | 985       | 1139             | NR               |
| 470       | 5227             | NR               | 600       | 134082           | NR               | 730       | 13282            | NR               | 860       | 2528             | NR               | 990       | 2018             | NR               |
| 475       | 4257             | NR               | 605       | 135698           | NR               | 735       | 11753            | NR               | 865       | 2121             | NR               | 995       | 3445             | NR               |
| 480       | 4052             | NR               | 610       | 135144           | NR               | 740       | 10654            | NR               | 870       | 2751             | NR               | 1000      | 3704             | NR               |
| 485       | 4298             | NR               | 615       | 134180           | NR               | 745       | 9451             | NR               | 875       | 2317             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-10-R4

Scotopic Flux vs. Wavelength



Scotopic Lumens: 4696.9

S/P: 0.85

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1768             | NR               | 490       | 5206             | NR               | 620       | 130919           | NR               | 750       | 8553             | NR               | 880       | 2713             | NR               |
| 365       | 1569             | NR               | 495       | 7286             | NR               | 625       | 125335           | NR               | 755       | 7696             | NR               | 885       | 2316             | NR               |
| 370       | 1594             | NR               | 500       | 10654            | NR               | 630       | 118388           | NR               | 760       | 6978             | NR               | 890       | 2539             | NR               |
| 375       | 1744             | NR               | 505       | 15189            | NR               | 635       | 111855           | NR               | 765       | 6377             | NR               | 895       | 1933             | NR               |
| 380       | 1659             | NR               | 510       | 20541            | NR               | 640       | 104062           | NR               | 770       | 5600             | NR               | 900       | 2216             | NR               |
| 385       | 1504             | NR               | 515       | 26492            | NR               | 645       | 96365            | NR               | 775       | 5000             | NR               | 905       | 2067             | NR               |
| 390       | 1541             | NR               | 520       | 32294            | NR               | 650       | 88651            | NR               | 780       | 4709             | NR               | 910       | 1959             | NR               |
| 395       | 1355             | NR               | 525       | 38123            | NR               | 655       | 81152            | NR               | 785       | 4305             | NR               | 915       | 1874             | NR               |
| 400       | 1243             | NR               | 530       | 43232            | NR               | 660       | 73523            | NR               | 790       | 4040             | NR               | 920       | 1484             | NR               |
| 405       | 1417             | NR               | 535       | 48012            | NR               | 665       | 66123            | NR               | 795       | 3642             | NR               | 925       | 1914             | NR               |
| 410       | 2147             | NR               | 540       | 52623            | NR               | 670       | 58677            | NR               | 800       | 3594             | NR               | 930       | 1948             | NR               |
| 415       | 3837             | NR               | 545       | 57516            | NR               | 675       | 52349            | NR               | 805       | 3190             | NR               | 935       | 2079             | NR               |
| 420       | 7159             | NR               | 550       | 62613            | NR               | 680       | 46159            | NR               | 810       | 3241             | NR               | 940       | 2263             | NR               |
| 425       | 12599            | NR               | 555       | 68554            | NR               | 685       | 40525            | NR               | 815       | 2732             | NR               | 945       | 1688             | NR               |
| 430       | 19019            | NR               | 560       | 75325            | NR               | 690       | 35615            | NR               | 820       | 2612             | NR               | 950       | 1560             | NR               |
| 435       | 24875            | NR               | 565       | 82533            | NR               | 695       | 31158            | NR               | 825       | 2966             | NR               | 955       | 2826             | NR               |
| 440       | 29103            | NR               | 570       | 90909            | NR               | 700       | 27409            | NR               | 830       | 2574             | NR               | 960       | 1477             | NR               |
| 445       | 29901            | NR               | 575       | 99621            | NR               | 705       | 24204            | NR               | 835       | 2633             | NR               | 965       | 1568             | NR               |
| 450       | 24862            | NR               | 580       | 108484           | NR               | 710       | 21558            | NR               | 840       | 2526             | NR               | 970       | 2030             | NR               |
| 455       | 15942            | NR               | 585       | 116679           | NR               | 715       | 19222            | NR               | 845       | 2631             | NR               | 975       | 1986             | NR               |
| 460       | 9916             | NR               | 590       | 123752           | NR               | 720       | 17310            | NR               | 850       | 2079             | NR               | 980       | 2540             | NR               |
| 465       | 7051             | NR               | 595       | 129324           | NR               | 725       | 15280            | NR               | 855       | 2309             | NR               | 985       | 1139             | NR               |
| 470       | 5227             | NR               | 600       | 134082           | NR               | 730       | 13282            | NR               | 860       | 2528             | NR               | 990       | 2018             | NR               |
| 475       | 4257             | NR               | 605       | 135698           | NR               | 735       | 11753            | NR               | 865       | 2121             | NR               | 995       | 3445             | NR               |
| 480       | 4052             | NR               | 610       | 135144           | NR               | 740       | 10654            | NR               | 870       | 2751             | NR               | 1000      | 3704             | NR               |
| 485       | 4298             | NR               | 615       | 134180           | NR               | 745       | 9451             | NR               | 875       | 2317             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-10-R4

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 1470.8 M/P: 0.27**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1768             | NR               | 490       | 5206             | NR               | 620       | 130919           | NR               | 750       | 8553             | NR               | 880       | 2713             | NR               |
| 365       | 1569             | NR               | 495       | 7286             | NR               | 625       | 125335           | NR               | 755       | 7696             | NR               | 885       | 2316             | NR               |
| 370       | 1594             | NR               | 500       | 10654            | NR               | 630       | 118388           | NR               | 760       | 6978             | NR               | 890       | 2539             | NR               |
| 375       | 1744             | NR               | 505       | 15189            | NR               | 635       | 111855           | NR               | 765       | 6377             | NR               | 895       | 1933             | NR               |
| 380       | 1659             | NR               | 510       | 20541            | NR               | 640       | 104062           | NR               | 770       | 5600             | NR               | 900       | 2216             | NR               |
| 385       | 1504             | NR               | 515       | 26492            | NR               | 645       | 96365            | NR               | 775       | 5000             | NR               | 905       | 2067             | NR               |
| 390       | 1541             | NR               | 520       | 32294            | NR               | 650       | 88651            | NR               | 780       | 4709             | NR               | 910       | 1959             | NR               |
| 395       | 1355             | NR               | 525       | 38123            | NR               | 655       | 81152            | NR               | 785       | 4305             | NR               | 915       | 1874             | NR               |
| 400       | 1243             | NR               | 530       | 43232            | NR               | 660       | 73523            | NR               | 790       | 4040             | NR               | 920       | 1484             | NR               |
| 405       | 1417             | NR               | 535       | 48012            | NR               | 665       | 66123            | NR               | 795       | 3642             | NR               | 925       | 1914             | NR               |
| 410       | 2147             | NR               | 540       | 52623            | NR               | 670       | 58677            | NR               | 800       | 3594             | NR               | 930       | 1948             | NR               |
| 415       | 3837             | NR               | 545       | 57516            | NR               | 675       | 52349            | NR               | 805       | 3190             | NR               | 935       | 2079             | NR               |
| 420       | 7159             | NR               | 550       | 62613            | NR               | 680       | 46159            | NR               | 810       | 3241             | NR               | 940       | 2263             | NR               |
| 425       | 12599            | NR               | 555       | 68554            | NR               | 685       | 40525            | NR               | 815       | 2732             | NR               | 945       | 1688             | NR               |
| 430       | 19019            | NR               | 560       | 75325            | NR               | 690       | 35615            | NR               | 820       | 2612             | NR               | 950       | 1560             | NR               |
| 435       | 24875            | NR               | 565       | 82533            | NR               | 695       | 31158            | NR               | 825       | 2966             | NR               | 955       | 2826             | NR               |
| 440       | 29103            | NR               | 570       | 90909            | NR               | 700       | 27409            | NR               | 830       | 2574             | NR               | 960       | 1477             | NR               |
| 445       | 29901            | NR               | 575       | 99621            | NR               | 705       | 24204            | NR               | 835       | 2633             | NR               | 965       | 1568             | NR               |
| 450       | 24862            | NR               | 580       | 108484           | NR               | 710       | 21558            | NR               | 840       | 2526             | NR               | 970       | 2030             | NR               |
| 455       | 15942            | NR               | 585       | 116679           | NR               | 715       | 19222            | NR               | 845       | 2631             | NR               | 975       | 1986             | NR               |
| 460       | 9916             | NR               | 590       | 123752           | NR               | 720       | 17310            | NR               | 850       | 2079             | NR               | 980       | 2540             | NR               |
| 465       | 7051             | NR               | 595       | 129324           | NR               | 725       | 15280            | NR               | 855       | 2309             | NR               | 985       | 1139             | NR               |
| 470       | 5227             | NR               | 600       | 134082           | NR               | 730       | 13282            | NR               | 860       | 2528             | NR               | 990       | 2018             | NR               |
| 475       | 4257             | NR               | 605       | 135698           | NR               | 735       | 11753            | NR               | 865       | 2121             | NR               | 995       | 3445             | NR               |
| 480       | 4052             | NR               | 610       | 135144           | NR               | 740       | 10654            | NR               | 870       | 2751             | NR               | 1000      | 3704             | NR               |
| 485       | 4298             | NR               | 615       | 134180           | NR               | 745       | 9451             | NR               | 875       | 2317             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-10-R4

TM-30-18

### Summary

$R_f = 69.8$   
 $R_g = 99.2$   
 CIE  $R_a = 72.0$   
 $R_g = -17.4$



### Color Vector Graphics



REPORT NUMBER: SP1-1908-441-10-R4

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 87 | CES26 = 56 | CES51 = 74 | CES76 = 56 |
| CES02 = 65 | CES27 = 76 | CES52 = 76 | CES77 = 81 |
| CES03 = 32 | CES28 = 83 | CES53 = 65 | CES78 = 63 |
| CES04 = 72 | CES29 = 46 | CES54 = 78 | CES79 = 84 |
| CES05 = 52 | CES30 = 48 | CES55 = 75 | CES80 = 84 |
| CES06 = 52 | CES31 = 51 | CES56 = 65 | CES81 = 63 |
| CES07 = 44 | CES32 = 51 | CES57 = 62 | CES82 = 92 |
| CES08 = 42 | CES33 = 53 | CES58 = 66 | CES83 = 83 |
| CES09 = 29 | CES34 = 70 | CES59 = 84 | CES84 = 92 |
| CES10 = 78 | CES35 = 85 | CES60 = 90 | CES85 = 81 |
| CES11 = 61 | CES36 = 78 | CES61 = 84 | CES86 = 56 |
| CES12 = 68 | CES37 = 80 | CES62 = 70 | CES87 = 78 |
| CES13 = 45 | CES38 = 53 | CES63 = 68 | CES88 = 72 |
| CES14 = 75 | CES39 = 90 | CES64 = 69 | CES89 = 62 |
| CES15 = 72 | CES40 = 84 | CES65 = 67 | CES90 = 67 |
| CES16 = 49 | CES41 = 75 | CES66 = 64 | CES91 = 90 |
| CES17 = 51 | CES42 = 79 | CES67 = 63 | CES92 = 67 |
| CES18 = 57 | CES43 = 64 | CES68 = 69 | CES93 = 79 |
| CES19 = 74 | CES44 = 98 | CES69 = 80 | CES94 = 52 |
| CES20 = 68 | CES45 = 73 | CES70 = 63 | CES95 = 76 |
| CES21 = 89 | CES46 = 67 | CES71 = 63 | CES96 = 78 |
| CES22 = 81 | CES47 = 60 | CES72 = 87 | CES97 = 77 |
| CES23 = 92 | CES48 = 48 | CES73 = 56 | CES98 = 71 |
| CES24 = 92 | CES49 = 64 | CES74 = 87 | CES99 = 65 |
| CES25 = 74 | CES50 = 74 | CES75 = 66 |            |



REPORT NUMBER: SP1-1908-441-10-R4

**TM-30-18**

**Color Rendition by Hue-Angle Bin**



REPORT NUMBER: SP1-1908-441-10-R4

**TM-30-18**

**Measure Comparisons**



(END OF REPORT)