

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: McGRAW-EDISON

Report Number: P316117

Luminaire Tested: **GLEON-SA3B-730-U-5WQ**

Issue Date: 3/3/2020

**Test Information**

Test Method: LM-79-08  
Report Number: P316117  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-1903-205-2)  
Test Lab: INNOVATION CENTER  
Issue Date: 3/3/2020  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: McGRAW-EDISON  
Catalog Number: GLEON-SA3B-730-U-5WQ  
Description: GALLEON AREA AND ROADWAY LUMINAIRE  
(3) 70 CRI, 3000K, 800mA LIGHTSQUARES WITH 16 LEDS EACH AND TYPE V WIDE OPTICS  
Light Source: -  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 16736 lumens  
Efficiency: N/A  
Efficacy: 135.0 lumens/watt  
Luminous Opening: Rectangular (W 1' x L: 1' x H: 0')  
IES Classification: Type V - Short  
BUG Rating: B4 - U0 - G2


Input Watts (W): 124  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



REPORT NUMBER: P316117  
 CATALOG NUMBER: GLEON-SA3B-730-U-5WQ

## Iso-Footcandle Lines of Horizontal Illumination


✕ Max cd  
 - - - 1/2 Max cd

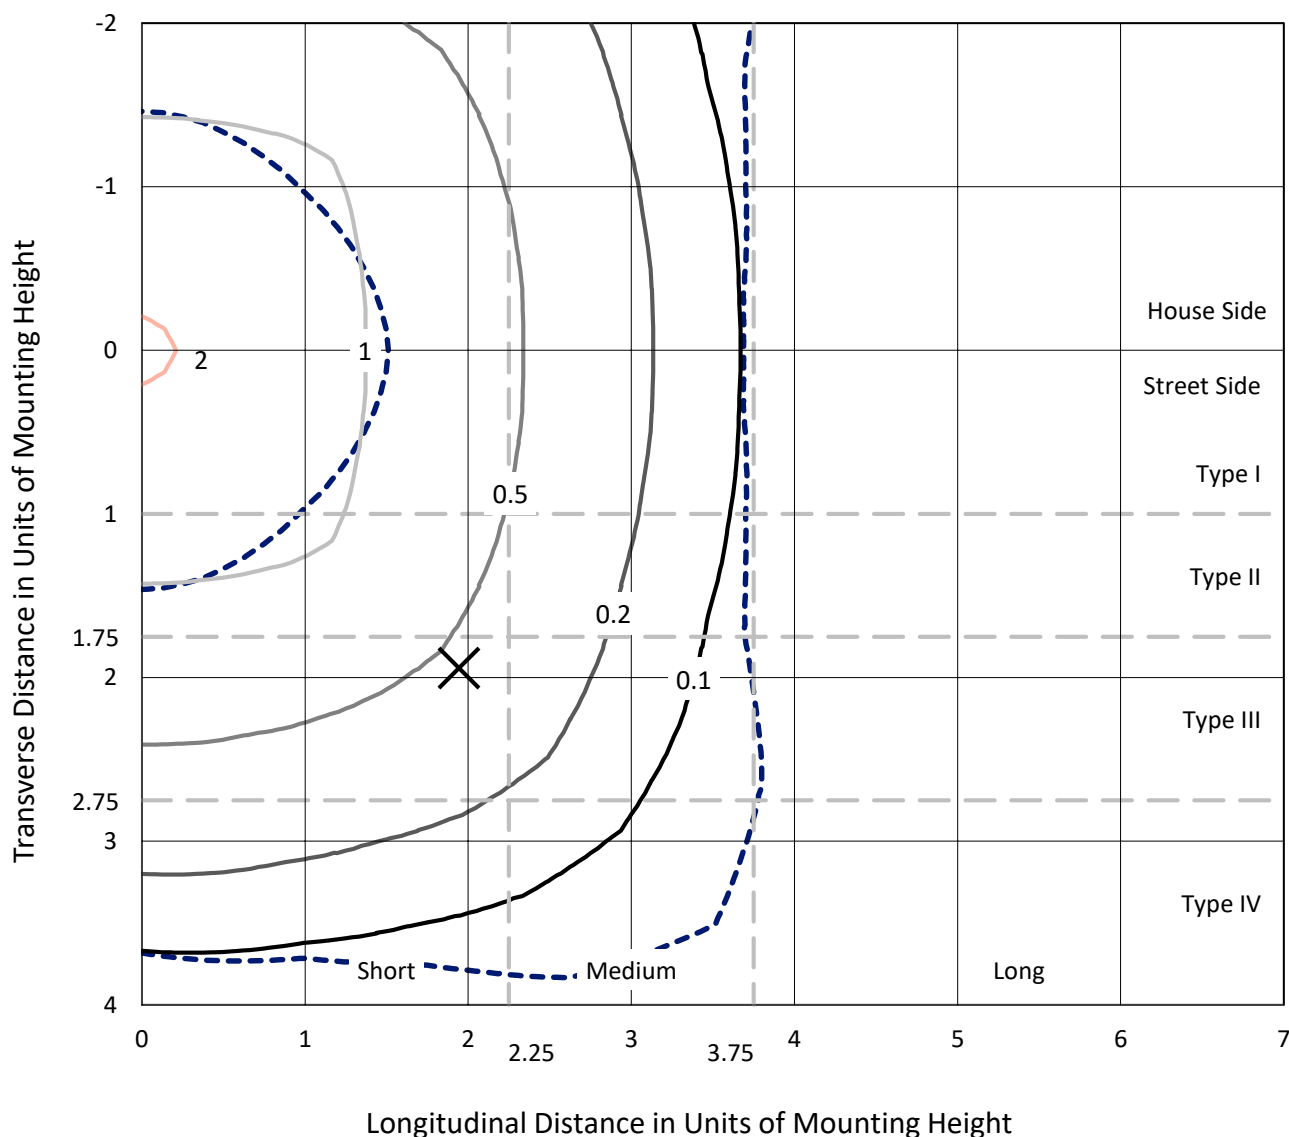

Based on 25 foot mounting height. Maximum calculated value = 2.2 fc  
 Type V - Short - N/A

REPORT NUMBER: P316117  
CATALOG NUMBER: GLEON-SA3B-730-U-5WQ

## Luminous Intensity Polar Plot

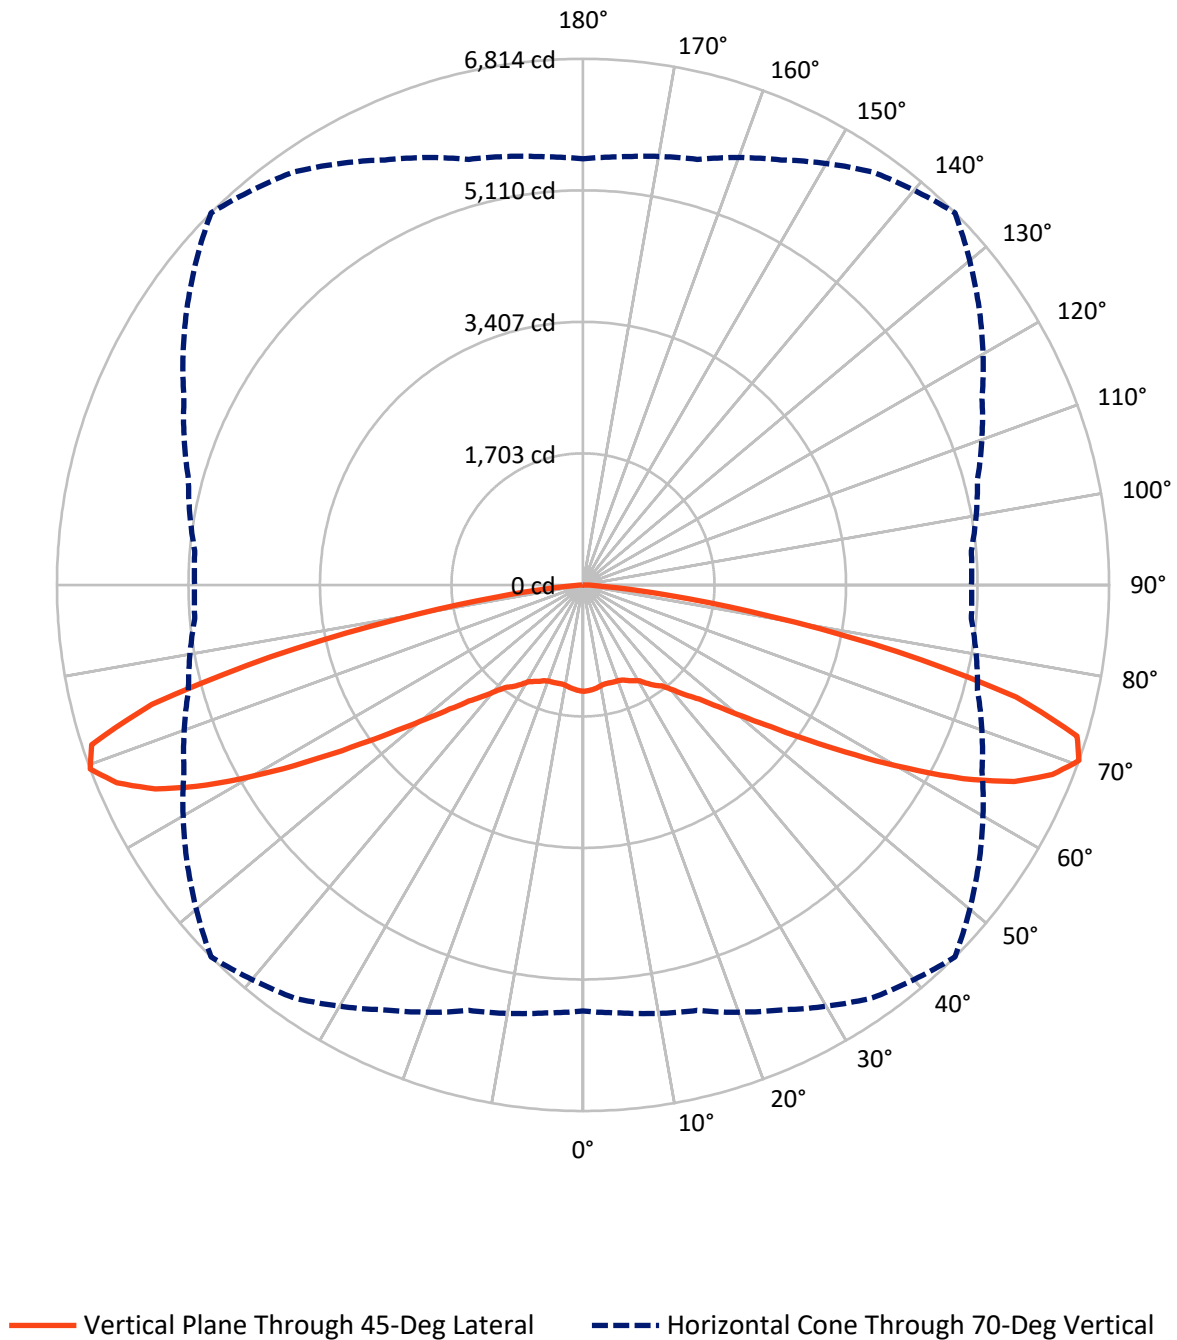

REPORT NUMBER: P316117

CATALOG NUMBER: GLEON-SA3B-730-U-5WQ

**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total   |
|--------------------|-----------|----------|--------|---------|
| <b>House Side</b>  | Lumens    | 8368.0   | 0.0    | 8368.0  |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Street Side</b> | Lumens    | 8368.0   | 0.0    | 8368.0  |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Total</b>       | Lumens    | 16736.0  | 0.0    | 16736.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0   |

**ZONAL LUMENS:**

| Zone      | Lumens  | % Fixture |
|-----------|---------|-----------|
| 0°-10°    | 128.6   | 0.8       |
| 10°-20°   | 375.5   | 2.2       |
| 20°-30°   | 640.2   | 3.8       |
| 30°-40°   | 1000.4  | 6.0       |
| 40°-50°   | 1695.4  | 10.1      |
| 50°-60°   | 3091.7  | 18.5      |
| 60°-70°   | 5322.7  | 31.8      |
| 70°-80°   | 4172.1  | 24.9      |
| 80°-90°   | 309.3   | 1.8       |
| 90°-100°  | 0.0     | 0.0       |
| 100°-110° | 0.0     | 0.0       |
| 110°-120° | 0.0     | 0.0       |
| 120°-130° | 0.0     | 0.0       |
| 130°-140° | 0.0     | 0.0       |
| 140°-150° | 0.0     | 0.0       |
| 150°-160° | 0.0     | 0.0       |
| 160°-170° | 0.0     | 0.0       |
| 170°-180° | 0.0     | 0.0       |
| 0°-90°    | 16736.0 | 100.0     |
| 0°-180°   | 16736.0 | 100.0     |

**Coefficient of Utilization**



REPORT NUMBER: P316117


CATALOG NUMBER: GLEON-SA3B-730-U-5WQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 572.2  | 3.4       |                         |      |         |
| FM   | (30°-60°)   | 2893.8 | 17.3      |                         |      |         |
| FH   | (60°-80°)   | 4747.4 | 28.4      |                         |      | G2/5000 |
| FVH  | (80°-90°)   | 154.7  | 0.9       |                         |      | G2/225  |
| BL   | (0°-30°)    | 572.2  | 3.4       | B2/1000                 |      |         |
| BM   | (30°-60°)   | 2893.8 | 17.3      | B3/5000                 |      |         |
| BH   | (60°-80°)   | 4747.4 | 28.4      | B4/5000                 |      | G2/5000 |
| BVH  | (80°-90°)   | 154.7  | 0.9       |                         |      | G2/225  |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B4-U0-G2**

Type V Short

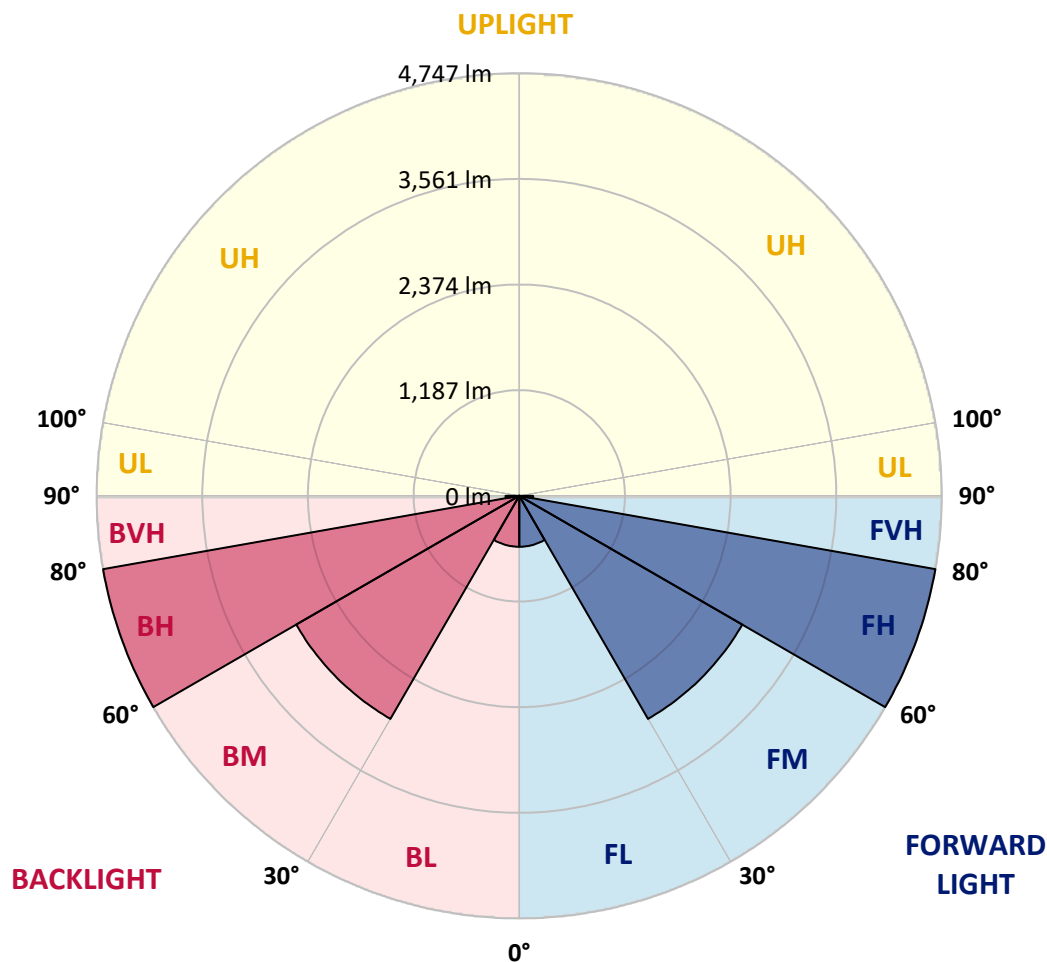



REPORT NUMBER: P316117

CATALOG NUMBER: GLEON-SA3B-730-U-5WQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 5°     | 15°    | 25°    | 35°    | 45°    | 55°    | 65°    | 75°    | 85°    | 90°    |
|-------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| 0°    | 1377.4 | 1377.4 | 1377.4 | 1377.4 | 1377.4 | 1377.4 | 1377.4 | 1377.4 | 1377.4 | 1377.4 | 1377.4 |
| 2.5°  | 1371.3 | 1372.9 | 1371.3 | 1372.4 | 1369.6 | 1370.7 | 1370.7 | 1370.7 | 1370.2 | 1370.7 | 1369.6 |
| 5°    | 1359.1 | 1360.2 | 1358.0 | 1359.1 | 1357.4 | 1359.1 | 1359.7 | 1359.1 | 1358.0 | 1358.6 | 1356.3 |
| 7.5°  | 1340.8 | 1341.9 | 1340.3 | 1341.9 | 1339.7 | 1342.5 | 1341.9 | 1340.3 | 1338.6 | 1338.6 | 1336.4 |
| 10°   | 1330.9 | 1331.4 | 1327.0 | 1325.3 | 1320.4 | 1321.5 | 1323.1 | 1324.8 | 1326.4 | 1329.8 | 1329.2 |
| 12.5° | 1331.4 | 1331.4 | 1324.8 | 1317.6 | 1310.4 | 1312.0 | 1314.8 | 1320.9 | 1327.6 | 1333.6 | 1334.2 |
| 15°   | 1337.0 | 1336.4 | 1326.4 | 1314.8 | 1309.8 | 1314.8 | 1316.5 | 1320.4 | 1330.9 | 1341.4 | 1341.9 |
| 17.5° | 1340.8 | 1340.8 | 1325.3 | 1312.0 | 1311.5 | 1319.2 | 1318.7 | 1320.4 | 1332.0 | 1347.5 | 1348.0 |
| 20°   | 1348.0 | 1348.0 | 1328.1 | 1313.7 | 1313.7 | 1322.0 | 1322.6 | 1325.3 | 1337.0 | 1354.1 | 1356.9 |
| 22.5° | 1364.1 | 1364.6 | 1343.6 | 1332.0 | 1333.1 | 1338.1 | 1339.7 | 1344.2 | 1354.7 | 1373.5 | 1376.8 |
| 25°   | 1386.8 | 1387.9 | 1366.3 | 1359.7 | 1363.5 | 1372.9 | 1371.8 | 1375.2 | 1386.8 | 1405.1 | 1408.4 |
| 27.5° | 1418.3 | 1415.6 | 1395.6 | 1392.9 | 1396.8 | 1403.4 | 1402.8 | 1403.4 | 1412.8 | 1429.4 | 1433.3 |
| 30°   | 1459.3 | 1458.2 | 1443.8 | 1445.5 | 1443.8 | 1441.6 | 1442.1 | 1446.6 | 1451.6 | 1464.8 | 1468.7 |
| 32.5° | 1499.2 | 1500.3 | 1491.4 | 1499.7 | 1511.9 | 1520.2 | 1507.5 | 1495.3 | 1489.8 | 1497.0 | 1500.3 |
| 35°   | 1571.1 | 1573.9 | 1560.1 | 1554.5 | 1571.1 | 1595.5 | 1559.5 | 1539.6 | 1550.7 | 1560.1 | 1562.8 |
| 37.5° | 1693.5 | 1695.1 | 1671.9 | 1649.7 | 1637.6 | 1660.8 | 1624.8 | 1626.5 | 1665.3 | 1683.0 | 1682.4 |
| 40°   | 1833.0 | 1833.5 | 1818.0 | 1798.7 | 1777.6 | 1783.2 | 1768.8 | 1773.2 | 1798.7 | 1814.7 | 1819.2 |
| 42.5° | 1999.1 | 1997.4 | 1973.1 | 1945.4 | 1939.3 | 1944.8 | 1920.5 | 1917.1 | 1946.5 | 1975.3 | 1975.8 |
| 45°   | 2214.4 | 2210.6 | 2179.0 | 2148.6 | 2119.2 | 2107.0 | 2100.9 | 2117.0 | 2157.4 | 2184.0 | 2184.5 |
| 47.5° | 2446.4 | 2435.9 | 2419.3 | 2394.9 | 2369.4 | 2357.3 | 2347.3 | 2355.0 | 2384.4 | 2394.9 | 2396.0 |
| 50°   | 2685.0 | 2687.2 | 2690.5 | 2681.1 | 2671.7 | 2667.8 | 2641.8 | 2626.9 | 2635.7 | 2616.3 | 2613.6 |
| 52.5° | 2967.9 | 2972.3 | 3004.4 | 3031.6 | 3047.6 | 3055.9 | 3006.6 | 2955.2 | 2926.4 | 2888.7 | 2877.7 |
| 55°   | 3301.7 | 3308.9 | 3356.0 | 3431.3 | 3508.8 | 3549.7 | 3460.6 | 3364.3 | 3275.1 | 3204.8 | 3182.1 |
| 57.5° | 3673.7 | 3686.5 | 3751.2 | 3895.7 | 4054.6 | 4151.5 | 4000.9 | 3826.0 | 3653.8 | 3552.5 | 3534.8 |
| 60°   | 4110.0 | 4122.2 | 4211.8 | 4418.9 | 4676.3 | 4821.9 | 4593.8 | 4307.6 | 4093.4 | 3996.5 | 3963.8 |
| 62.5° | 4629.3 | 4630.4 | 4740.5 | 4982.5 | 5322.4 | 5525.0 | 5216.1 | 4833.5 | 4612.7 | 4495.8 | 4464.3 |
| 65°   | 5187.9 | 5190.6 | 5304.7 | 5566.0 | 5917.5 | 6137.8 | 5789.1 | 5390.5 | 5120.3 | 4948.1 | 4923.8 |
| 67.5° | 5582.6 | 5594.2 | 5714.3 | 6028.8 | 6357.6 | 6556.4 | 6195.4 | 5744.8 | 5432.5 | 5227.2 | 5206.7 |
| 70°   | 5519.5 | 5564.9 | 5706.0 | 6073.1 | 6530.4 | 6813.8 | 6261.3 | 5702.7 | 5290.8 | 5048.3 | 5031.2 |
| 72.5° | 4813.6 | 4900.5 | 5088.8 | 5570.4 | 6301.7 | 6692.0 | 5902.0 | 5107.6 | 4641.4 | 4434.9 | 4403.9 |
| 75°   | 3277.9 | 3419.1 | 3703.1 | 4397.9 | 5383.8 | 5794.1 | 4968.6 | 4072.3 | 3633.9 | 3348.2 | 3327.2 |
| 77.5° | 1461.5 | 1493.6 | 1853.5 | 2653.4 | 3715.3 | 4160.9 | 3610.1 | 2664.0 | 1999.6 | 1594.9 | 1509.7 |
| 80°   | 407.5  | 412.4  | 550.3  | 988.2  | 1859.6 | 2444.7 | 1996.3 | 1038.0 | 583.5  | 411.3  | 387.5  |
| 82.5° | 129.5  | 140.6  | 171.6  | 256.3  | 625.0  | 1115.5 | 641.6  | 276.8  | 197.1  | 157.2  | 141.7  |
| 85°   | 63.1   | 62.6   | 86.9   | 104.1  | 159.4  | 246.9  | 170.0  | 128.4  | 112.4  | 74.7   | 67.5   |
| 87.5° | 26.6   | 27.1   | 40.4   | 36.5   | 46.5   | 39.9   | 54.8   | 57.6   | 60.3   | 33.2   | 28.8   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2008: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGRAW-EDISON

Report Number: SP1-1908-441-2-R4

Test Date: 10/03/2019

Luminaire Tested: SA1C-730-U-5WQ

Data in this report applies to families of products SA1C-730-U-5WQ .

### Test Information

Test Method: LM-79-2008  
 Report Number: SP1-1908-441-2-R4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/28/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: MCGRAW-EDISON  
 Catalog Number: **SA1C-730-U-5WQ**  
 Description: MCGRAW EDISON ROADWAY AND AREA LUMINAIRE

\*\*\*THIS IS A REVISION OF SP1-1908-441-2-R3. TO UPDATE THE CATALOG INFORMATION.\*\*\*TESTED IN SITU. (1) 70 CRI, 3000K, 1050MA LIGHTSQUARE WITH 16 LEDS AND TYPE V WIDE OPTICS.

### Spectral Parameters

|                           |        |           |      |      |       |
|---------------------------|--------|-----------|------|------|-------|
| CCT (K):                  | 2993   | CRI (Ra): | 71.8 |      |       |
| CIE u':                   | 0.2508 | R1:       | 67.5 | R9:  | -38.3 |
| CIE v':                   | 0.5215 | R2:       | 82.9 | R10: | 62.5  |
| Duv:                      | 0.0000 | R3:       | 94.7 | R11: | 63.7  |
| CIE x:                    | 0.4374 | R4:       | 67.7 | R12: | 57.8  |
| CIE y:                    | 0.4043 | R5:       | 67.9 | R13: | 70.4  |
| CIE z:                    | 0.1583 | R6:       | 77.6 | R14: | 97.3  |
| Peak Wavelength (nm):     | 593    | R7:       | 76.0 |      |       |
| Dominant Wavelength (nm): | 582    | R8:       | 40.5 |      |       |
| Purity:                   | 53     |           |      |      |       |
| Rf:                       | 75.7   |           |      |      |       |
| Rg:                       | 93.9   |           |      |      |       |



### Test Conditions

Stabilization Time: 53M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 25.0./44%  
 Sphere Temperature (°C): 25.7

REPORT NUMBER: SP1-1908-441-2-R4

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/28/2019        | 12/28/2019           |
| Power Meter                    | IN0071                | 12/5/2018        | 12/5/2019            |
| AC Power Source                | IN0063                | 12/5/2018        | 12/5/2019            |
| DC Power Source                | IN0208                | 12/5/2018        | 12/5/2019            |
| Sphere Thermometer             | IN0085                | 12/5/2018        | 12/5/2019            |
| Room Thermometer               | IN0046                | 12/5/2018        | 12/5/2019            |

REPORT NUMBER: SP1-1908-441-2-R4

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-1908-441-2-R4

**Photopic Flux vs. Wavelength**



#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2397             | NR               | 490       | 24908            | NR               | 620       | 118784           | NR               | 750       | 5037             | NR               | 880       | 2677             | NR               |
| 365       | 2084             | NR               | 495       | 30998            | NR               | 625       | 108951           | NR               | 755       | 4413             | NR               | 885       | 2940             | NR               |
| 370       | 2143             | NR               | 500       | 37103            | NR               | 630       | 99573            | NR               | 760       | 4189             | NR               | 890       | 3116             | NR               |
| 375       | 2413             | NR               | 505       | 42987            | NR               | 635       | 90444            | NR               | 765       | 3677             | NR               | 895       | 3345             | NR               |
| 380       | 2172             | NR               | 510       | 48702            | NR               | 640       | 80749            | NR               | 770       | 3366             | NR               | 900       | 2312             | NR               |
| 385       | 1997             | NR               | 515       | 53741            | NR               | 645       | 71664            | NR               | 775       | 3211             | NR               | 905       | 2829             | NR               |
| 390       | 1830             | NR               | 520       | 57283            | NR               | 650       | 63936            | NR               | 780       | 2682             | NR               | 910       | 2783             | NR               |
| 395       | 1861             | NR               | 525       | 61876            | NR               | 655       | 56611            | NR               | 785       | 2804             | NR               | 915       | 2662             | NR               |
| 400       | 1717             | NR               | 530       | 65398            | NR               | 660       | 49763            | NR               | 790       | 2581             | NR               | 920       | 3047             | NR               |
| 405       | 1761             | NR               | 535       | 69597            | NR               | 665       | 42891            | NR               | 795       | 2711             | NR               | 925       | 2256             | NR               |
| 410       | 2680             | NR               | 540       | 74214            | NR               | 670       | 36939            | NR               | 800       | 2609             | NR               | 930       | 2976             | NR               |
| 415       | 4374             | NR               | 545       | 79911            | NR               | 675       | 31946            | NR               | 805       | 2581             | NR               | 935       | 3503             | NR               |
| 420       | 8071             | NR               | 550       | 86153            | NR               | 680       | 27385            | NR               | 810       | 2404             | NR               | 940       | 4226             | NR               |
| 425       | 15169            | NR               | 555       | 93952            | NR               | 685       | 23504            | NR               | 815       | 2556             | NR               | 945       | 2930             | NR               |
| 430       | 26038            | NR               | 560       | 102904           | NR               | 690       | 20210            | NR               | 820       | 2742             | NR               | 950       | 2115             | NR               |
| 435       | 41316            | NR               | 565       | 112009           | NR               | 695       | 17459            | NR               | 825       | 2014             | NR               | 955       | 2634             | NR               |
| 440       | 59674            | NR               | 570       | 121662           | NR               | 700       | 15207            | NR               | 830       | 2488             | NR               | 960       | 4200             | NR               |
| 445       | 72751            | NR               | 575       | 130476           | NR               | 705       | 13322            | NR               | 835       | 2625             | NR               | 965       | 1982             | NR               |
| 450       | 65091            | NR               | 580       | 137926           | NR               | 710       | 11676            | NR               | 840       | 2754             | NR               | 970       | 3613             | NR               |
| 455       | 44894            | NR               | 585       | 143406           | NR               | 715       | 10626            | NR               | 845       | 2708             | NR               | 975       | 4034             | NR               |
| 460       | 32712            | NR               | 590       | 147039           | NR               | 720       | 9416             | NR               | 850       | 2608             | NR               | 980       | 3922             | NR               |
| 465       | 25296            | NR               | 595       | 147365           | NR               | 725       | 8333             | NR               | 855       | 2605             | NR               | 985       | 1909             | NR               |
| 470       | 19318            | NR               | 600       | 145800           | NR               | 730       | 7134             | NR               | 860       | 1765             | NR               | 990       | 3617             | NR               |
| 475       | 17265            | NR               | 605       | 141363           | NR               | 735       | 6437             | NR               | 865       | 2581             | NR               | 995       | 4767             | NR               |
| 480       | 18260            | NR               | 610       | 134199           | NR               | 740       | 5834             | NR               | 870       | 3016             | NR               | 1000      | 2528             | NR               |
| 485       | 20845            | NR               | 615       | 127683           | NR               | 745       | 5500             | NR               | 875       | 3952             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-2-R4

Scotopic Flux vs. Wavelength



Scotopic Lumens: 8494.8

S/P: 1.23

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2397             | NR               | 490       | 24908            | NR               | 620       | 118784           | NR               | 750       | 5037             | NR               | 880       | 2677             | NR               |
| 365       | 2084             | NR               | 495       | 30998            | NR               | 625       | 108951           | NR               | 755       | 4413             | NR               | 885       | 2940             | NR               |
| 370       | 2143             | NR               | 500       | 37103            | NR               | 630       | 99573            | NR               | 760       | 4189             | NR               | 890       | 3116             | NR               |
| 375       | 2413             | NR               | 505       | 42987            | NR               | 635       | 90444            | NR               | 765       | 3677             | NR               | 895       | 3345             | NR               |
| 380       | 2172             | NR               | 510       | 48702            | NR               | 640       | 80749            | NR               | 770       | 3366             | NR               | 900       | 2312             | NR               |
| 385       | 1997             | NR               | 515       | 53741            | NR               | 645       | 71664            | NR               | 775       | 3211             | NR               | 905       | 2829             | NR               |
| 390       | 1830             | NR               | 520       | 57283            | NR               | 650       | 63936            | NR               | 780       | 2682             | NR               | 910       | 2783             | NR               |
| 395       | 1861             | NR               | 525       | 61876            | NR               | 655       | 56611            | NR               | 785       | 2804             | NR               | 915       | 2662             | NR               |
| 400       | 1717             | NR               | 530       | 65398            | NR               | 660       | 49763            | NR               | 790       | 2581             | NR               | 920       | 3047             | NR               |
| 405       | 1761             | NR               | 535       | 69597            | NR               | 665       | 42891            | NR               | 795       | 2711             | NR               | 925       | 2256             | NR               |
| 410       | 2680             | NR               | 540       | 74214            | NR               | 670       | 36939            | NR               | 800       | 2609             | NR               | 930       | 2976             | NR               |
| 415       | 4374             | NR               | 545       | 79911            | NR               | 675       | 31946            | NR               | 805       | 2581             | NR               | 935       | 3503             | NR               |
| 420       | 8071             | NR               | 550       | 86153            | NR               | 680       | 27385            | NR               | 810       | 2404             | NR               | 940       | 4226             | NR               |
| 425       | 15169            | NR               | 555       | 93952            | NR               | 685       | 23504            | NR               | 815       | 2556             | NR               | 945       | 2930             | NR               |
| 430       | 26038            | NR               | 560       | 102904           | NR               | 690       | 20210            | NR               | 820       | 2742             | NR               | 950       | 2115             | NR               |
| 435       | 41316            | NR               | 565       | 112009           | NR               | 695       | 17459            | NR               | 825       | 2014             | NR               | 955       | 2634             | NR               |
| 440       | 59674            | NR               | 570       | 121662           | NR               | 700       | 15207            | NR               | 830       | 2488             | NR               | 960       | 4200             | NR               |
| 445       | 72751            | NR               | 575       | 130476           | NR               | 705       | 13322            | NR               | 835       | 2625             | NR               | 965       | 1982             | NR               |
| 450       | 65091            | NR               | 580       | 137926           | NR               | 710       | 11676            | NR               | 840       | 2754             | NR               | 970       | 3613             | NR               |
| 455       | 44894            | NR               | 585       | 143406           | NR               | 715       | 10626            | NR               | 845       | 2708             | NR               | 975       | 4034             | NR               |
| 460       | 32712            | NR               | 590       | 147039           | NR               | 720       | 9416             | NR               | 850       | 2608             | NR               | 980       | 3922             | NR               |
| 465       | 25296            | NR               | 595       | 147365           | NR               | 725       | 8333             | NR               | 855       | 2605             | NR               | 985       | 1909             | NR               |
| 470       | 19318            | NR               | 600       | 145800           | NR               | 730       | 7134             | NR               | 860       | 1765             | NR               | 990       | 3617             | NR               |
| 475       | 17265            | NR               | 605       | 141363           | NR               | 735       | 6437             | NR               | 865       | 2581             | NR               | 995       | 4767             | NR               |
| 480       | 18260            | NR               | 610       | 134199           | NR               | 740       | 5834             | NR               | 870       | 3016             | NR               | 1000      | 2528             | NR               |
| 485       | 20845            | NR               | 615       | 127683           | NR               | 745       | 5500             | NR               | 875       | 3952             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-2-R4

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 3101.5 M/P: 0.45**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2397             | NR               | 490       | 24908            | NR               | 620       | 118784           | NR               | 750       | 5037             | NR               | 880       | 2677             | NR               |
| 365       | 2084             | NR               | 495       | 30998            | NR               | 625       | 108951           | NR               | 755       | 4413             | NR               | 885       | 2940             | NR               |
| 370       | 2143             | NR               | 500       | 37103            | NR               | 630       | 99573            | NR               | 760       | 4189             | NR               | 890       | 3116             | NR               |
| 375       | 2413             | NR               | 505       | 42987            | NR               | 635       | 90444            | NR               | 765       | 3677             | NR               | 895       | 3345             | NR               |
| 380       | 2172             | NR               | 510       | 48702            | NR               | 640       | 80749            | NR               | 770       | 3366             | NR               | 900       | 2312             | NR               |
| 385       | 1997             | NR               | 515       | 53741            | NR               | 645       | 71664            | NR               | 775       | 3211             | NR               | 905       | 2829             | NR               |
| 390       | 1830             | NR               | 520       | 57283            | NR               | 650       | 63936            | NR               | 780       | 2682             | NR               | 910       | 2783             | NR               |
| 395       | 1861             | NR               | 525       | 61876            | NR               | 655       | 56611            | NR               | 785       | 2804             | NR               | 915       | 2662             | NR               |
| 400       | 1717             | NR               | 530       | 65398            | NR               | 660       | 49763            | NR               | 790       | 2581             | NR               | 920       | 3047             | NR               |
| 405       | 1761             | NR               | 535       | 69597            | NR               | 665       | 42891            | NR               | 795       | 2711             | NR               | 925       | 2256             | NR               |
| 410       | 2680             | NR               | 540       | 74214            | NR               | 670       | 36939            | NR               | 800       | 2609             | NR               | 930       | 2976             | NR               |
| 415       | 4374             | NR               | 545       | 79911            | NR               | 675       | 31946            | NR               | 805       | 2581             | NR               | 935       | 3503             | NR               |
| 420       | 8071             | NR               | 550       | 86153            | NR               | 680       | 27385            | NR               | 810       | 2404             | NR               | 940       | 4226             | NR               |
| 425       | 15169            | NR               | 555       | 93952            | NR               | 685       | 23504            | NR               | 815       | 2556             | NR               | 945       | 2930             | NR               |
| 430       | 26038            | NR               | 560       | 102904           | NR               | 690       | 20210            | NR               | 820       | 2742             | NR               | 950       | 2115             | NR               |
| 435       | 41316            | NR               | 565       | 112009           | NR               | 695       | 17459            | NR               | 825       | 2014             | NR               | 955       | 2634             | NR               |
| 440       | 59674            | NR               | 570       | 121662           | NR               | 700       | 15207            | NR               | 830       | 2488             | NR               | 960       | 4200             | NR               |
| 445       | 72751            | NR               | 575       | 130476           | NR               | 705       | 13322            | NR               | 835       | 2625             | NR               | 965       | 1982             | NR               |
| 450       | 65091            | NR               | 580       | 137926           | NR               | 710       | 11676            | NR               | 840       | 2754             | NR               | 970       | 3613             | NR               |
| 455       | 44894            | NR               | 585       | 143406           | NR               | 715       | 10626            | NR               | 845       | 2708             | NR               | 975       | 4034             | NR               |
| 460       | 32712            | NR               | 590       | 147039           | NR               | 720       | 9416             | NR               | 850       | 2608             | NR               | 980       | 3922             | NR               |
| 465       | 25296            | NR               | 595       | 147365           | NR               | 725       | 8333             | NR               | 855       | 2605             | NR               | 985       | 1909             | NR               |
| 470       | 19318            | NR               | 600       | 145800           | NR               | 730       | 7134             | NR               | 860       | 1765             | NR               | 990       | 3617             | NR               |
| 475       | 17265            | NR               | 605       | 141363           | NR               | 735       | 6437             | NR               | 865       | 2581             | NR               | 995       | 4767             | NR               |
| 480       | 18260            | NR               | 610       | 134199           | NR               | 740       | 5834             | NR               | 870       | 3016             | NR               | 1000      | 2528             | NR               |
| 485       | 20845            | NR               | 615       | 127683           | NR               | 745       | 5500             | NR               | 875       | 3952             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-2-R4

**TM-30-18**

### Summary

$R_f = 75.7$   
 $R_g = 93.9$   
 CIE  $R_a = 71.8$   
 $R_g = -38.3$



### Color Vector Graphics



REPORT NUMBER: SP1-1908-441-2-R4

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 67 | CES51 = 87 | CES76 = 63 |
| CES02 = 63 | CES27 = 88 | CES52 = 86 | CES77 = 80 |
| CES03 = 31 | CES28 = 87 | CES53 = 78 | CES78 = 67 |
| CES04 = 71 | CES29 = 66 | CES54 = 84 | CES79 = 87 |
| CES05 = 49 | CES30 = 73 | CES55 = 84 | CES80 = 86 |
| CES06 = 51 | CES31 = 70 | CES56 = 75 | CES81 = 71 |
| CES07 = 41 | CES32 = 65 | CES57 = 74 | CES82 = 94 |
| CES08 = 40 | CES33 = 73 | CES58 = 76 | CES83 = 90 |
| CES09 = 29 | CES34 = 79 | CES59 = 85 | CES84 = 89 |
| CES10 = 76 | CES35 = 89 | CES60 = 93 | CES85 = 77 |
| CES11 = 59 | CES36 = 97 | CES61 = 84 | CES86 = 61 |
| CES12 = 65 | CES37 = 87 | CES62 = 91 | CES87 = 78 |
| CES13 = 43 | CES38 = 81 | CES63 = 77 | CES88 = 77 |
| CES14 = 74 | CES39 = 95 | CES64 = 72 | CES89 = 67 |
| CES15 = 71 | CES40 = 92 | CES65 = 68 | CES90 = 76 |
| CES16 = 47 | CES41 = 88 | CES66 = 69 | CES91 = 89 |
| CES17 = 50 | CES42 = 89 | CES67 = 67 | CES92 = 58 |
| CES18 = 56 | CES43 = 79 | CES68 = 72 | CES93 = 74 |
| CES19 = 73 | CES44 = 99 | CES69 = 81 | CES94 = 49 |
| CES20 = 66 | CES45 = 85 | CES70 = 66 | CES95 = 68 |
| CES21 = 87 | CES46 = 80 | CES71 = 67 | CES96 = 76 |
| CES22 = 79 | CES47 = 82 | CES72 = 88 | CES97 = 82 |
| CES23 = 92 | CES48 = 69 | CES73 = 59 | CES98 = 75 |
| CES24 = 91 | CES49 = 80 | CES74 = 95 | CES99 = 62 |
| CES25 = 73 | CES50 = 87 | CES75 = 69 |            |



REPORT NUMBER: SP1-1908-441-2-R4

**TM-30-18**


**Color Rendition by Hue-Angle Bin**



REPORT NUMBER: SP1-1908-441-2-R4

**TM-30-18**

**Measure Comparisons**

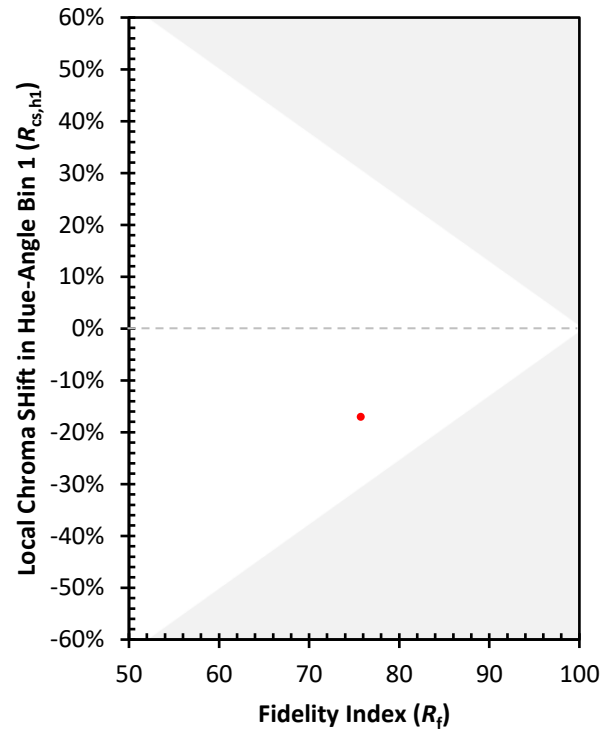

(END OF REPORT)