

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: McGRAW-EDISON

Report Number: P316769

Luminaire Tested: **GLEON-SA5C-730-U-5NQ**

Issue Date: 3/3/2020

**Test Information**

Test Method: LM-79-08  
Report Number: P316769  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-1903-205-5)  
Test Lab: INNOVATION CENTER  
Issue Date: 3/3/2020  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: McGRAW-EDISON  
Catalog Number: GLEON-SA5C-730-U-5NQ  
Description: GALLEON AREA AND ROADWAY LUMINAIRE  
(5) 70 CRI, 3000K, 1050mA LIGHTSQUARES WITH 16 LEDS EACH AND TYPE V  
NARROW OPTICS  
Light Source: -  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 33209 lumens  
Efficiency: N/A  
Efficacy: 119.0 lumens/watt  
Luminous Opening: Rectangular (W 1.5' x L: 1' x H: 0')  
IES Classification: Type V - Short  
BUG Rating: B5 - U0 - G2

Input Watts (W): 279  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT




REPORT NUMBER: P316769

CATALOG NUMBER: GLEON-SA5C-730-U-5NQ

## Iso-Footcandle Lines of Horizontal Illumination


✕ Max cd  
 - - - 1/2 Max cd

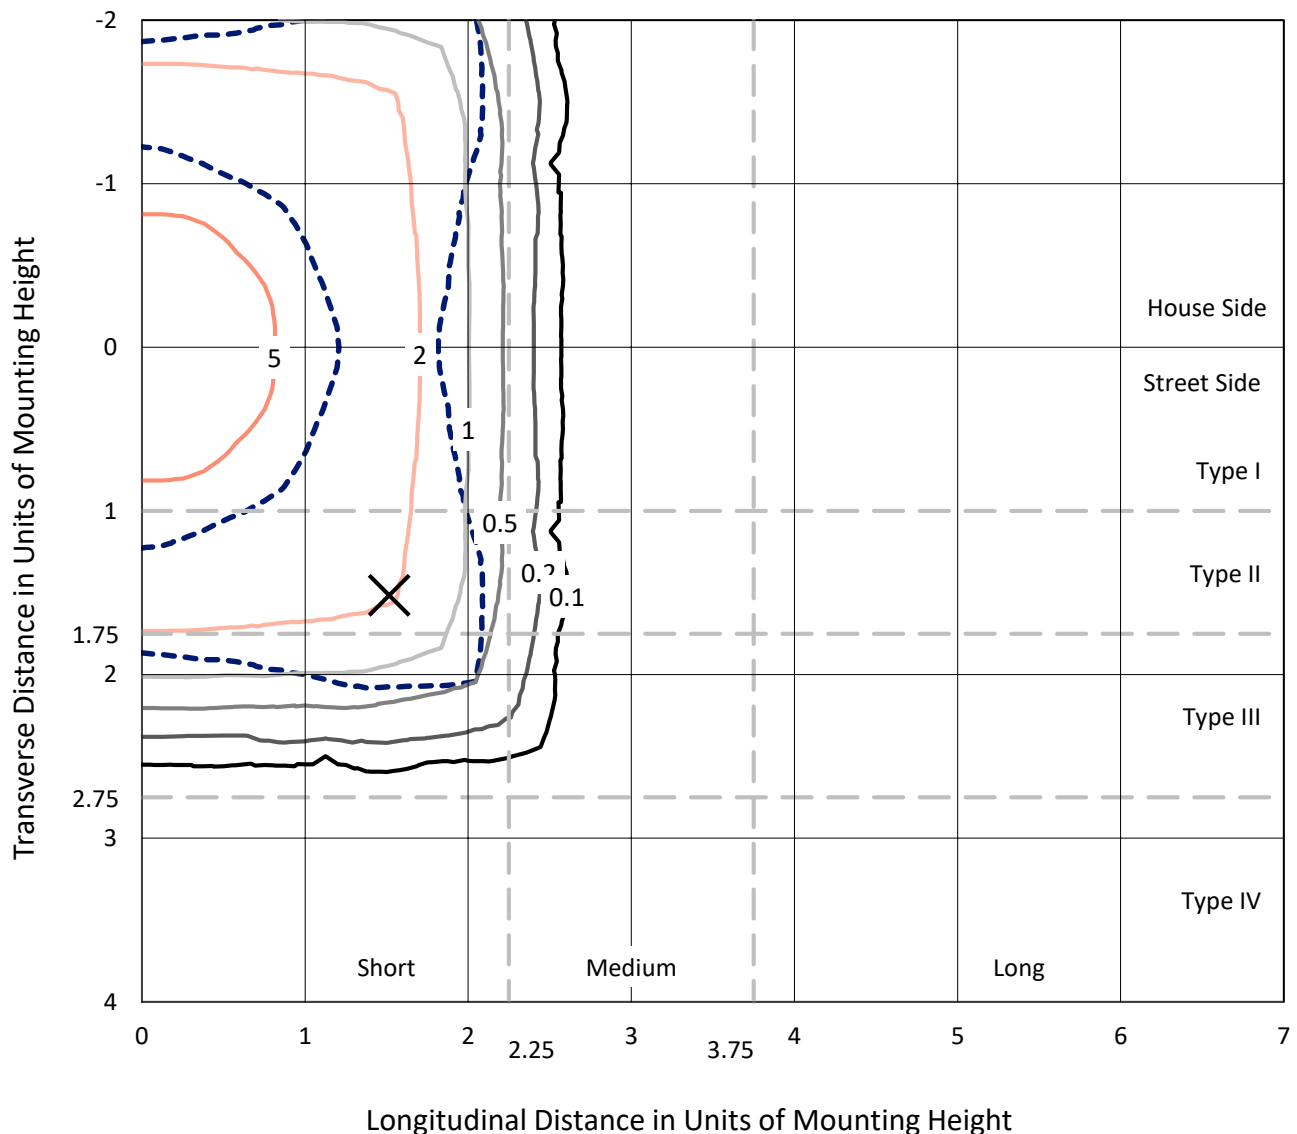

Based on 25 foot mounting height. Maximum calculated value = 6.5 fc  
 Type V - Short - N/A

REPORT NUMBER: P316769  
CATALOG NUMBER: GLEON-SA5C-730-U-5NQ

## Luminous Intensity Polar Plot

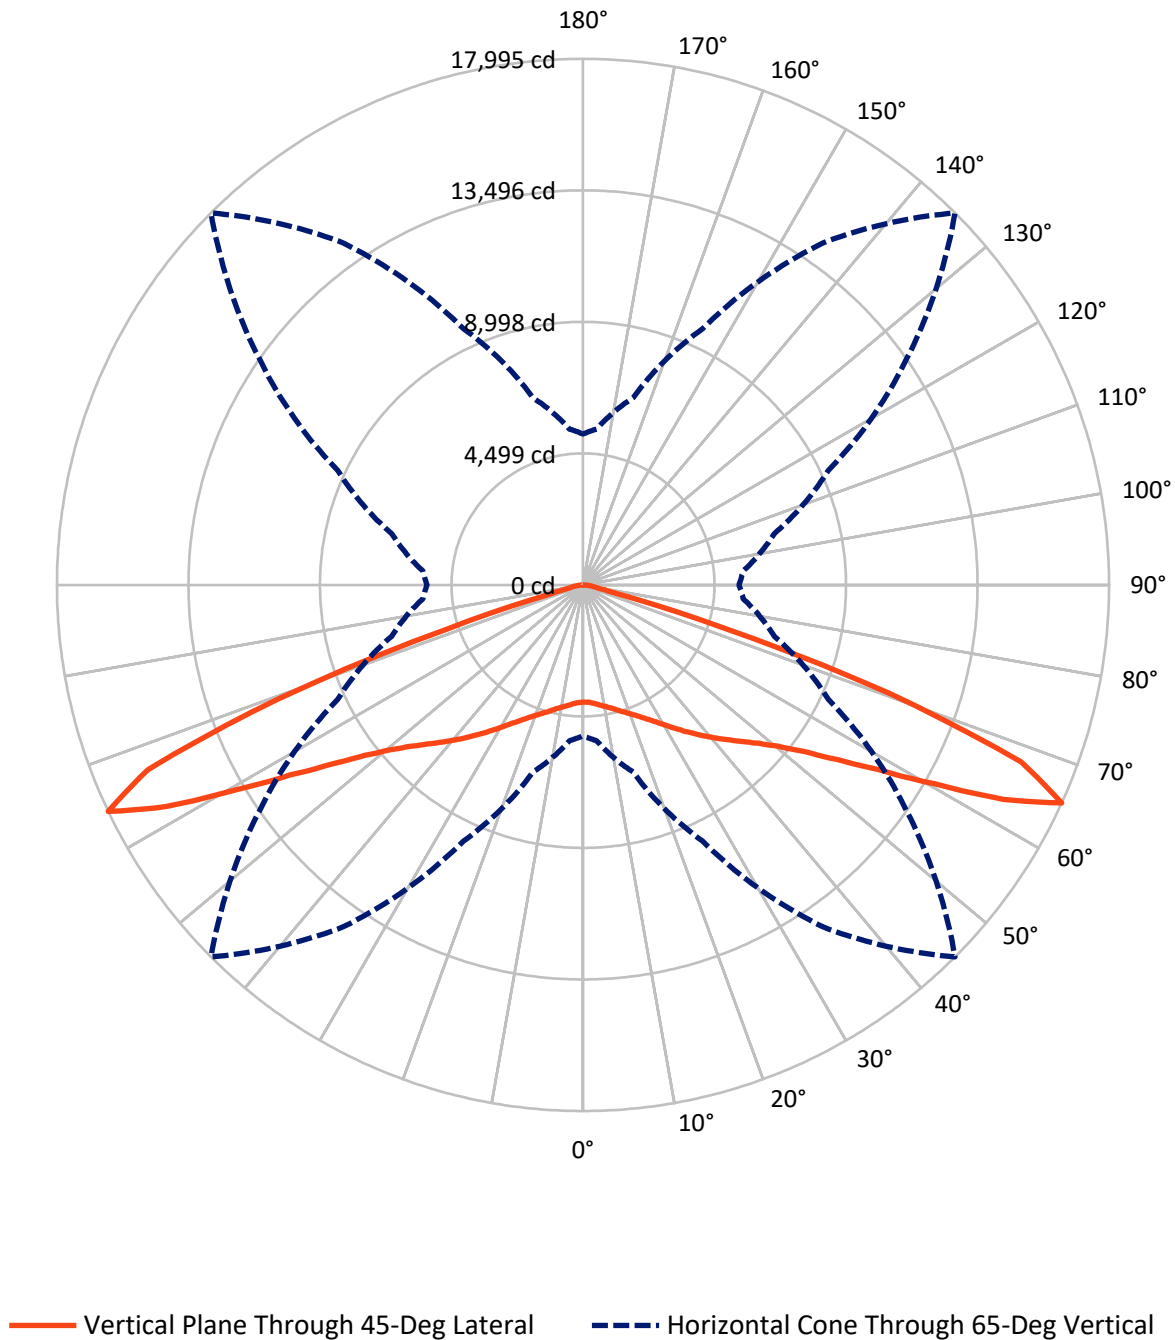

REPORT NUMBER: P316769

CATALOG NUMBER: GLEON-SA5C-730-U-5NQ


**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total   |
|--------------------|-----------|----------|--------|---------|
| <b>House Side</b>  | Lumens    | 16604.5  | 0.0    | 16604.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Street Side</b> | Lumens    | 16604.5  | 0.0    | 16604.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Total</b>       | Lumens    | 33209.0  | 0.0    | 33209.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0   |

**ZONAL LUMENS:**

| Zone      | Lumens  | % Fixture |
|-----------|---------|-----------|
| 0°-10°    | 393.5   | 1.2       |
| 10°-20°   | 1264.7  | 3.8       |
| 20°-30°   | 2372.9  | 7.1       |
| 30°-40°   | 3924.3  | 11.8      |
| 40°-50°   | 6078.2  | 18.3      |
| 50°-60°   | 9322.2  | 28.1      |
| 60°-70°   | 8698.7  | 26.2      |
| 70°-80°   | 1012.4  | 3.0       |
| 80°-90°   | 142.3   | 0.4       |
| 90°-100°  | 0.0     | 0.0       |
| 100°-110° | 0.0     | 0.0       |
| 110°-120° | 0.0     | 0.0       |
| 120°-130° | 0.0     | 0.0       |
| 130°-140° | 0.0     | 0.0       |
| 140°-150° | 0.0     | 0.0       |
| 150°-160° | 0.0     | 0.0       |
| 160°-170° | 0.0     | 0.0       |
| 170°-180° | 0.0     | 0.0       |
| 0°-90°    | 33209.0 | 100.0     |
| 0°-180°   | 33209.0 | 100.0     |

**Coefficient of Utilization**

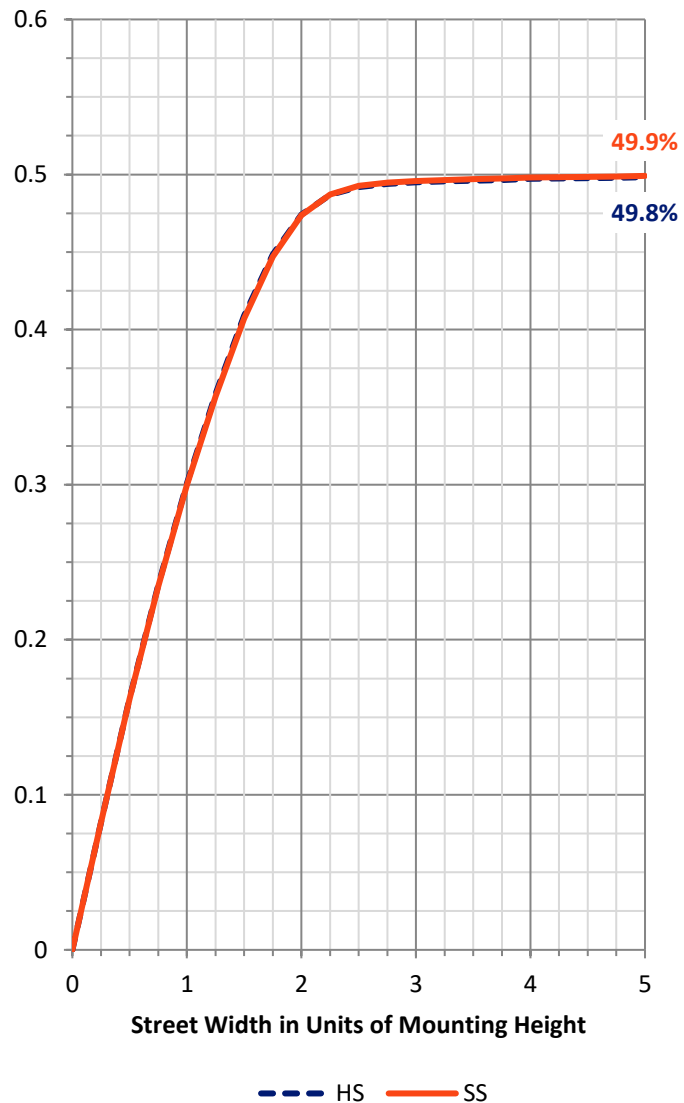

REPORT NUMBER: P316769


CATALOG NUMBER: GLEON-SA5C-730-U-5NQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 2015.5 | 6.1       |                         |      |         |
| FM   | (30°-60°)   | 9662.3 | 29.1      |                         |      |         |
| FH   | (60°-80°)   | 4855.5 | 14.6      |                         |      | G2/5000 |
| FVH  | (80°-90°)   | 71.1   | 0.2       |                         |      | G1/100  |
| BL   | (0°-30°)    | 2015.5 | 6.1       | B3/2500                 |      |         |
| BM   | (30°-60°)   | 9662.3 | 29.1      | B5                      |      |         |
| BH   | (60°-80°)   | 4855.5 | 14.6      | B4/5000                 |      | G2/5000 |
| BVH  | (80°-90°)   | 71.1   | 0.2       |                         |      | G1/100  |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B5-U0-G2**

Type V Short

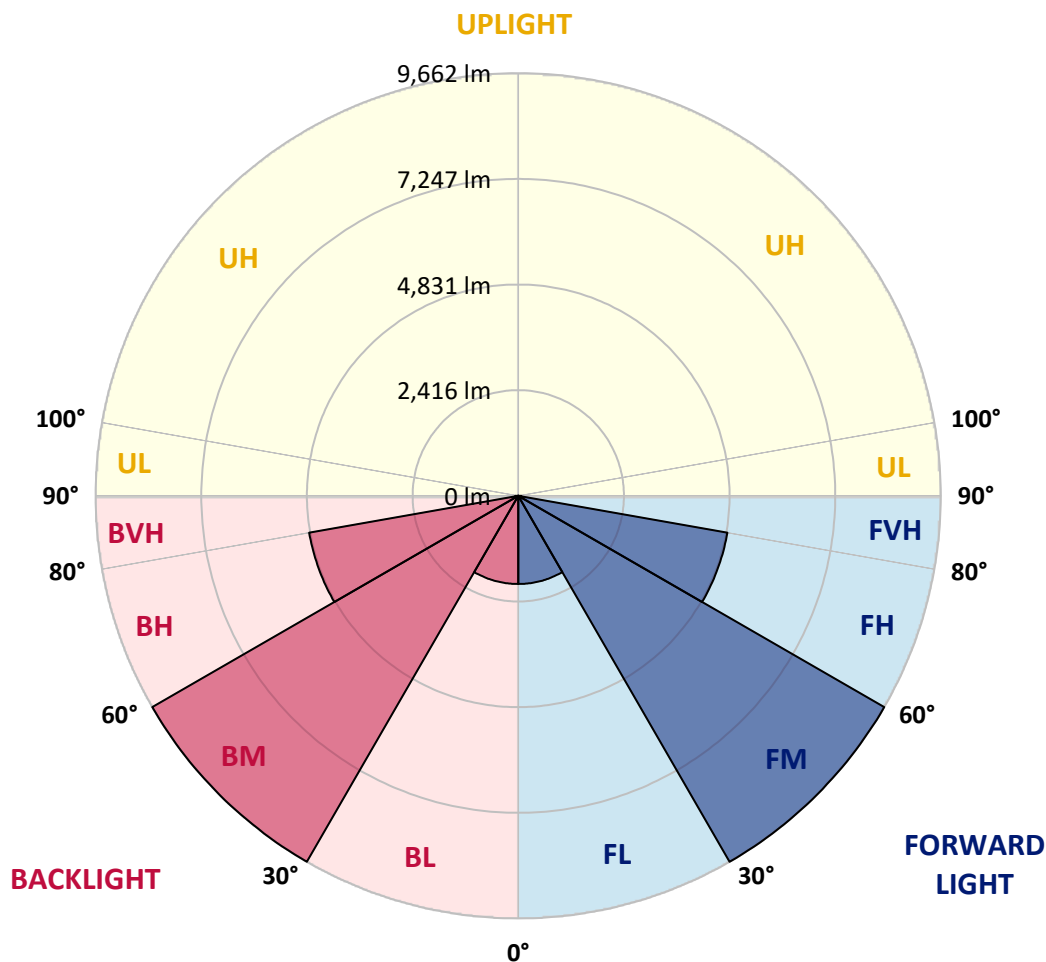



REPORT NUMBER: P316769

CATALOG NUMBER: GLEON-SA5C-730-U-5NQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°      | 5°      | 15°     | 25°     | 35°     | 45°     | 55°     | 65°     | 75°     | 85°     | 90°     |
|-------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| 0°    | 4010.4  | 4010.4  | 4010.4  | 4010.4  | 4010.4  | 4010.4  | 4010.4  | 4010.4  | 4010.4  | 4010.4  | 4010.4  |
| 2.5°  | 4023.6  | 4021.4  | 4023.6  | 4024.7  | 4018.1  | 4021.4  | 4020.3  | 4025.8  | 4028.0  | 4025.8  | 4025.8  |
| 5°    | 4069.9  | 4066.6  | 4071.0  | 4076.5  | 4067.7  | 4069.9  | 4066.6  | 4073.2  | 4075.4  | 4071.0  | 4074.3  |
| 7.5°  | 4133.9  | 4135.0  | 4139.4  | 4149.3  | 4143.8  | 4148.2  | 4141.6  | 4142.7  | 4141.6  | 4135.0  | 4136.1  |
| 10°   | 4203.3  | 4204.4  | 4212.1  | 4225.4  | 4227.6  | 4227.6  | 4223.2  | 4219.9  | 4215.4  | 4211.0  | 4212.1  |
| 12.5° | 4287.1  | 4292.6  | 4298.1  | 4314.7  | 4314.7  | 4323.5  | 4321.3  | 4312.5  | 4304.7  | 4298.1  | 4298.1  |
| 15°   | 4400.6  | 4399.5  | 4406.2  | 4422.7  | 4430.4  | 4444.7  | 4444.7  | 4432.6  | 4422.7  | 4416.1  | 4413.9  |
| 17.5° | 4519.7  | 4523.0  | 4527.4  | 4547.3  | 4559.4  | 4575.9  | 4578.1  | 4568.2  | 4561.6  | 4552.8  | 4547.3  |
| 20°   | 4658.6  | 4664.1  | 4681.7  | 4689.5  | 4700.5  | 4715.9  | 4721.4  | 4719.2  | 4712.6  | 4708.2  | 4709.3  |
| 22.5° | 4820.6  | 4835.0  | 4846.0  | 4857.0  | 4870.3  | 4881.3  | 4886.8  | 4894.5  | 4887.9  | 4884.6  | 4882.4  |
| 25°   | 5016.9  | 5026.8  | 5048.8  | 5068.7  | 5077.5  | 5080.8  | 5087.4  | 5098.4  | 5097.3  | 5089.6  | 5089.6  |
| 27.5° | 5239.5  | 5258.3  | 5285.8  | 5314.5  | 5314.5  | 5303.5  | 5325.5  | 5344.3  | 5337.7  | 5327.7  | 5314.5  |
| 30°   | 5509.6  | 5527.3  | 5559.2  | 5598.9  | 5579.1  | 5571.4  | 5601.1  | 5635.3  | 5625.4  | 5608.8  | 5606.6  |
| 32.5° | 5800.6  | 5817.2  | 5859.1  | 5902.1  | 5876.7  | 5865.7  | 5897.7  | 5947.3  | 5929.6  | 5896.6  | 5876.7  |
| 35°   | 6115.9  | 6132.5  | 6192.0  | 6243.8  | 6200.8  | 6182.1  | 6208.5  | 6262.5  | 6231.7  | 6169.9  | 6154.5  |
| 37.5° | 6458.8  | 6467.6  | 6544.7  | 6597.7  | 6567.9  | 6518.3  | 6551.4  | 6591.0  | 6564.6  | 6489.6  | 6459.9  |
| 40°   | 6814.8  | 6846.8  | 6936.1  | 6997.8  | 6946.0  | 6867.7  | 6922.9  | 6978.0  | 6938.3  | 6842.4  | 6791.7  |
| 42.5° | 7230.4  | 7254.7  | 7373.7  | 7428.8  | 7345.1  | 7234.8  | 7309.8  | 7384.7  | 7345.1  | 7252.5  | 7208.4  |
| 45°   | 7662.5  | 7700.0  | 7842.2  | 7897.3  | 7776.1  | 7636.1  | 7727.6  | 7858.8  | 7855.5  | 7722.1  | 7675.8  |
| 47.5° | 8133.3  | 8170.7  | 8340.5  | 8413.3  | 8282.1  | 8094.7  | 8223.6  | 8408.8  | 8395.6  | 8249.0  | 8211.5  |
| 50°   | 8676.7  | 8716.4  | 8928.1  | 9019.6  | 8897.2  | 8678.9  | 8872.9  | 9036.1  | 9011.8  | 8831.1  | 8834.4  |
| 52.5° | 9359.1  | 9356.9  | 9620.3  | 9779.1  | 9653.4  | 9460.5  | 9639.1  | 9797.8  | 9697.5  | 9447.3  | 9439.6  |
| 55°   | 9956.6  | 9992.9  | 10319.2 | 10620.2 | 10612.5 | 10538.6 | 10610.3 | 10616.9 | 10330.3 | 9997.4  | 9956.6  |
| 57.5° | 10349.0 | 10418.5 | 10878.1 | 11422.7 | 11830.6 | 11928.7 | 11789.8 | 11368.7 | 10697.4 | 10164.9 | 10099.9 |
| 60°   | 10107.6 | 10213.4 | 10935.5 | 12045.6 | 13247.1 | 13823.7 | 13039.9 | 11733.6 | 10411.8 | 9670.0  | 9581.8  |
| 62.5° | 8478.3  | 8656.9  | 9714.0  | 11744.6 | 14466.3 | 16151.9 | 13946.0 | 11148.2 | 9276.4  | 8254.5  | 8103.5  |
| 65°   | 5163.5  | 5352.0  | 6626.3  | 9666.6  | 14269.0 | 17995.0 | 13532.6 | 9253.3  | 6770.7  | 5499.7  | 5336.6  |
| 67.5° | 1720.8  | 1775.9  | 2526.6  | 5343.2  | 11214.4 | 16168.4 | 11233.1 | 5539.4  | 2946.6  | 1953.4  | 1896.1  |
| 70°   | 673.5   | 679.1   | 801.4   | 1548.8  | 5295.8  | 11105.2 | 5843.6  | 1576.4  | 837.8   | 662.5   | 676.9   |
| 72.5° | 495.0   | 497.2   | 531.3   | 647.1   | 1380.2  | 4892.3  | 1429.8  | 650.4   | 517.0   | 464.1   | 464.1   |
| 75°   | 398.0   | 398.0   | 422.2   | 471.8   | 618.4   | 1122.2  | 627.2   | 466.3   | 404.6   | 370.4   | 366.0   |
| 77.5° | 314.2   | 320.8   | 339.5   | 371.5   | 418.9   | 540.2   | 434.3   | 369.3   | 326.3   | 294.3   | 287.7   |
| 80°   | 233.7   | 240.3   | 271.2   | 286.6   | 300.9   | 374.8   | 320.8   | 288.8   | 258.0   | 220.5   | 213.9   |
| 82.5° | 153.2   | 159.8   | 198.4   | 207.2   | 203.9   | 244.7   | 216.1   | 212.8   | 189.6   | 142.2   | 135.6   |
| 85°   | 100.3   | 102.5   | 132.3   | 137.8   | 126.8   | 111.3   | 137.8   | 145.5   | 132.3   | 92.6    | 89.3    |
| 87.5° | 47.4    | 47.4    | 67.2    | 62.8    | 57.3    | 46.3    | 62.8    | 73.9    | 75.0    | 45.2    | 44.1    |
| 90°   | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     |

LM-79-2008: Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGRAW-EDISON

Report Number: SP1-1908-441-2-R4

Test Date: 10/03/2019

Luminaire Tested: SA1C-730-U-5WQ

Data in this report applies to families of products SA1C-730-U-5WQ .




### Test Information

Test Method: LM-79-2008  
 Report Number: SP1-1908-441-2-R4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/28/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: MCGRAW-EDISON  
 Catalog Number: **SA1C-730-U-5WQ**  
 Description: MCGRAW EDISON ROADWAY AND AREA LUMINAIRE

\*\*\*THIS IS A REVISION OF SP1-1908-441-2-R3. TO UPDATE THE CATALOG INFORMATION.\*\*\*TESTED IN SITU. (1) 70 CRI, 3000K, 1050MA LIGHTSQUARE WITH 16 LEDS AND TYPE V WIDE OPTICS.

### Spectral Parameters

|                           |        |           |      |      |       |
|---------------------------|--------|-----------|------|------|-------|
| CCT (K):                  | 2993   | CRI (Ra): | 71.8 |      |       |
| CIE u':                   | 0.2508 | R1:       | 67.5 | R9:  | -38.3 |
| CIE v':                   | 0.5215 | R2:       | 82.9 | R10: | 62.5  |
| Duv:                      | 0.0000 | R3:       | 94.7 | R11: | 63.7  |
| CIE x:                    | 0.4374 | R4:       | 67.7 | R12: | 57.8  |
| CIE y:                    | 0.4043 | R5:       | 67.9 | R13: | 70.4  |
| CIE z:                    | 0.1583 | R6:       | 77.6 | R14: | 97.3  |
| Peak Wavelength (nm):     | 593    | R7:       | 76.0 |      |       |
| Dominant Wavelength (nm): | 582    | R8:       | 40.5 |      |       |
| Purity:                   | 53     |           |      |      |       |
| Rf:                       | 75.7   |           |      |      |       |
| Rg:                       | 93.9   |           |      |      |       |

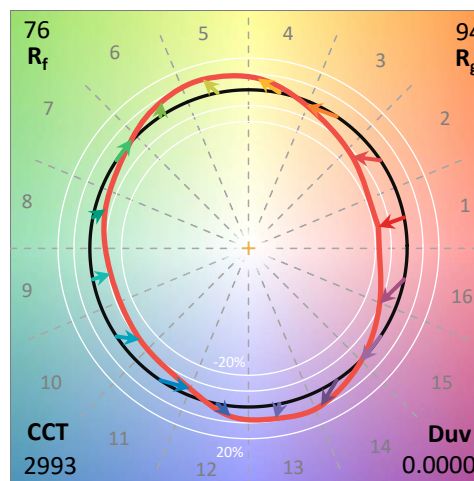

### Test Conditions


Stabilization Time: 53M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 25.0./44%  
 Sphere Temperature (°C): 25.7

REPORT NUMBER: SP1-1908-441-2-R4


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/28/2019        | 12/28/2019           |
| Power Meter                    | IN0071                | 12/5/2018        | 12/5/2019            |
| AC Power Source                | IN0063                | 12/5/2018        | 12/5/2019            |
| DC Power Source                | IN0208                | 12/5/2018        | 12/5/2019            |
| Sphere Thermometer             | IN0085                | 12/5/2018        | 12/5/2019            |
| Room Thermometer               | IN0046                | 12/5/2018        | 12/5/2019            |

REPORT NUMBER: SP1-1908-441-2-R4

**CIE 1931 Chromaticity Diagram**

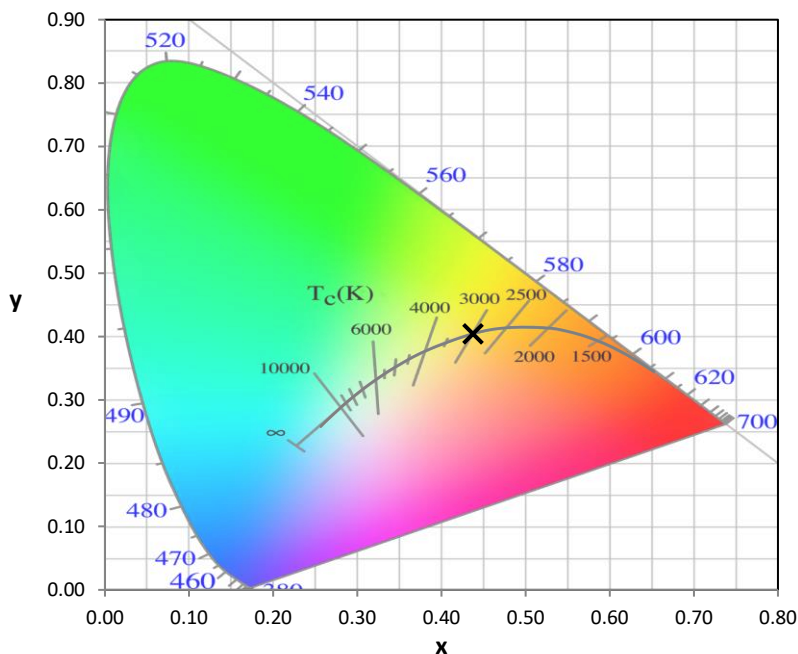


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

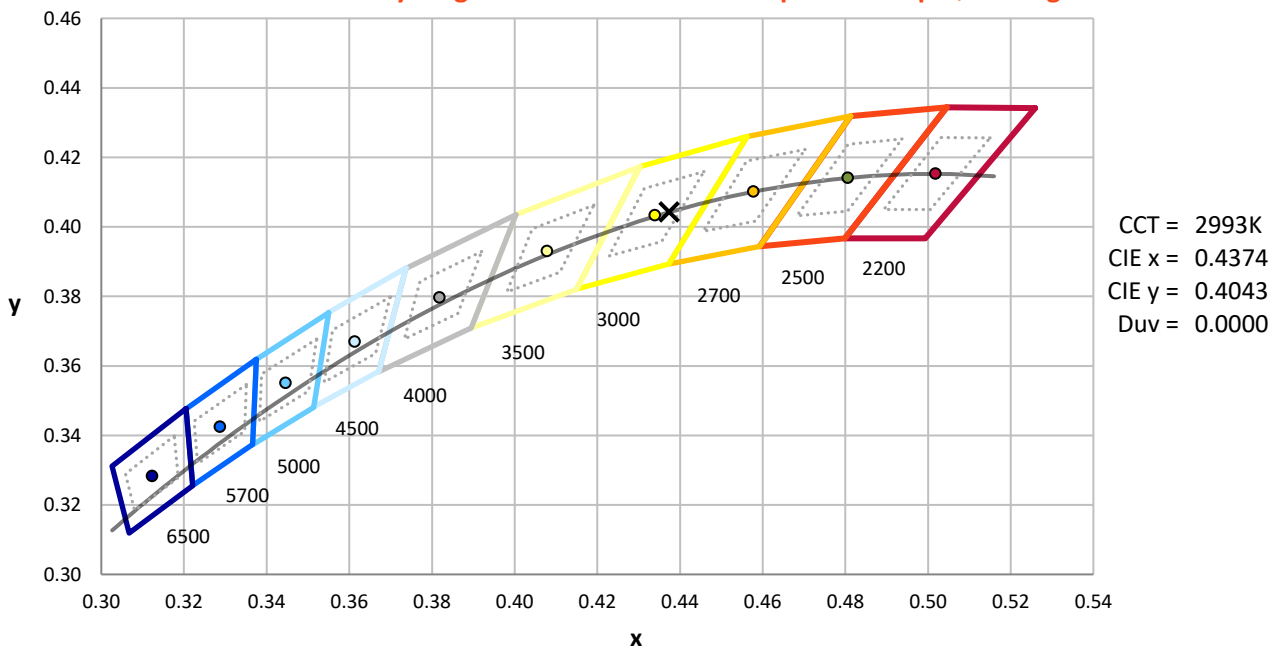

Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-1908-441-2-R4

**Photopic Flux vs. Wavelength**

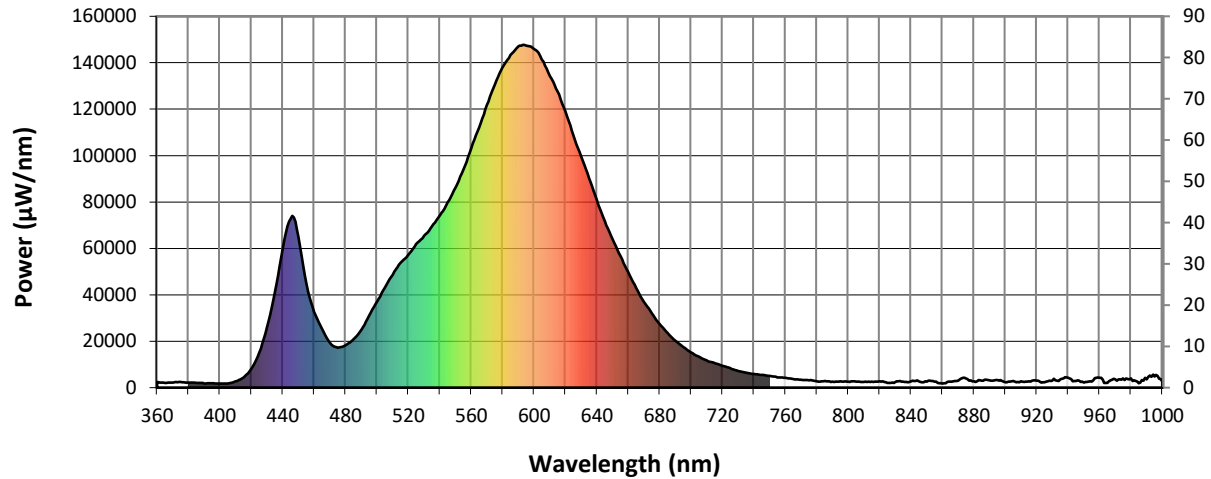


#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2397             | NR               | 490       | 24908            | NR               | 620       | 118784           | NR               | 750       | 5037             | NR               | 880       | 2677             | NR               |
| 365       | 2084             | NR               | 495       | 30998            | NR               | 625       | 108951           | NR               | 755       | 4413             | NR               | 885       | 2940             | NR               |
| 370       | 2143             | NR               | 500       | 37103            | NR               | 630       | 99573            | NR               | 760       | 4189             | NR               | 890       | 3116             | NR               |
| 375       | 2413             | NR               | 505       | 42987            | NR               | 635       | 90444            | NR               | 765       | 3677             | NR               | 895       | 3345             | NR               |
| 380       | 2172             | NR               | 510       | 48702            | NR               | 640       | 80749            | NR               | 770       | 3366             | NR               | 900       | 2312             | NR               |
| 385       | 1997             | NR               | 515       | 53741            | NR               | 645       | 71664            | NR               | 775       | 3211             | NR               | 905       | 2829             | NR               |
| 390       | 1830             | NR               | 520       | 57283            | NR               | 650       | 63936            | NR               | 780       | 2682             | NR               | 910       | 2783             | NR               |
| 395       | 1861             | NR               | 525       | 61876            | NR               | 655       | 56611            | NR               | 785       | 2804             | NR               | 915       | 2662             | NR               |
| 400       | 1717             | NR               | 530       | 65398            | NR               | 660       | 49763            | NR               | 790       | 2581             | NR               | 920       | 3047             | NR               |
| 405       | 1761             | NR               | 535       | 69597            | NR               | 665       | 42891            | NR               | 795       | 2711             | NR               | 925       | 2256             | NR               |
| 410       | 2680             | NR               | 540       | 74214            | NR               | 670       | 36939            | NR               | 800       | 2609             | NR               | 930       | 2976             | NR               |
| 415       | 4374             | NR               | 545       | 79911            | NR               | 675       | 31946            | NR               | 805       | 2581             | NR               | 935       | 3503             | NR               |
| 420       | 8071             | NR               | 550       | 86153            | NR               | 680       | 27385            | NR               | 810       | 2404             | NR               | 940       | 4226             | NR               |
| 425       | 15169            | NR               | 555       | 93952            | NR               | 685       | 23504            | NR               | 815       | 2556             | NR               | 945       | 2930             | NR               |
| 430       | 26038            | NR               | 560       | 102904           | NR               | 690       | 20210            | NR               | 820       | 2742             | NR               | 950       | 2115             | NR               |
| 435       | 41316            | NR               | 565       | 112009           | NR               | 695       | 17459            | NR               | 825       | 2014             | NR               | 955       | 2634             | NR               |
| 440       | 59674            | NR               | 570       | 121662           | NR               | 700       | 15207            | NR               | 830       | 2488             | NR               | 960       | 4200             | NR               |
| 445       | 72751            | NR               | 575       | 130476           | NR               | 705       | 13322            | NR               | 835       | 2625             | NR               | 965       | 1982             | NR               |
| 450       | 65091            | NR               | 580       | 137926           | NR               | 710       | 11676            | NR               | 840       | 2754             | NR               | 970       | 3613             | NR               |
| 455       | 44894            | NR               | 585       | 143406           | NR               | 715       | 10626            | NR               | 845       | 2708             | NR               | 975       | 4034             | NR               |
| 460       | 32712            | NR               | 590       | 147039           | NR               | 720       | 9416             | NR               | 850       | 2608             | NR               | 980       | 3922             | NR               |
| 465       | 25296            | NR               | 595       | 147365           | NR               | 725       | 8333             | NR               | 855       | 2605             | NR               | 985       | 1909             | NR               |
| 470       | 19318            | NR               | 600       | 145800           | NR               | 730       | 7134             | NR               | 860       | 1765             | NR               | 990       | 3617             | NR               |
| 475       | 17265            | NR               | 605       | 141363           | NR               | 735       | 6437             | NR               | 865       | 2581             | NR               | 995       | 4767             | NR               |
| 480       | 18260            | NR               | 610       | 134199           | NR               | 740       | 5834             | NR               | 870       | 3016             | NR               | 1000      | 2528             | NR               |
| 485       | 20845            | NR               | 615       | 127683           | NR               | 745       | 5500             | NR               | 875       | 3952             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-2-R4

Scotopic Flux vs. Wavelength

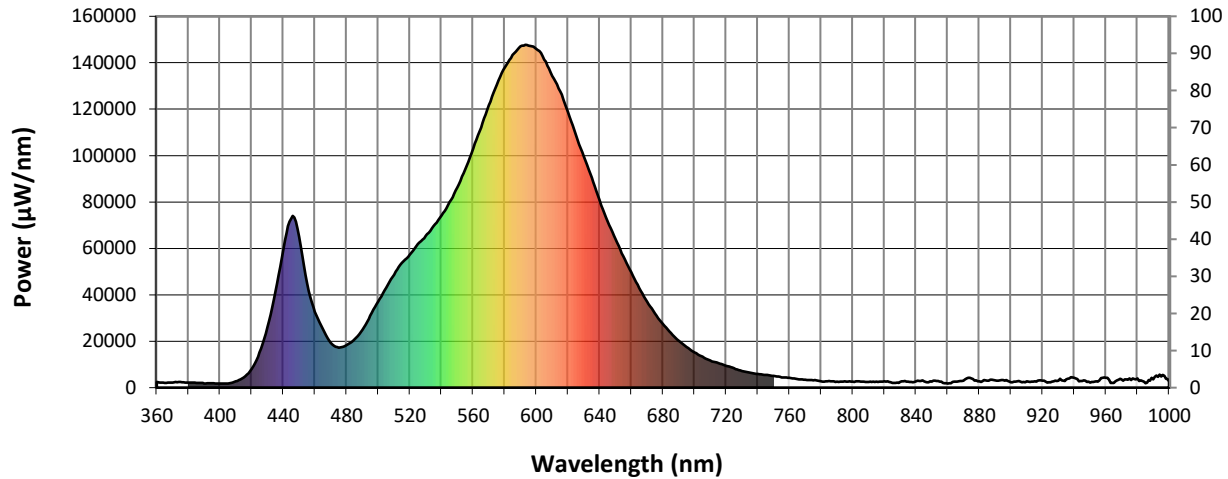


Scotopic Lumens: 8494.8

S/P: 1.23

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2397             | NR               | 490       | 24908            | NR               | 620       | 118784           | NR               | 750       | 5037             | NR               | 880       | 2677             | NR               |
| 365       | 2084             | NR               | 495       | 30998            | NR               | 625       | 108951           | NR               | 755       | 4413             | NR               | 885       | 2940             | NR               |
| 370       | 2143             | NR               | 500       | 37103            | NR               | 630       | 99573            | NR               | 760       | 4189             | NR               | 890       | 3116             | NR               |
| 375       | 2413             | NR               | 505       | 42987            | NR               | 635       | 90444            | NR               | 765       | 3677             | NR               | 895       | 3345             | NR               |
| 380       | 2172             | NR               | 510       | 48702            | NR               | 640       | 80749            | NR               | 770       | 3366             | NR               | 900       | 2312             | NR               |
| 385       | 1997             | NR               | 515       | 53741            | NR               | 645       | 71664            | NR               | 775       | 3211             | NR               | 905       | 2829             | NR               |
| 390       | 1830             | NR               | 520       | 57283            | NR               | 650       | 63936            | NR               | 780       | 2682             | NR               | 910       | 2783             | NR               |
| 395       | 1861             | NR               | 525       | 61876            | NR               | 655       | 56611            | NR               | 785       | 2804             | NR               | 915       | 2662             | NR               |
| 400       | 1717             | NR               | 530       | 65398            | NR               | 660       | 49763            | NR               | 790       | 2581             | NR               | 920       | 3047             | NR               |
| 405       | 1761             | NR               | 535       | 69597            | NR               | 665       | 42891            | NR               | 795       | 2711             | NR               | 925       | 2256             | NR               |
| 410       | 2680             | NR               | 540       | 74214            | NR               | 670       | 36939            | NR               | 800       | 2609             | NR               | 930       | 2976             | NR               |
| 415       | 4374             | NR               | 545       | 79911            | NR               | 675       | 31946            | NR               | 805       | 2581             | NR               | 935       | 3503             | NR               |
| 420       | 8071             | NR               | 550       | 86153            | NR               | 680       | 27385            | NR               | 810       | 2404             | NR               | 940       | 4226             | NR               |
| 425       | 15169            | NR               | 555       | 93952            | NR               | 685       | 23504            | NR               | 815       | 2556             | NR               | 945       | 2930             | NR               |
| 430       | 26038            | NR               | 560       | 102904           | NR               | 690       | 20210            | NR               | 820       | 2742             | NR               | 950       | 2115             | NR               |
| 435       | 41316            | NR               | 565       | 112009           | NR               | 695       | 17459            | NR               | 825       | 2014             | NR               | 955       | 2634             | NR               |
| 440       | 59674            | NR               | 570       | 121662           | NR               | 700       | 15207            | NR               | 830       | 2488             | NR               | 960       | 4200             | NR               |
| 445       | 72751            | NR               | 575       | 130476           | NR               | 705       | 13322            | NR               | 835       | 2625             | NR               | 965       | 1982             | NR               |
| 450       | 65091            | NR               | 580       | 137926           | NR               | 710       | 11676            | NR               | 840       | 2754             | NR               | 970       | 3613             | NR               |
| 455       | 44894            | NR               | 585       | 143406           | NR               | 715       | 10626            | NR               | 845       | 2708             | NR               | 975       | 4034             | NR               |
| 460       | 32712            | NR               | 590       | 147039           | NR               | 720       | 9416             | NR               | 850       | 2608             | NR               | 980       | 3922             | NR               |
| 465       | 25296            | NR               | 595       | 147365           | NR               | 725       | 8333             | NR               | 855       | 2605             | NR               | 985       | 1909             | NR               |
| 470       | 19318            | NR               | 600       | 145800           | NR               | 730       | 7134             | NR               | 860       | 1765             | NR               | 990       | 3617             | NR               |
| 475       | 17265            | NR               | 605       | 141363           | NR               | 735       | 6437             | NR               | 865       | 2581             | NR               | 995       | 4767             | NR               |
| 480       | 18260            | NR               | 610       | 134199           | NR               | 740       | 5834             | NR               | 870       | 3016             | NR               | 1000      | 2528             | NR               |
| 485       | 20845            | NR               | 615       | 127683           | NR               | 745       | 5500             | NR               | 875       | 3952             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-2-R4

**Melanopic Flux vs. Wavelength**

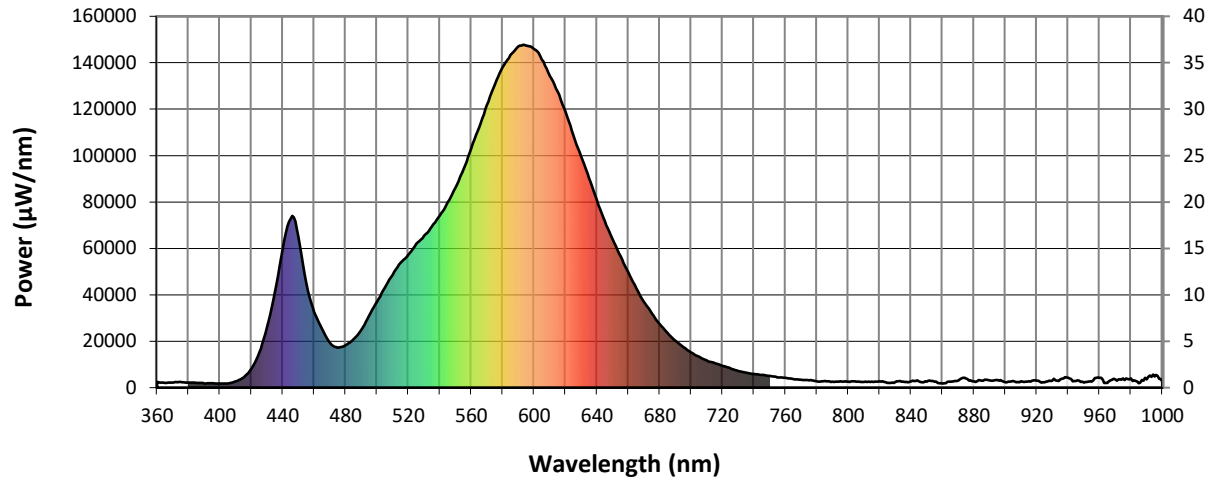

**Melanopic Lumens: 3101.5**

**M/P: 0.45**


| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2397             | NR               | 490       | 24908            | NR               | 620       | 118784           | NR               | 750       | 5037             | NR               | 880       | 2677             | NR               |
| 365       | 2084             | NR               | 495       | 30998            | NR               | 625       | 108951           | NR               | 755       | 4413             | NR               | 885       | 2940             | NR               |
| 370       | 2143             | NR               | 500       | 37103            | NR               | 630       | 99573            | NR               | 760       | 4189             | NR               | 890       | 3116             | NR               |
| 375       | 2413             | NR               | 505       | 42987            | NR               | 635       | 90444            | NR               | 765       | 3677             | NR               | 895       | 3345             | NR               |
| 380       | 2172             | NR               | 510       | 48702            | NR               | 640       | 80749            | NR               | 770       | 3366             | NR               | 900       | 2312             | NR               |
| 385       | 1997             | NR               | 515       | 53741            | NR               | 645       | 71664            | NR               | 775       | 3211             | NR               | 905       | 2829             | NR               |
| 390       | 1830             | NR               | 520       | 57283            | NR               | 650       | 63936            | NR               | 780       | 2682             | NR               | 910       | 2783             | NR               |
| 395       | 1861             | NR               | 525       | 61876            | NR               | 655       | 56611            | NR               | 785       | 2804             | NR               | 915       | 2662             | NR               |
| 400       | 1717             | NR               | 530       | 65398            | NR               | 660       | 49763            | NR               | 790       | 2581             | NR               | 920       | 3047             | NR               |
| 405       | 1761             | NR               | 535       | 69597            | NR               | 665       | 42891            | NR               | 795       | 2711             | NR               | 925       | 2256             | NR               |
| 410       | 2680             | NR               | 540       | 74214            | NR               | 670       | 36939            | NR               | 800       | 2609             | NR               | 930       | 2976             | NR               |
| 415       | 4374             | NR               | 545       | 79911            | NR               | 675       | 31946            | NR               | 805       | 2581             | NR               | 935       | 3503             | NR               |
| 420       | 8071             | NR               | 550       | 86153            | NR               | 680       | 27385            | NR               | 810       | 2404             | NR               | 940       | 4226             | NR               |
| 425       | 15169            | NR               | 555       | 93952            | NR               | 685       | 23504            | NR               | 815       | 2556             | NR               | 945       | 2930             | NR               |
| 430       | 26038            | NR               | 560       | 102904           | NR               | 690       | 20210            | NR               | 820       | 2742             | NR               | 950       | 2115             | NR               |
| 435       | 41316            | NR               | 565       | 112009           | NR               | 695       | 17459            | NR               | 825       | 2014             | NR               | 955       | 2634             | NR               |
| 440       | 59674            | NR               | 570       | 121662           | NR               | 700       | 15207            | NR               | 830       | 2488             | NR               | 960       | 4200             | NR               |
| 445       | 72751            | NR               | 575       | 130476           | NR               | 705       | 13322            | NR               | 835       | 2625             | NR               | 965       | 1982             | NR               |
| 450       | 65091            | NR               | 580       | 137926           | NR               | 710       | 11676            | NR               | 840       | 2754             | NR               | 970       | 3613             | NR               |
| 455       | 44894            | NR               | 585       | 143406           | NR               | 715       | 10626            | NR               | 845       | 2708             | NR               | 975       | 4034             | NR               |
| 460       | 32712            | NR               | 590       | 147039           | NR               | 720       | 9416             | NR               | 850       | 2608             | NR               | 980       | 3922             | NR               |
| 465       | 25296            | NR               | 595       | 147365           | NR               | 725       | 8333             | NR               | 855       | 2605             | NR               | 985       | 1909             | NR               |
| 470       | 19318            | NR               | 600       | 145800           | NR               | 730       | 7134             | NR               | 860       | 1765             | NR               | 990       | 3617             | NR               |
| 475       | 17265            | NR               | 605       | 141363           | NR               | 735       | 6437             | NR               | 865       | 2581             | NR               | 995       | 4767             | NR               |
| 480       | 18260            | NR               | 610       | 134199           | NR               | 740       | 5834             | NR               | 870       | 3016             | NR               | 1000      | 2528             | NR               |
| 485       | 20845            | NR               | 615       | 127683           | NR               | 745       | 5500             | NR               | 875       | 3952             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-2-R4





**TM-30-18**

**Summary**

$R_f = 75.7$   
 $R_g = 93.9$   
 CIE  $R_a = 71.8$   
 $R_g = -38.3$

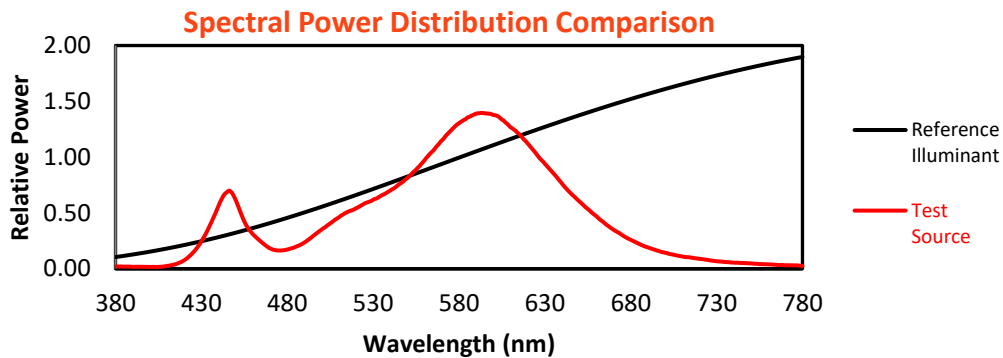

**Color Vector Graphics**

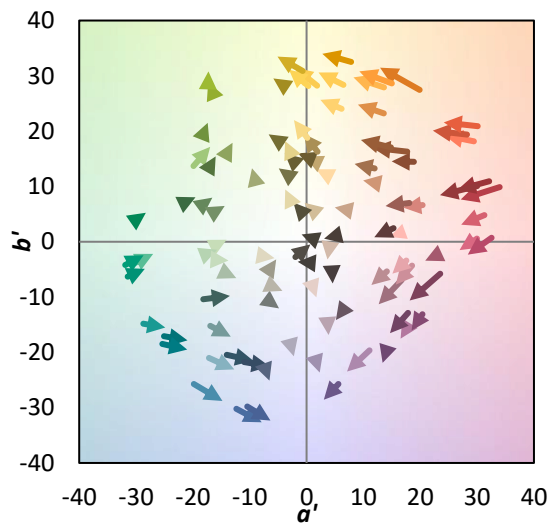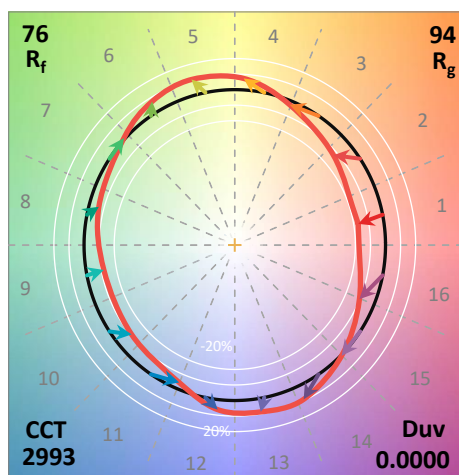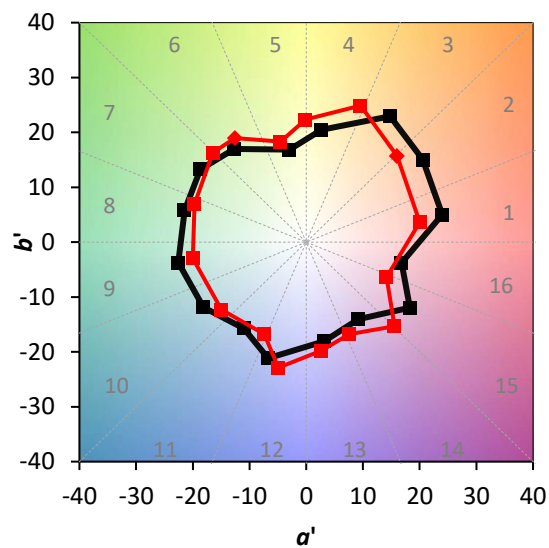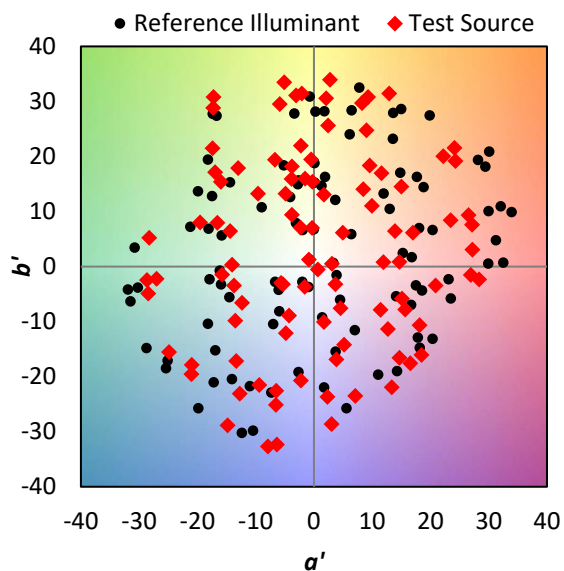


REPORT NUMBER: SP1-1908-441-2-R4

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 67 | CES51 = 87 | CES76 = 63 |
| CES02 = 63 | CES27 = 88 | CES52 = 86 | CES77 = 80 |
| CES03 = 31 | CES28 = 87 | CES53 = 78 | CES78 = 67 |
| CES04 = 71 | CES29 = 66 | CES54 = 84 | CES79 = 87 |
| CES05 = 49 | CES30 = 73 | CES55 = 84 | CES80 = 86 |
| CES06 = 51 | CES31 = 70 | CES56 = 75 | CES81 = 71 |
| CES07 = 41 | CES32 = 65 | CES57 = 74 | CES82 = 94 |
| CES08 = 40 | CES33 = 73 | CES58 = 76 | CES83 = 90 |
| CES09 = 29 | CES34 = 79 | CES59 = 85 | CES84 = 89 |
| CES10 = 76 | CES35 = 89 | CES60 = 93 | CES85 = 77 |
| CES11 = 59 | CES36 = 97 | CES61 = 84 | CES86 = 61 |
| CES12 = 65 | CES37 = 87 | CES62 = 91 | CES87 = 78 |
| CES13 = 43 | CES38 = 81 | CES63 = 77 | CES88 = 77 |
| CES14 = 74 | CES39 = 95 | CES64 = 72 | CES89 = 67 |
| CES15 = 71 | CES40 = 92 | CES65 = 68 | CES90 = 76 |
| CES16 = 47 | CES41 = 88 | CES66 = 69 | CES91 = 89 |
| CES17 = 50 | CES42 = 89 | CES67 = 67 | CES92 = 58 |
| CES18 = 56 | CES43 = 79 | CES68 = 72 | CES93 = 74 |
| CES19 = 73 | CES44 = 99 | CES69 = 81 | CES94 = 49 |
| CES20 = 66 | CES45 = 85 | CES70 = 66 | CES95 = 68 |
| CES21 = 87 | CES46 = 80 | CES71 = 67 | CES96 = 76 |
| CES22 = 79 | CES47 = 82 | CES72 = 88 | CES97 = 82 |
| CES23 = 92 | CES48 = 69 | CES73 = 59 | CES98 = 75 |
| CES24 = 91 | CES49 = 80 | CES74 = 95 | CES99 = 62 |
| CES25 = 73 | CES50 = 87 | CES75 = 69 |            |



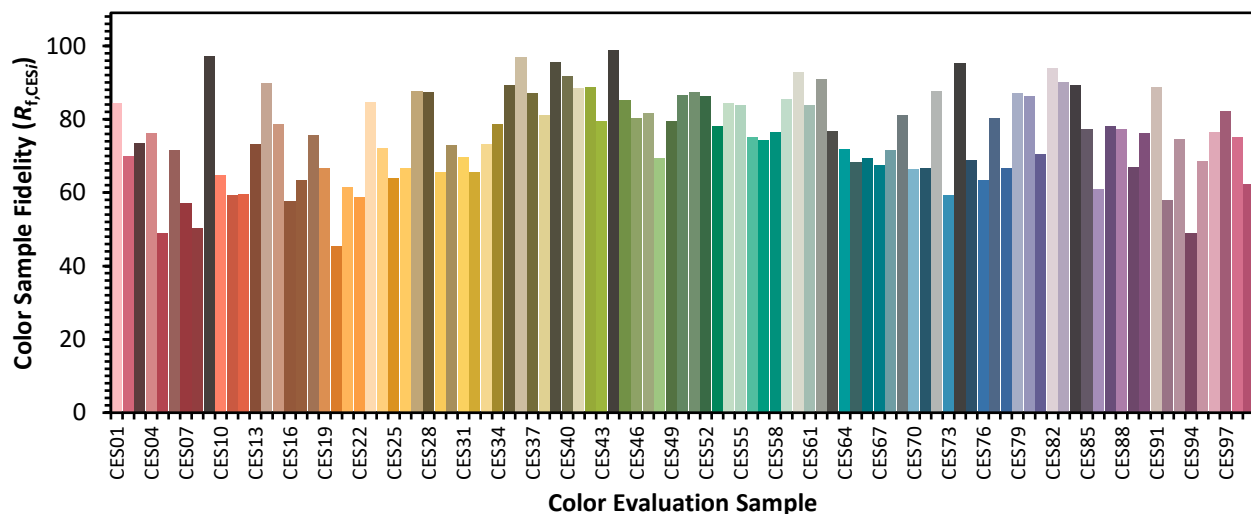




REPORT NUMBER: SP1-1908-441-2-R4

**TM-30-18**



**Color Rendition by Hue-Angle Bin**

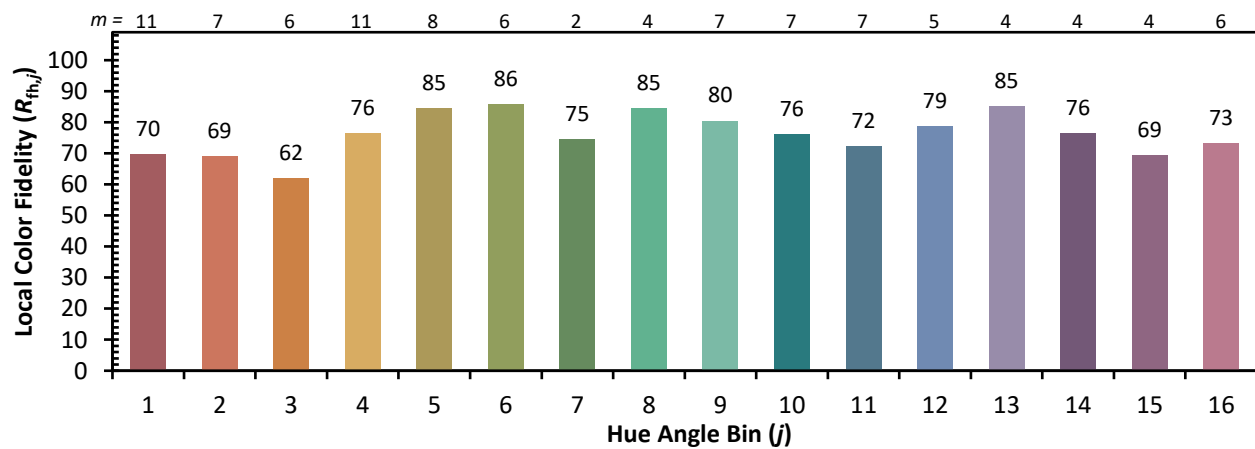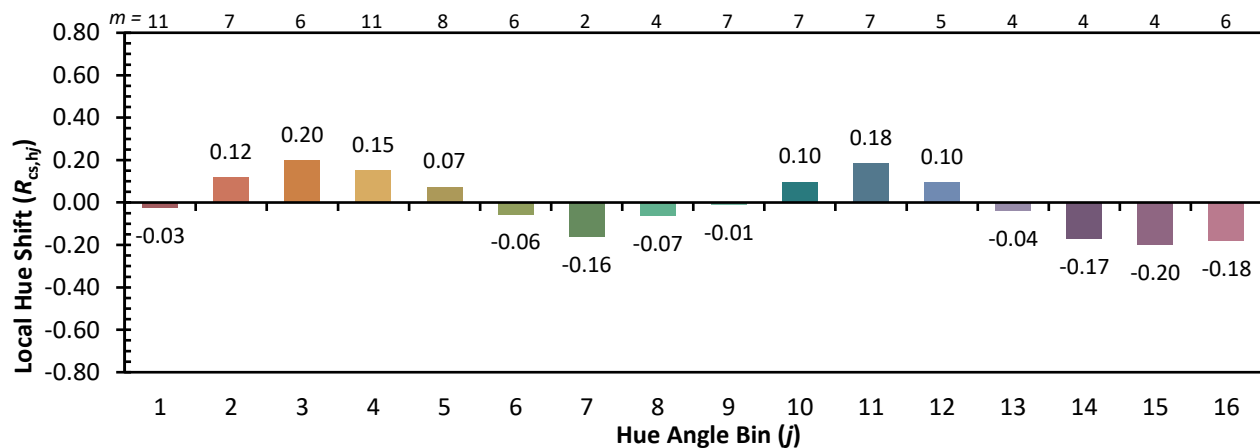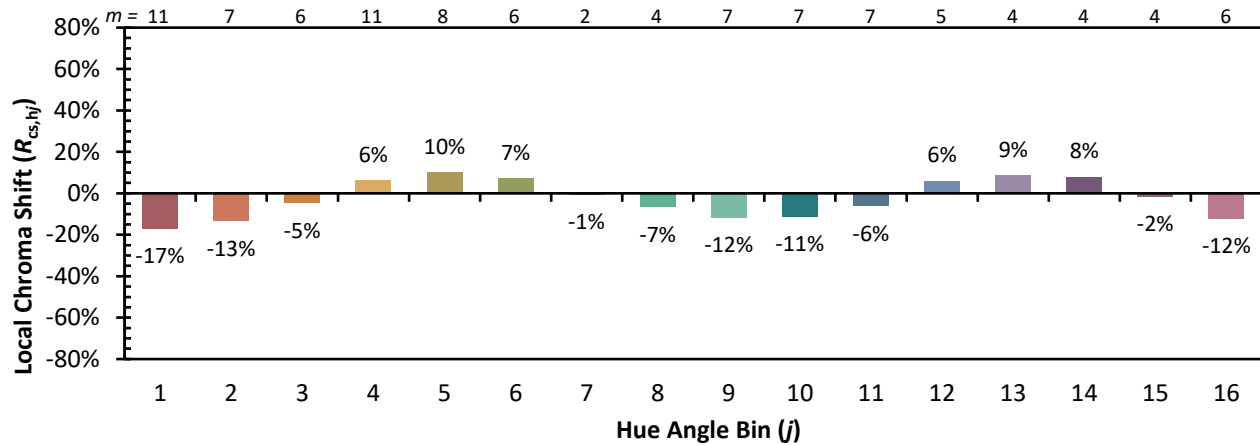

REPORT NUMBER: SP1-1908-441-2-R4

**TM-30-18**

**Measure Comparisons**

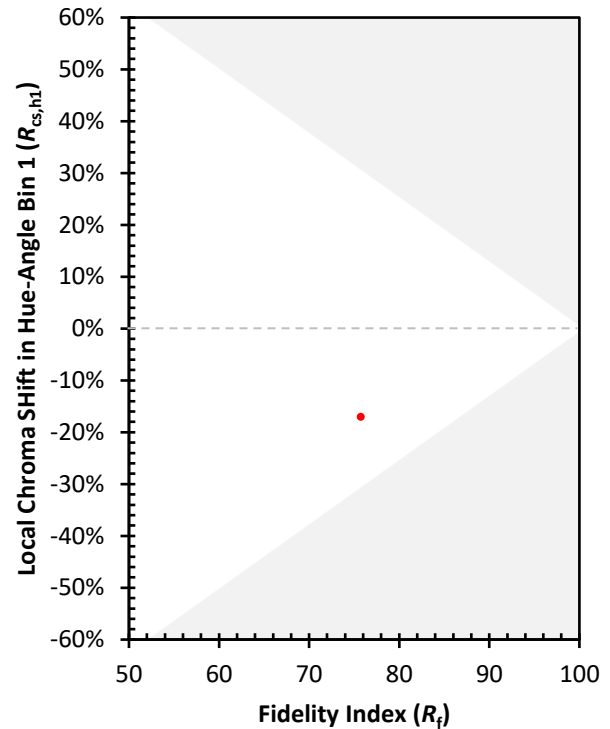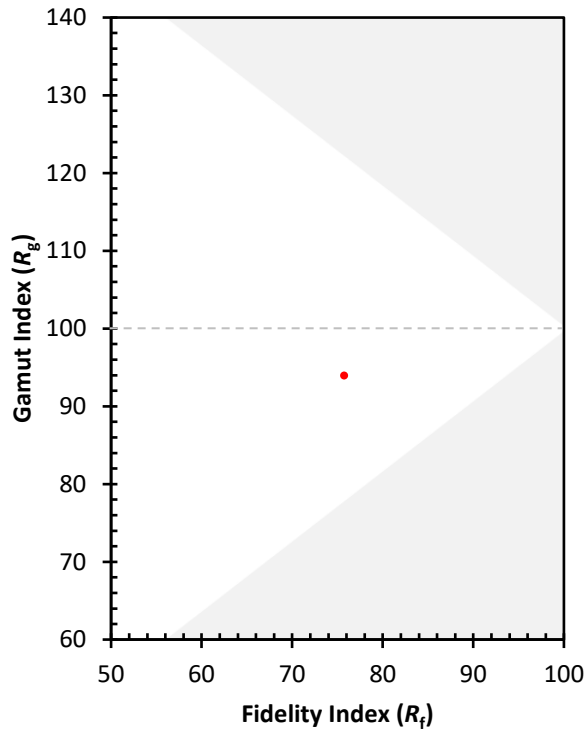

(END OF REPORT)