

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: McGRAW-EDISON

Report Number: P316432

Luminaire Tested: **GLEON-SA8A-730-U-5MQ**

Issue Date: 3/3/2020

**Test Information**

Test Method: LM-79-08  
Report Number: P316432  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-1903-205-6)  
Test Lab: INNOVATION CENTER  
Issue Date: 3/3/2020  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: McGRAW-EDISON  
Catalog Number: GLEON-SA8A-730-U-5MQ  
Description: GALLEON AREA AND ROADWAY LUMINAIRE  
(8) 70 CRI, 3000K, 615mA LIGHTSQUARES WITH 16 LEDS EACH AND TYPE V MEDIUM OPTICS  
Light Source: -  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 35731 lumens  
Efficiency: N/A  
Efficacy: 139.0 lumens/watt  
Luminous Opening: Rectangular (W 2' x L: 1' x H: 0')  
IES Classification: Type V - Short  
BUG Rating: B5 - U0 - G4


Input Watts (W): 257  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



REPORT NUMBER: P316432  
 CATALOG NUMBER: GLEON-SA8A-730-U-5MQ

## Iso-Footcandle Lines of Horizontal Illumination


✕ Max cd  
 - - - 1/2 Max cd

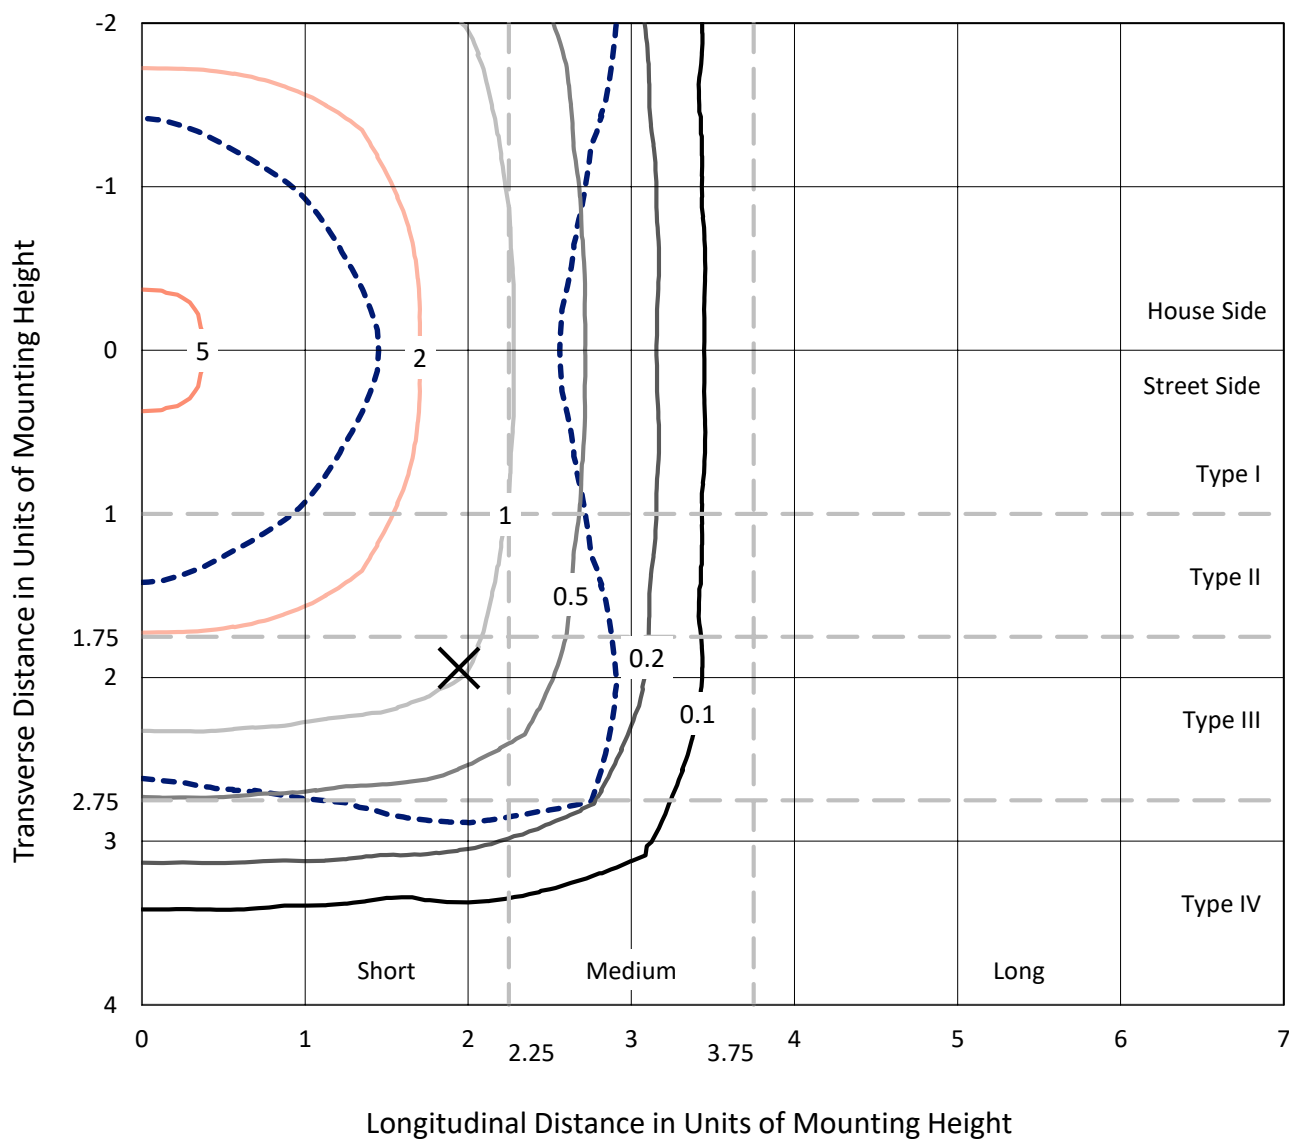

Based on 25 foot mounting height. Maximum calculated value = 6.2 fc  
 Type V - Short - N/A

REPORT NUMBER: P316432  
CATALOG NUMBER: GLEON-SA8A-730-U-5MQ

## Luminous Intensity Polar Plot

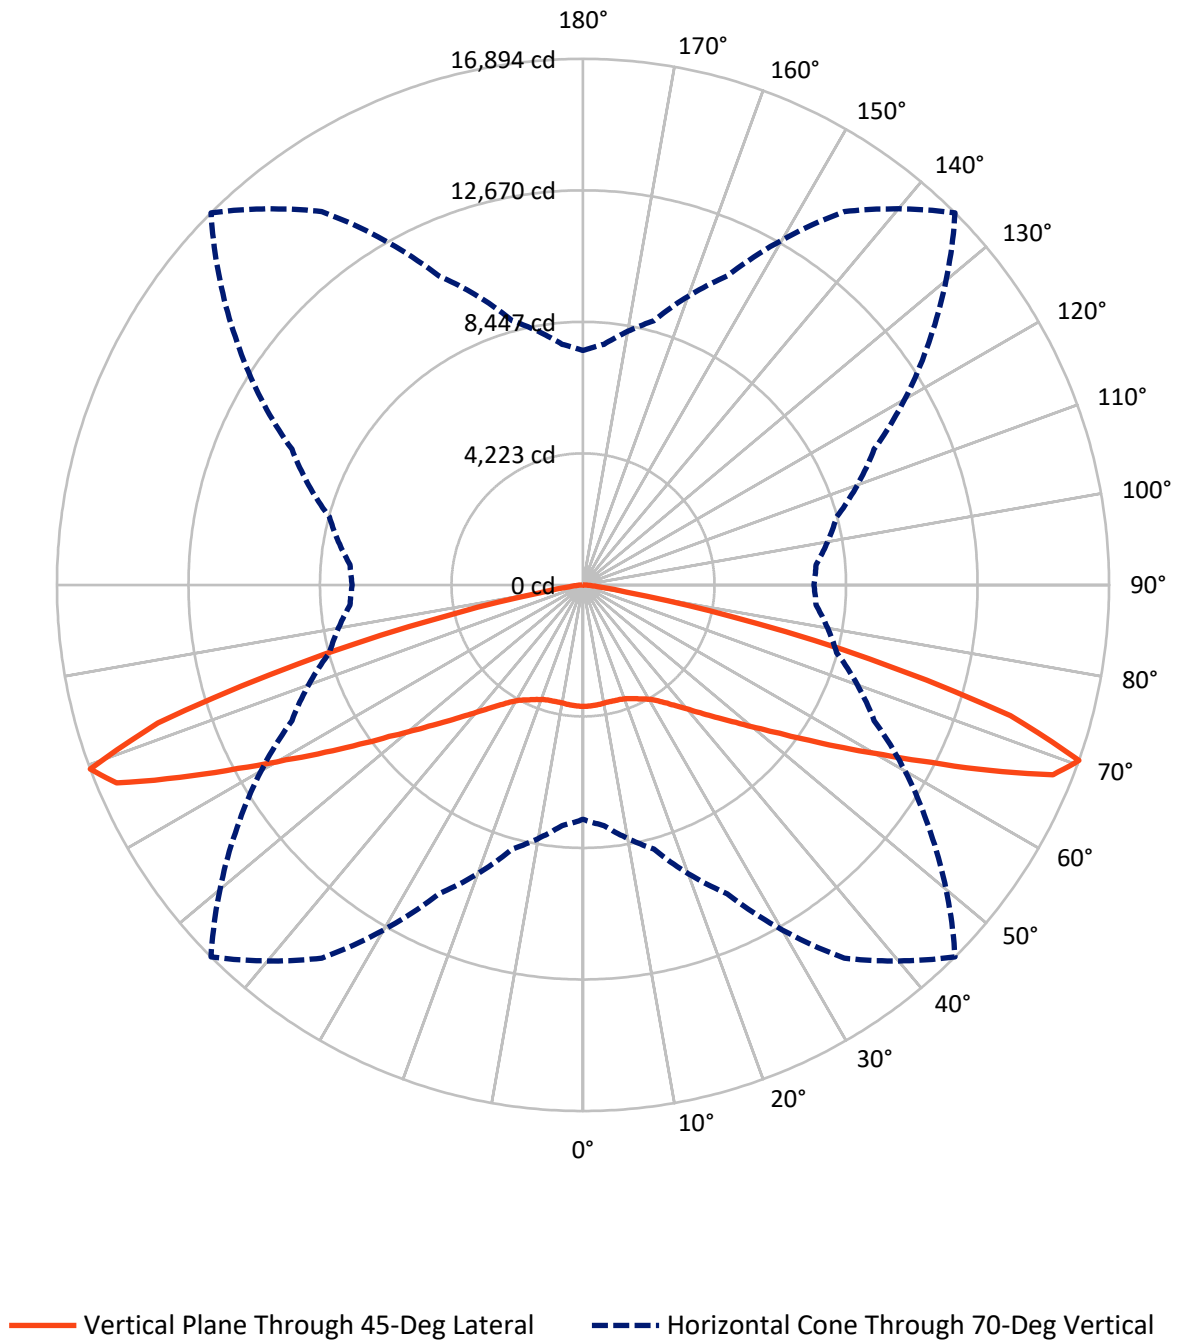

REPORT NUMBER: P316432

CATALOG NUMBER: GLEON-SA8A-730-U-5MQ

**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total   |
|--------------------|-----------|----------|--------|---------|
| <b>House Side</b>  | Lumens    | 17865.5  | 0.0    | 17865.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Street Side</b> | Lumens    | 17865.5  | 0.0    | 17865.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Total</b>       | Lumens    | 35731.0  | 0.0    | 35731.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0   |

**ZONAL LUMENS:**

| Zone      | Lumens  | % Fixture |
|-----------|---------|-----------|
| 0°-10°    | 369.6   | 1.0       |
| 10°-20°   | 1085.0  | 3.0       |
| 20°-30°   | 1847.1  | 5.2       |
| 30°-40°   | 2929.5  | 8.2       |
| 40°-50°   | 4767.1  | 13.3      |
| 50°-60°   | 7860.2  | 22.0      |
| 60°-70°   | 11538.9 | 32.3      |
| 70°-80°   | 5102.5  | 14.3      |
| 80°-90°   | 231.1   | 0.6       |
| 90°-100°  | 0.0     | 0.0       |
| 100°-110° | 0.0     | 0.0       |
| 110°-120° | 0.0     | 0.0       |
| 120°-130° | 0.0     | 0.0       |
| 130°-140° | 0.0     | 0.0       |
| 140°-150° | 0.0     | 0.0       |
| 150°-160° | 0.0     | 0.0       |
| 160°-170° | 0.0     | 0.0       |
| 170°-180° | 0.0     | 0.0       |
| 0°-90°    | 35731.0 | 100.0     |
| 0°-180°   | 35731.0 | 100.0     |

**Coefficient of Utilization**



REPORT NUMBER: P316432


CATALOG NUMBER: GLEON-SA8A-730-U-5MQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |          |
|------|-------------|--------|-----------|-------------------------|------|----------|
|      |             |        |           | B                       | U    | G        |
| FL   | (0°-30°)    | 1650.9 | 4.6       |                         |      |          |
| FM   | (30°-60°)   | 7778.4 | 21.8      |                         |      |          |
| FH   | (60°-80°)   | 8320.7 | 23.3      |                         |      | G4/12000 |
| FVH  | (80°-90°)   | 115.5  | 0.3       |                         |      | G2/225   |
| BL   | (0°-30°)    | 1650.9 | 4.6       | B3/2500                 |      |          |
| BM   | (30°-60°)   | 7778.4 | 21.8      | B4/8500                 |      |          |
| BH   | (60°-80°)   | 8320.7 | 23.3      | B5                      |      | G4/12000 |
| BVH  | (80°-90°)   | 115.5  | 0.3       |                         |      | G2/225   |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |          |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |          |

**BUG Rating: B5-U0-G4**

Type V Short

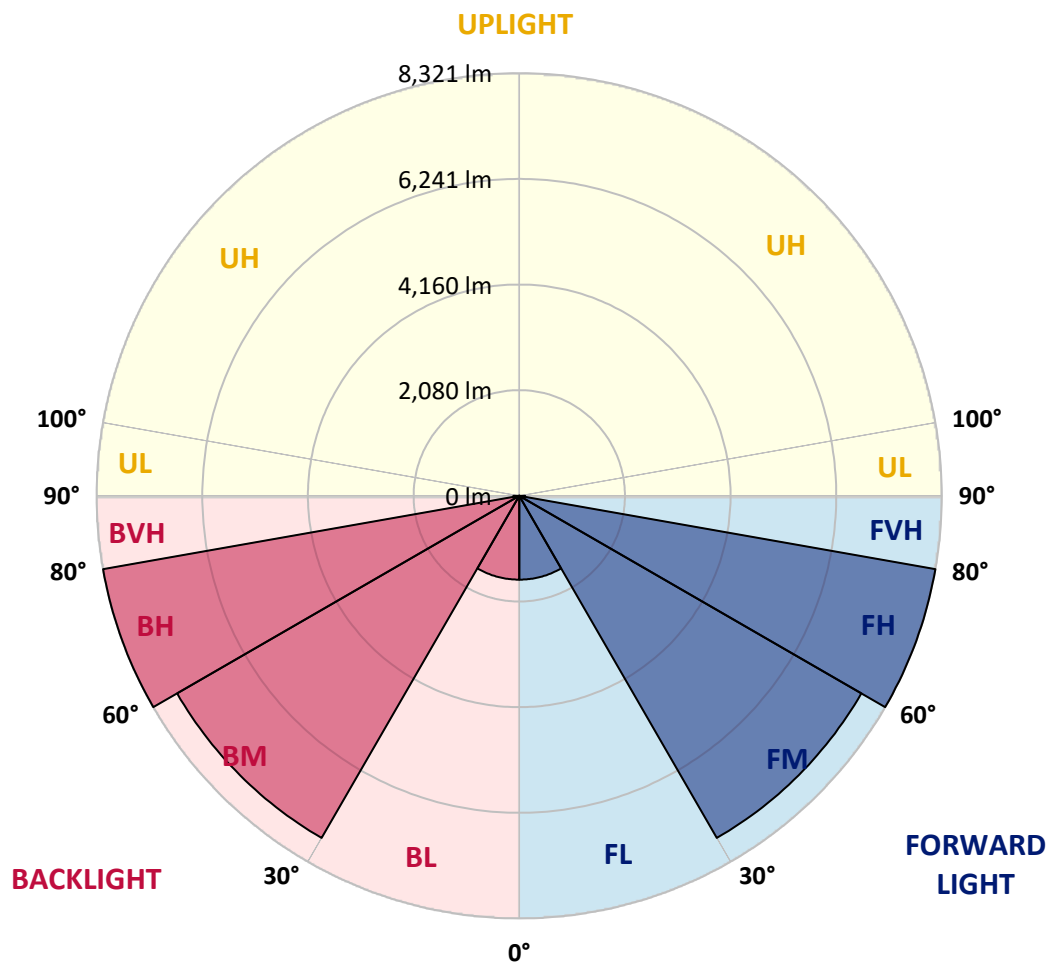

REPORT NUMBER: P316432

CATALOG NUMBER: GLEON-SA8A-730-U-5MQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°      | 5°      | 15°     | 25°     | 35°     | 45°     | 55°     | 65°     | 75°     | 85°     | 90°     |
|-------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| 0°    | 3902.4  | 3902.4  | 3902.4  | 3902.4  | 3902.4  | 3902.4  | 3902.4  | 3902.4  | 3902.4  | 3902.4  | 3902.4  |
| 2.5°  | 3896.5  | 3892.9  | 3901.2  | 3900.0  | 3892.9  | 3894.1  | 3894.1  | 3897.7  | 3897.7  | 3895.3  | 3895.3  |
| 5°    | 3882.3  | 3879.9  | 3889.4  | 3889.4  | 3882.3  | 3884.6  | 3887.0  | 3890.6  | 3889.4  | 3887.0  | 3885.8  |
| 7.5°  | 3864.5  | 3863.4  | 3872.8  | 3872.8  | 3868.1  | 3870.5  | 3868.1  | 3869.3  | 3866.9  | 3864.5  | 3861.0  |
| 10°   | 3835.0  | 3837.3  | 3845.6  | 3848.0  | 3848.0  | 3849.2  | 3846.8  | 3840.9  | 3837.3  | 3833.8  | 3830.2  |
| 12.5° | 3807.8  | 3806.6  | 3818.4  | 3824.3  | 3833.8  | 3844.4  | 3837.3  | 3820.8  | 3813.7  | 3806.6  | 3804.2  |
| 15°   | 3790.0  | 3791.2  | 3803.0  | 3813.7  | 3830.2  | 3852.7  | 3844.4  | 3818.4  | 3804.2  | 3796.0  | 3793.6  |
| 17.5° | 3786.5  | 3788.9  | 3804.2  | 3823.2  | 3840.9  | 3865.7  | 3861.0  | 3835.0  | 3811.3  | 3796.0  | 3792.4  |
| 20°   | 3794.8  | 3796.0  | 3819.6  | 3846.8  | 3877.5  | 3901.2  | 3890.6  | 3862.2  | 3830.2  | 3806.6  | 3800.7  |
| 22.5° | 3810.1  | 3814.9  | 3844.4  | 3887.0  | 3934.3  | 3966.2  | 3953.2  | 3904.7  | 3855.1  | 3825.5  | 3817.2  |
| 25°   | 3858.6  | 3859.8  | 3900.0  | 3958.0  | 4014.7  | 4051.4  | 4036.0  | 3967.4  | 3903.6  | 3870.5  | 3859.8  |
| 27.5° | 3959.1  | 3962.7  | 4002.9  | 4070.3  | 4118.8  | 4142.4  | 4133.0  | 4077.4  | 4023.0  | 3987.5  | 3991.1  |
| 30°   | 4104.6  | 4109.3  | 4154.3  | 4228.8  | 4258.3  | 4264.2  | 4261.9  | 4235.9  | 4186.2  | 4138.9  | 4142.4  |
| 32.5° | 4282.0  | 4284.3  | 4344.7  | 4412.1  | 4435.7  | 4440.4  | 4435.7  | 4412.1  | 4352.9  | 4289.1  | 4292.6  |
| 35°   | 4510.2  | 4517.3  | 4575.2  | 4640.3  | 4659.2  | 4668.7  | 4660.4  | 4629.6  | 4568.2  | 4505.5  | 4503.1  |
| 37.5° | 4791.7  | 4792.8  | 4853.1  | 4920.5  | 4944.2  | 4946.6  | 4937.1  | 4917.0  | 4840.1  | 4783.4  | 4779.8  |
| 40°   | 5118.0  | 5122.8  | 5193.7  | 5265.8  | 5275.3  | 5264.7  | 5277.7  | 5265.8  | 5186.6  | 5121.6  | 5132.2  |
| 42.5° | 5515.4  | 5526.0  | 5611.2  | 5682.1  | 5654.9  | 5649.0  | 5657.3  | 5660.8  | 5597.0  | 5517.7  | 5510.6  |
| 45°   | 5977.7  | 5987.2  | 6093.6  | 6150.4  | 6132.7  | 6093.6  | 6110.2  | 6138.6  | 6049.9  | 5951.7  | 5961.2  |
| 47.5° | 6505.2  | 6528.8  | 6642.3  | 6695.5  | 6651.8  | 6598.6  | 6630.5  | 6673.1  | 6569.0  | 6447.2  | 6441.3  |
| 50°   | 7091.7  | 7121.3  | 7272.6  | 7347.1  | 7303.4  | 7205.2  | 7258.4  | 7286.8  | 7136.6  | 6979.3  | 6966.3  |
| 52.5° | 7717.3  | 7746.8  | 7937.2  | 8090.9  | 8062.6  | 7910.0  | 7984.5  | 7954.9  | 7782.3  | 7570.6  | 7554.1  |
| 55°   | 8425.6  | 8437.4  | 8643.2  | 8891.5  | 8919.9  | 8807.6  | 8802.8  | 8754.3  | 8498.9  | 8254.1  | 8242.3  |
| 57.5° | 9154.0  | 9162.3  | 9428.4  | 9721.7  | 9855.3  | 9855.3  | 9722.8  | 9620.0  | 9280.6  | 8996.8  | 8967.2  |
| 60°   | 9940.4  | 9970.0  | 10264.4 | 10663.0 | 10975.2 | 11067.4 | 10833.2 | 10553.0 | 10184.0 | 9837.5  | 9803.3  |
| 62.5° | 10640.5 | 10674.8 | 11125.3 | 11719.0 | 12220.4 | 12556.2 | 11983.9 | 11527.4 | 10855.7 | 10299.9 | 10234.9 |
| 65°   | 10729.2 | 10821.4 | 11477.7 | 12552.7 | 13674.9 | 14345.4 | 13248.0 | 12123.4 | 10899.5 | 10127.3 | 10061.0 |
| 67.5° | 9798.5  | 9954.6  | 10841.5 | 12514.8 | 14833.8 | 16272.9 | 14055.7 | 11782.8 | 10114.3 | 9260.5  | 9187.2  |
| 70°   | 7529.2  | 7756.3  | 8779.2  | 10946.8 | 14633.9 | 16893.8 | 13549.5 | 10315.3 | 8432.7  | 7513.9  | 7411.0  |
| 72.5° | 4130.6  | 4224.0  | 5144.0  | 7496.1  | 11732.0 | 14356.0 | 11301.5 | 7627.4  | 5592.2  | 4550.4  | 4377.8  |
| 75°   | 1310.3  | 1343.4  | 1811.7  | 3067.5  | 6636.4  | 9508.8  | 7179.2  | 3743.9  | 2061.2  | 1519.6  | 1501.8  |
| 77.5° | 581.8   | 585.4   | 655.1   | 895.2   | 2285.8  | 4817.7  | 2745.9  | 1019.3  | 702.4   | 613.7   | 633.8   |
| 80°   | 367.8   | 367.8   | 405.6   | 443.5   | 622.0   | 1398.9  | 742.6   | 484.8   | 413.9   | 384.3   | 392.6   |
| 82.5° | 176.2   | 195.1   | 263.7   | 283.8   | 341.8   | 470.7   | 380.8   | 316.9   | 276.7   | 205.8   | 191.6   |
| 85°   | 115.9   | 97.0    | 166.7   | 188.0   | 198.7   | 225.9   | 221.1   | 209.3   | 180.9   | 102.9   | 114.7   |
| 87.5° | 52.0    | 49.7    | 86.3    | 79.2    | 74.5    | 56.8    | 85.1    | 105.2   | 101.7   | 50.8    | 50.8    |
| 90°   | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     |

LM-79-2008: Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGRAW-EDISON

Report Number: SP1-1908-441-2-R4

Test Date: 10/03/2019

Luminaire Tested: SA1C-730-U-5WQ

Data in this report applies to families of products SA1C-730-U-5WQ .


### Test Information

Test Method: LM-79-2008  
 Report Number: SP1-1908-441-2-R4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/28/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: MCGRAW-EDISON  
 Catalog Number: **SA1C-730-U-5WQ**  
 Description: MCGRAW EDISON ROADWAY AND AREA LUMINAIRE

\*\*\*THIS IS A REVISION OF SP1-1908-441-2-R3. TO UPDATE THE CATALOG INFORMATION.\*\*\*TESTED IN SITU. (1) 70 CRI, 3000K, 1050MA LIGHTSQUARE WITH 16 LEDS AND TYPE V WIDE OPTICS.

### Spectral Parameters

|                           |        |           |      |      |       |
|---------------------------|--------|-----------|------|------|-------|
| CCT (K):                  | 2993   | CRI (Ra): | 71.8 |      |       |
| CIE u':                   | 0.2508 | R1:       | 67.5 | R9:  | -38.3 |
| CIE v':                   | 0.5215 | R2:       | 82.9 | R10: | 62.5  |
| Duv:                      | 0.0000 | R3:       | 94.7 | R11: | 63.7  |
| CIE x:                    | 0.4374 | R4:       | 67.7 | R12: | 57.8  |
| CIE y:                    | 0.4043 | R5:       | 67.9 | R13: | 70.4  |
| CIE z:                    | 0.1583 | R6:       | 77.6 | R14: | 97.3  |
| Peak Wavelength (nm):     | 593    | R7:       | 76.0 |      |       |
| Dominant Wavelength (nm): | 582    | R8:       | 40.5 |      |       |
| Purity:                   | 53     |           |      |      |       |
| Rf:                       | 75.7   |           |      |      |       |
| Rg:                       | 93.9   |           |      |      |       |

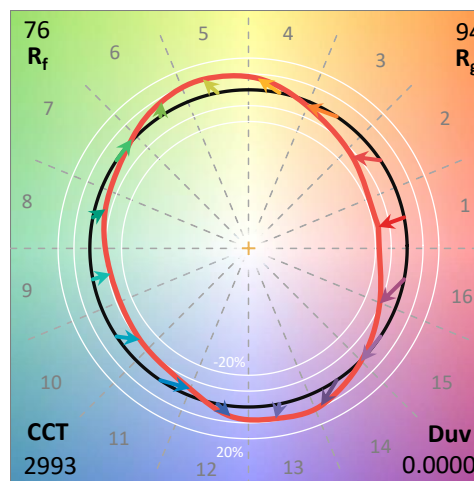

### Test Conditions


Stabilization Time: 53M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 25.0./44%  
 Sphere Temperature (°C): 25.7

REPORT NUMBER: SP1-1908-441-2-R4


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/28/2019        | 12/28/2019           |
| Power Meter                    | IN0071                | 12/5/2018        | 12/5/2019            |
| AC Power Source                | IN0063                | 12/5/2018        | 12/5/2019            |
| DC Power Source                | IN0208                | 12/5/2018        | 12/5/2019            |
| Sphere Thermometer             | IN0085                | 12/5/2018        | 12/5/2019            |
| Room Thermometer               | IN0046                | 12/5/2018        | 12/5/2019            |

REPORT NUMBER: SP1-1908-441-2-R4

CIE 1931 Chromaticity Diagram

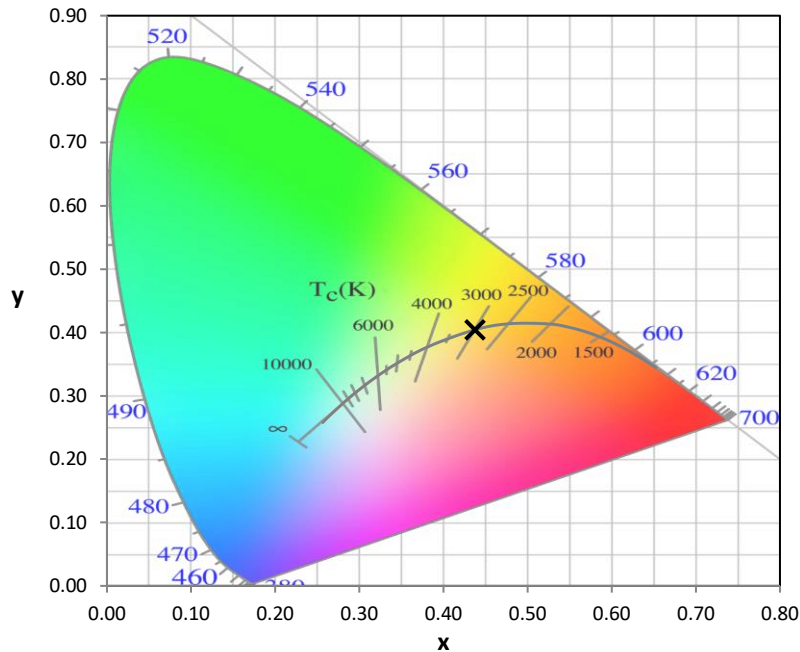


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

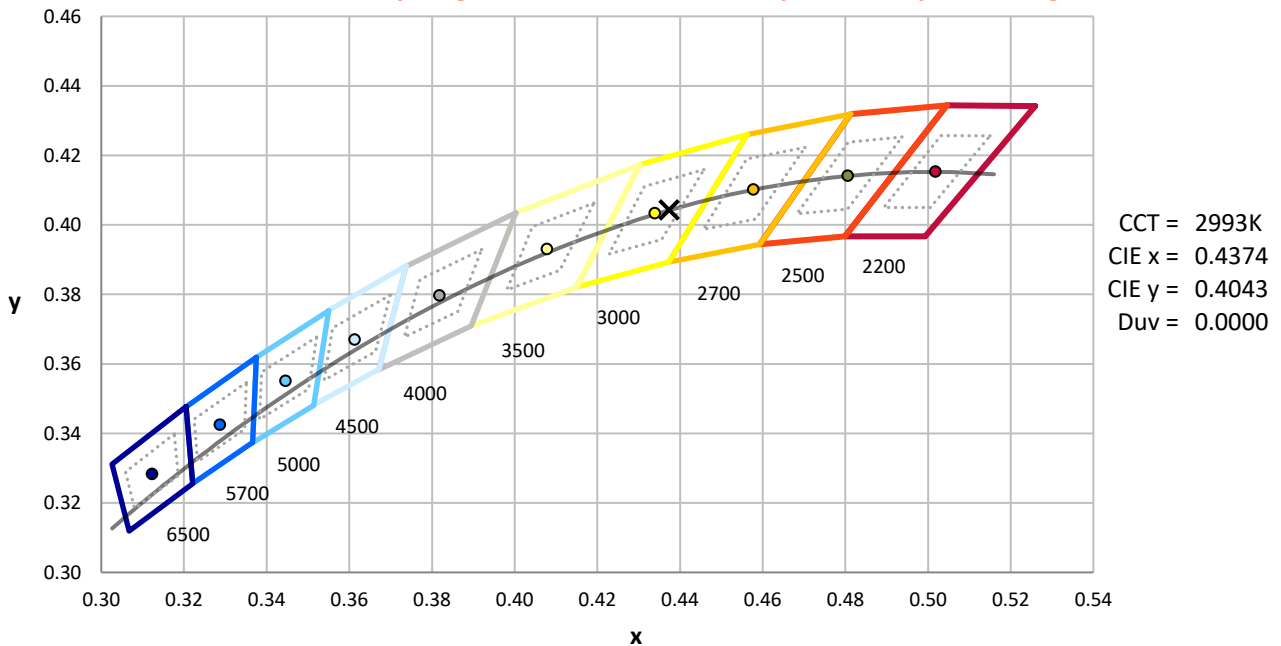

Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-1908-441-2-R4

**Photopic Flux vs. Wavelength**

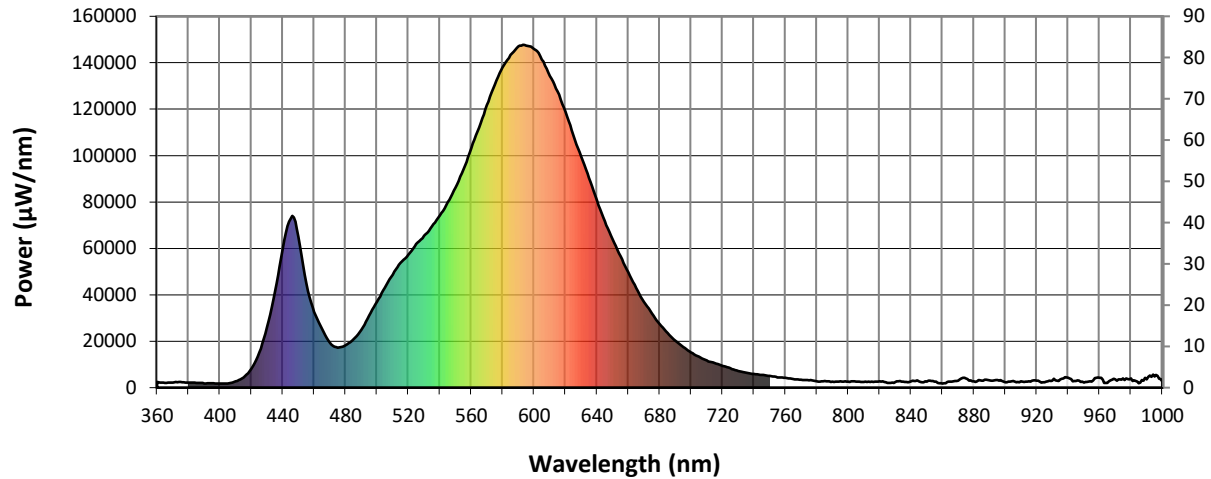


#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2397             | NR               | 490       | 24908            | NR               | 620       | 118784           | NR               | 750       | 5037             | NR               | 880       | 2677             | NR               |
| 365       | 2084             | NR               | 495       | 30998            | NR               | 625       | 108951           | NR               | 755       | 4413             | NR               | 885       | 2940             | NR               |
| 370       | 2143             | NR               | 500       | 37103            | NR               | 630       | 99573            | NR               | 760       | 4189             | NR               | 890       | 3116             | NR               |
| 375       | 2413             | NR               | 505       | 42987            | NR               | 635       | 90444            | NR               | 765       | 3677             | NR               | 895       | 3345             | NR               |
| 380       | 2172             | NR               | 510       | 48702            | NR               | 640       | 80749            | NR               | 770       | 3366             | NR               | 900       | 2312             | NR               |
| 385       | 1997             | NR               | 515       | 53741            | NR               | 645       | 71664            | NR               | 775       | 3211             | NR               | 905       | 2829             | NR               |
| 390       | 1830             | NR               | 520       | 57283            | NR               | 650       | 63936            | NR               | 780       | 2682             | NR               | 910       | 2783             | NR               |
| 395       | 1861             | NR               | 525       | 61876            | NR               | 655       | 56611            | NR               | 785       | 2804             | NR               | 915       | 2662             | NR               |
| 400       | 1717             | NR               | 530       | 65398            | NR               | 660       | 49763            | NR               | 790       | 2581             | NR               | 920       | 3047             | NR               |
| 405       | 1761             | NR               | 535       | 69597            | NR               | 665       | 42891            | NR               | 795       | 2711             | NR               | 925       | 2256             | NR               |
| 410       | 2680             | NR               | 540       | 74214            | NR               | 670       | 36939            | NR               | 800       | 2609             | NR               | 930       | 2976             | NR               |
| 415       | 4374             | NR               | 545       | 79911            | NR               | 675       | 31946            | NR               | 805       | 2581             | NR               | 935       | 3503             | NR               |
| 420       | 8071             | NR               | 550       | 86153            | NR               | 680       | 27385            | NR               | 810       | 2404             | NR               | 940       | 4226             | NR               |
| 425       | 15169            | NR               | 555       | 93952            | NR               | 685       | 23504            | NR               | 815       | 2556             | NR               | 945       | 2930             | NR               |
| 430       | 26038            | NR               | 560       | 102904           | NR               | 690       | 20210            | NR               | 820       | 2742             | NR               | 950       | 2115             | NR               |
| 435       | 41316            | NR               | 565       | 112009           | NR               | 695       | 17459            | NR               | 825       | 2014             | NR               | 955       | 2634             | NR               |
| 440       | 59674            | NR               | 570       | 121662           | NR               | 700       | 15207            | NR               | 830       | 2488             | NR               | 960       | 4200             | NR               |
| 445       | 72751            | NR               | 575       | 130476           | NR               | 705       | 13322            | NR               | 835       | 2625             | NR               | 965       | 1982             | NR               |
| 450       | 65091            | NR               | 580       | 137926           | NR               | 710       | 11676            | NR               | 840       | 2754             | NR               | 970       | 3613             | NR               |
| 455       | 44894            | NR               | 585       | 143406           | NR               | 715       | 10626            | NR               | 845       | 2708             | NR               | 975       | 4034             | NR               |
| 460       | 32712            | NR               | 590       | 147039           | NR               | 720       | 9416             | NR               | 850       | 2608             | NR               | 980       | 3922             | NR               |
| 465       | 25296            | NR               | 595       | 147365           | NR               | 725       | 8333             | NR               | 855       | 2605             | NR               | 985       | 1909             | NR               |
| 470       | 19318            | NR               | 600       | 145800           | NR               | 730       | 7134             | NR               | 860       | 1765             | NR               | 990       | 3617             | NR               |
| 475       | 17265            | NR               | 605       | 141363           | NR               | 735       | 6437             | NR               | 865       | 2581             | NR               | 995       | 4767             | NR               |
| 480       | 18260            | NR               | 610       | 134199           | NR               | 740       | 5834             | NR               | 870       | 3016             | NR               | 1000      | 2528             | NR               |
| 485       | 20845            | NR               | 615       | 127683           | NR               | 745       | 5500             | NR               | 875       | 3952             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-2-R4

Scotopic Flux vs. Wavelength

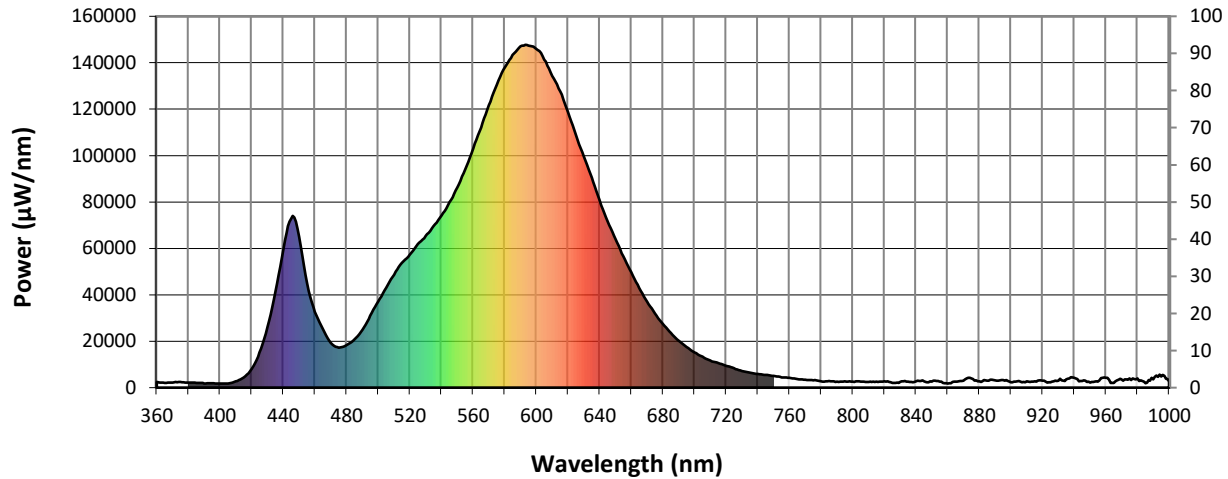


Scotopic Lumens: 8494.8

S/P: 1.23

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2397             | NR               | 490       | 24908            | NR               | 620       | 118784           | NR               | 750       | 5037             | NR               | 880       | 2677             | NR               |
| 365       | 2084             | NR               | 495       | 30998            | NR               | 625       | 108951           | NR               | 755       | 4413             | NR               | 885       | 2940             | NR               |
| 370       | 2143             | NR               | 500       | 37103            | NR               | 630       | 99573            | NR               | 760       | 4189             | NR               | 890       | 3116             | NR               |
| 375       | 2413             | NR               | 505       | 42987            | NR               | 635       | 90444            | NR               | 765       | 3677             | NR               | 895       | 3345             | NR               |
| 380       | 2172             | NR               | 510       | 48702            | NR               | 640       | 80749            | NR               | 770       | 3366             | NR               | 900       | 2312             | NR               |
| 385       | 1997             | NR               | 515       | 53741            | NR               | 645       | 71664            | NR               | 775       | 3211             | NR               | 905       | 2829             | NR               |
| 390       | 1830             | NR               | 520       | 57283            | NR               | 650       | 63936            | NR               | 780       | 2682             | NR               | 910       | 2783             | NR               |
| 395       | 1861             | NR               | 525       | 61876            | NR               | 655       | 56611            | NR               | 785       | 2804             | NR               | 915       | 2662             | NR               |
| 400       | 1717             | NR               | 530       | 65398            | NR               | 660       | 49763            | NR               | 790       | 2581             | NR               | 920       | 3047             | NR               |
| 405       | 1761             | NR               | 535       | 69597            | NR               | 665       | 42891            | NR               | 795       | 2711             | NR               | 925       | 2256             | NR               |
| 410       | 2680             | NR               | 540       | 74214            | NR               | 670       | 36939            | NR               | 800       | 2609             | NR               | 930       | 2976             | NR               |
| 415       | 4374             | NR               | 545       | 79911            | NR               | 675       | 31946            | NR               | 805       | 2581             | NR               | 935       | 3503             | NR               |
| 420       | 8071             | NR               | 550       | 86153            | NR               | 680       | 27385            | NR               | 810       | 2404             | NR               | 940       | 4226             | NR               |
| 425       | 15169            | NR               | 555       | 93952            | NR               | 685       | 23504            | NR               | 815       | 2556             | NR               | 945       | 2930             | NR               |
| 430       | 26038            | NR               | 560       | 102904           | NR               | 690       | 20210            | NR               | 820       | 2742             | NR               | 950       | 2115             | NR               |
| 435       | 41316            | NR               | 565       | 112009           | NR               | 695       | 17459            | NR               | 825       | 2014             | NR               | 955       | 2634             | NR               |
| 440       | 59674            | NR               | 570       | 121662           | NR               | 700       | 15207            | NR               | 830       | 2488             | NR               | 960       | 4200             | NR               |
| 445       | 72751            | NR               | 575       | 130476           | NR               | 705       | 13322            | NR               | 835       | 2625             | NR               | 965       | 1982             | NR               |
| 450       | 65091            | NR               | 580       | 137926           | NR               | 710       | 11676            | NR               | 840       | 2754             | NR               | 970       | 3613             | NR               |
| 455       | 44894            | NR               | 585       | 143406           | NR               | 715       | 10626            | NR               | 845       | 2708             | NR               | 975       | 4034             | NR               |
| 460       | 32712            | NR               | 590       | 147039           | NR               | 720       | 9416             | NR               | 850       | 2608             | NR               | 980       | 3922             | NR               |
| 465       | 25296            | NR               | 595       | 147365           | NR               | 725       | 8333             | NR               | 855       | 2605             | NR               | 985       | 1909             | NR               |
| 470       | 19318            | NR               | 600       | 145800           | NR               | 730       | 7134             | NR               | 860       | 1765             | NR               | 990       | 3617             | NR               |
| 475       | 17265            | NR               | 605       | 141363           | NR               | 735       | 6437             | NR               | 865       | 2581             | NR               | 995       | 4767             | NR               |
| 480       | 18260            | NR               | 610       | 134199           | NR               | 740       | 5834             | NR               | 870       | 3016             | NR               | 1000      | 2528             | NR               |
| 485       | 20845            | NR               | 615       | 127683           | NR               | 745       | 5500             | NR               | 875       | 3952             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-2-R4

**Melanopic Flux vs. Wavelength**

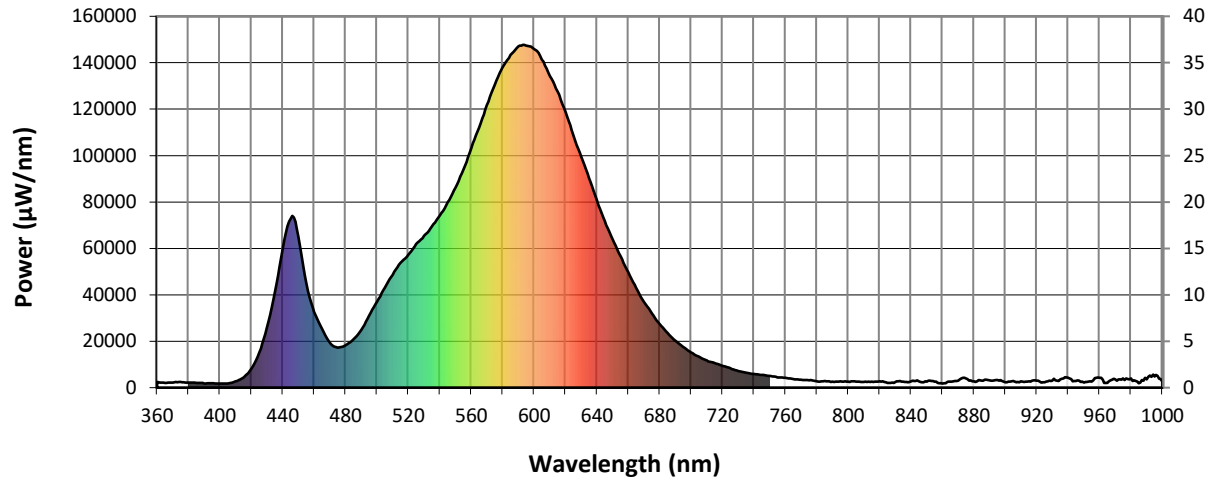

**Melanopic Lumens: 3101.5**

**M/P: 0.45**


| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2397             | NR               | 490       | 24908            | NR               | 620       | 118784           | NR               | 750       | 5037             | NR               | 880       | 2677             | NR               |
| 365       | 2084             | NR               | 495       | 30998            | NR               | 625       | 108951           | NR               | 755       | 4413             | NR               | 885       | 2940             | NR               |
| 370       | 2143             | NR               | 500       | 37103            | NR               | 630       | 99573            | NR               | 760       | 4189             | NR               | 890       | 3116             | NR               |
| 375       | 2413             | NR               | 505       | 42987            | NR               | 635       | 90444            | NR               | 765       | 3677             | NR               | 895       | 3345             | NR               |
| 380       | 2172             | NR               | 510       | 48702            | NR               | 640       | 80749            | NR               | 770       | 3366             | NR               | 900       | 2312             | NR               |
| 385       | 1997             | NR               | 515       | 53741            | NR               | 645       | 71664            | NR               | 775       | 3211             | NR               | 905       | 2829             | NR               |
| 390       | 1830             | NR               | 520       | 57283            | NR               | 650       | 63936            | NR               | 780       | 2682             | NR               | 910       | 2783             | NR               |
| 395       | 1861             | NR               | 525       | 61876            | NR               | 655       | 56611            | NR               | 785       | 2804             | NR               | 915       | 2662             | NR               |
| 400       | 1717             | NR               | 530       | 65398            | NR               | 660       | 49763            | NR               | 790       | 2581             | NR               | 920       | 3047             | NR               |
| 405       | 1761             | NR               | 535       | 69597            | NR               | 665       | 42891            | NR               | 795       | 2711             | NR               | 925       | 2256             | NR               |
| 410       | 2680             | NR               | 540       | 74214            | NR               | 670       | 36939            | NR               | 800       | 2609             | NR               | 930       | 2976             | NR               |
| 415       | 4374             | NR               | 545       | 79911            | NR               | 675       | 31946            | NR               | 805       | 2581             | NR               | 935       | 3503             | NR               |
| 420       | 8071             | NR               | 550       | 86153            | NR               | 680       | 27385            | NR               | 810       | 2404             | NR               | 940       | 4226             | NR               |
| 425       | 15169            | NR               | 555       | 93952            | NR               | 685       | 23504            | NR               | 815       | 2556             | NR               | 945       | 2930             | NR               |
| 430       | 26038            | NR               | 560       | 102904           | NR               | 690       | 20210            | NR               | 820       | 2742             | NR               | 950       | 2115             | NR               |
| 435       | 41316            | NR               | 565       | 112009           | NR               | 695       | 17459            | NR               | 825       | 2014             | NR               | 955       | 2634             | NR               |
| 440       | 59674            | NR               | 570       | 121662           | NR               | 700       | 15207            | NR               | 830       | 2488             | NR               | 960       | 4200             | NR               |
| 445       | 72751            | NR               | 575       | 130476           | NR               | 705       | 13322            | NR               | 835       | 2625             | NR               | 965       | 1982             | NR               |
| 450       | 65091            | NR               | 580       | 137926           | NR               | 710       | 11676            | NR               | 840       | 2754             | NR               | 970       | 3613             | NR               |
| 455       | 44894            | NR               | 585       | 143406           | NR               | 715       | 10626            | NR               | 845       | 2708             | NR               | 975       | 4034             | NR               |
| 460       | 32712            | NR               | 590       | 147039           | NR               | 720       | 9416             | NR               | 850       | 2608             | NR               | 980       | 3922             | NR               |
| 465       | 25296            | NR               | 595       | 147365           | NR               | 725       | 8333             | NR               | 855       | 2605             | NR               | 985       | 1909             | NR               |
| 470       | 19318            | NR               | 600       | 145800           | NR               | 730       | 7134             | NR               | 860       | 1765             | NR               | 990       | 3617             | NR               |
| 475       | 17265            | NR               | 605       | 141363           | NR               | 735       | 6437             | NR               | 865       | 2581             | NR               | 995       | 4767             | NR               |
| 480       | 18260            | NR               | 610       | 134199           | NR               | 740       | 5834             | NR               | 870       | 3016             | NR               | 1000      | 2528             | NR               |
| 485       | 20845            | NR               | 615       | 127683           | NR               | 745       | 5500             | NR               | 875       | 3952             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-2-R4





**TM-30-18**

**Summary**

$R_f = 75.7$   
 $R_g = 93.9$   
 CIE  $R_a = 71.8$   
 $R_g = -38.3$

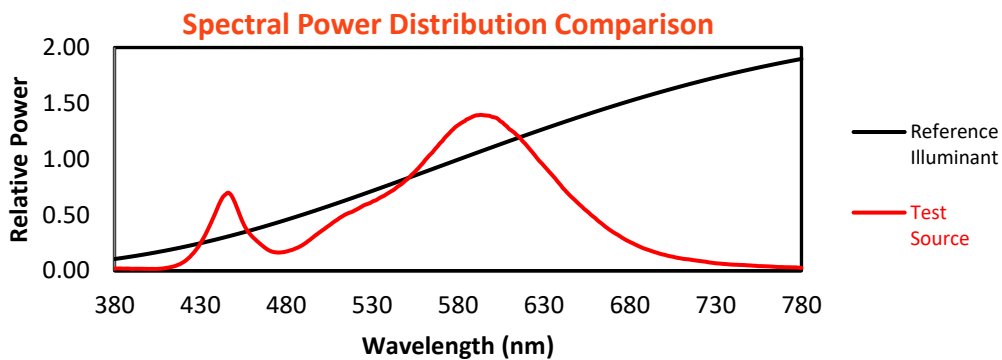

**Color Vector Graphics**

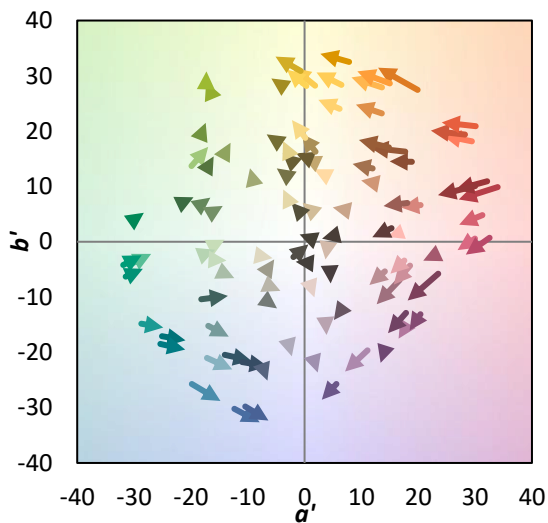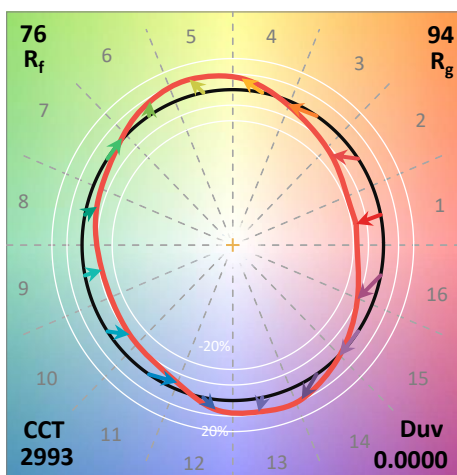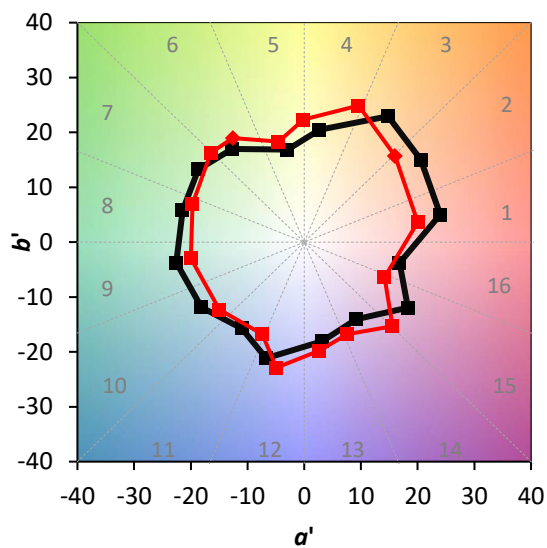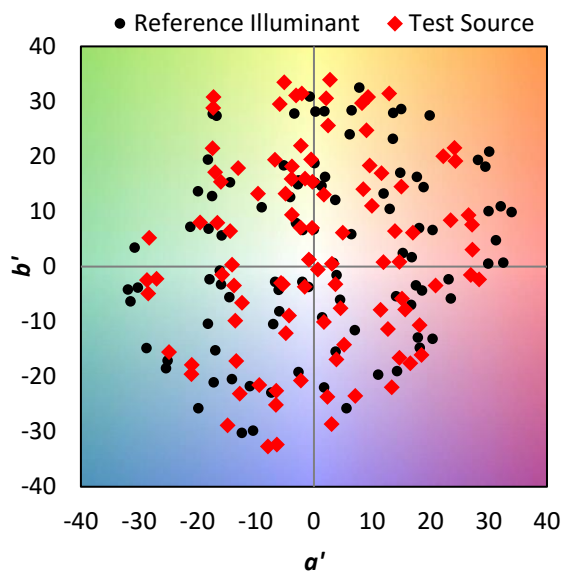


REPORT NUMBER: SP1-1908-441-2-R4

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**




|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 67 | CES51 = 87 | CES76 = 63 |
| CES02 = 63 | CES27 = 88 | CES52 = 86 | CES77 = 80 |
| CES03 = 31 | CES28 = 87 | CES53 = 78 | CES78 = 67 |
| CES04 = 71 | CES29 = 66 | CES54 = 84 | CES79 = 87 |
| CES05 = 49 | CES30 = 73 | CES55 = 84 | CES80 = 86 |
| CES06 = 51 | CES31 = 70 | CES56 = 75 | CES81 = 71 |
| CES07 = 41 | CES32 = 65 | CES57 = 74 | CES82 = 94 |
| CES08 = 40 | CES33 = 73 | CES58 = 76 | CES83 = 90 |
| CES09 = 29 | CES34 = 79 | CES59 = 85 | CES84 = 89 |
| CES10 = 76 | CES35 = 89 | CES60 = 93 | CES85 = 77 |
| CES11 = 59 | CES36 = 97 | CES61 = 84 | CES86 = 61 |
| CES12 = 65 | CES37 = 87 | CES62 = 91 | CES87 = 78 |
| CES13 = 43 | CES38 = 81 | CES63 = 77 | CES88 = 77 |
| CES14 = 74 | CES39 = 95 | CES64 = 72 | CES89 = 67 |
| CES15 = 71 | CES40 = 92 | CES65 = 68 | CES90 = 76 |
| CES16 = 47 | CES41 = 88 | CES66 = 69 | CES91 = 89 |
| CES17 = 50 | CES42 = 89 | CES67 = 67 | CES92 = 58 |
| CES18 = 56 | CES43 = 79 | CES68 = 72 | CES93 = 74 |
| CES19 = 73 | CES44 = 99 | CES69 = 81 | CES94 = 49 |
| CES20 = 66 | CES45 = 85 | CES70 = 66 | CES95 = 68 |
| CES21 = 87 | CES46 = 80 | CES71 = 67 | CES96 = 76 |
| CES22 = 79 | CES47 = 82 | CES72 = 88 | CES97 = 82 |
| CES23 = 92 | CES48 = 69 | CES73 = 59 | CES98 = 75 |
| CES24 = 91 | CES49 = 80 | CES74 = 95 | CES99 = 62 |
| CES25 = 73 | CES50 = 87 | CES75 = 69 |            |

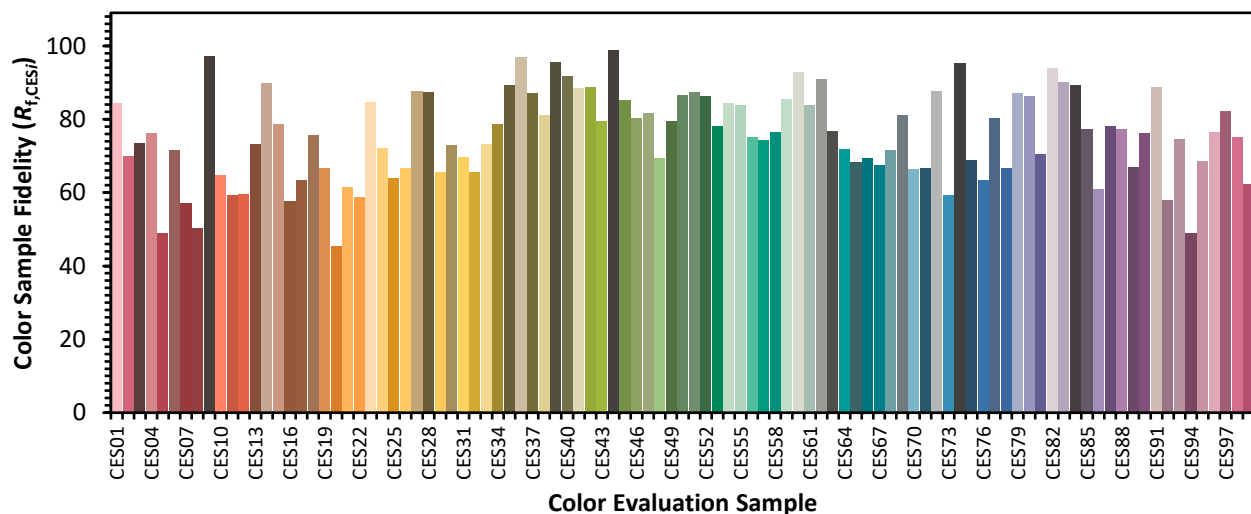

REPORT NUMBER: SP1-1908-441-2-R4

**TM-30-18**



**Color Rendition by Hue-Angle Bin**

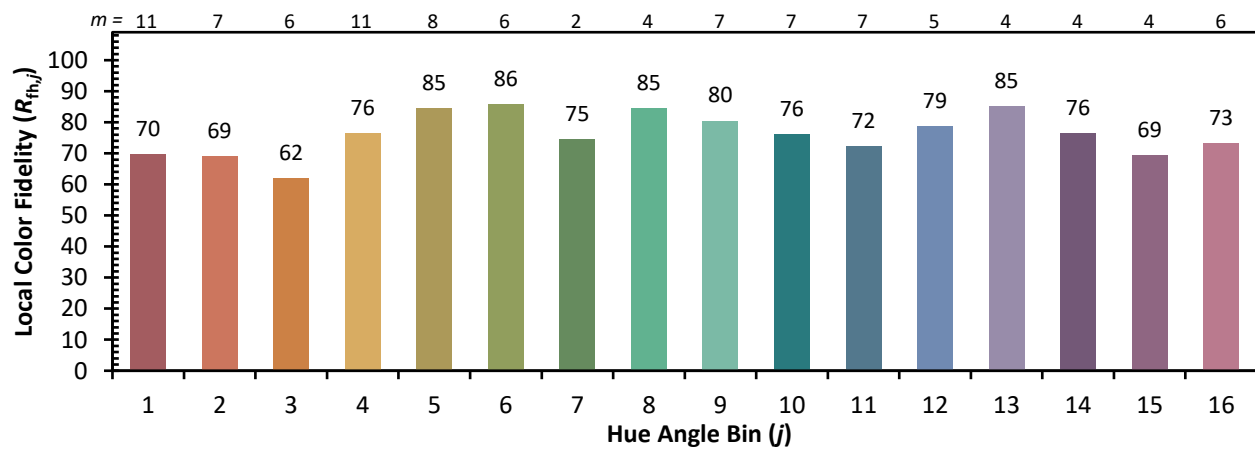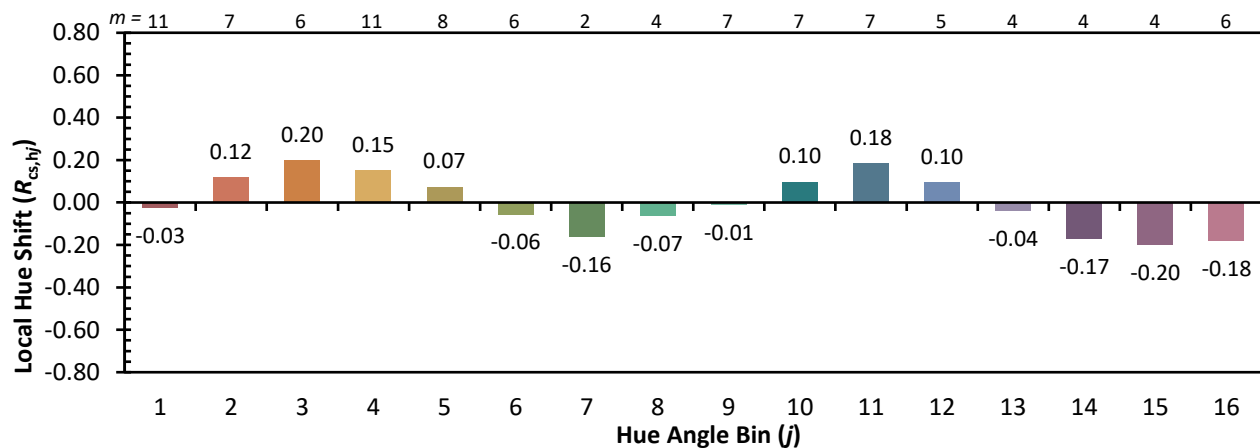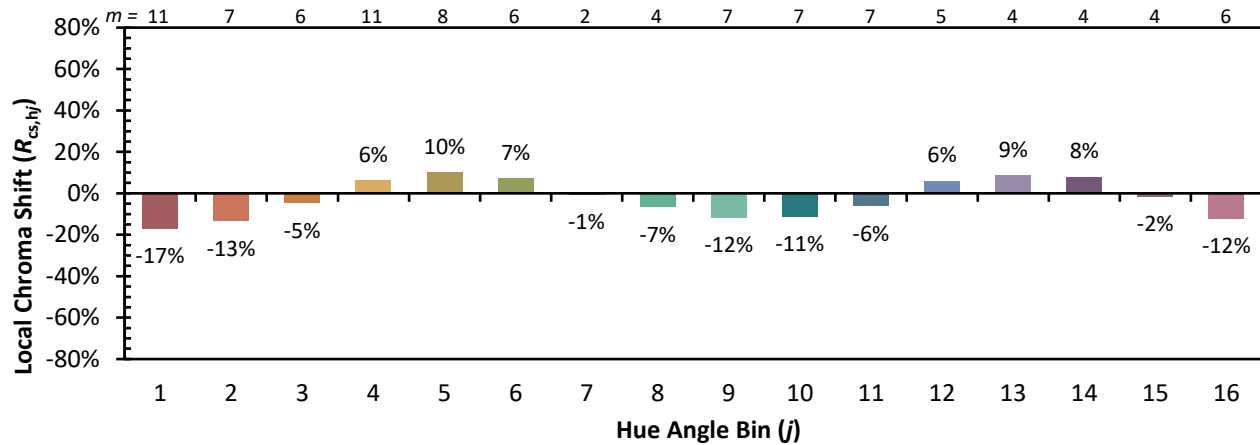

REPORT NUMBER: SP1-1908-441-2-R4

**TM-30-18**

**Measure Comparisons**

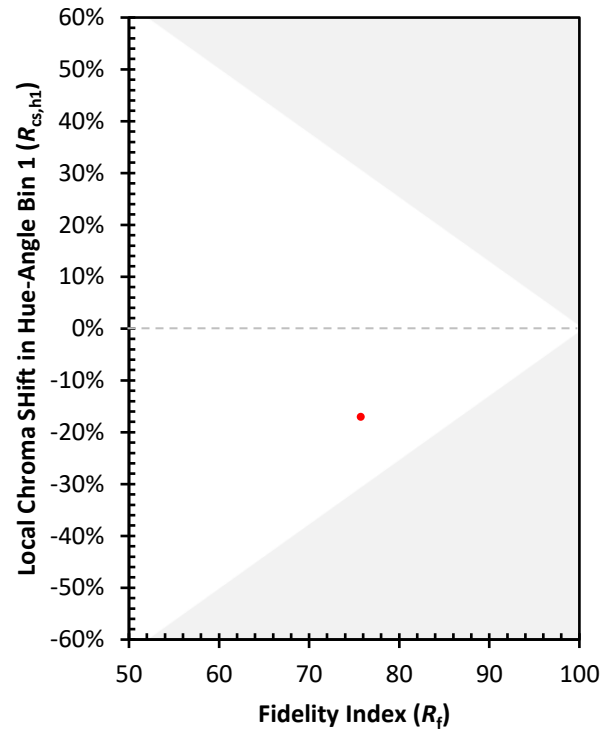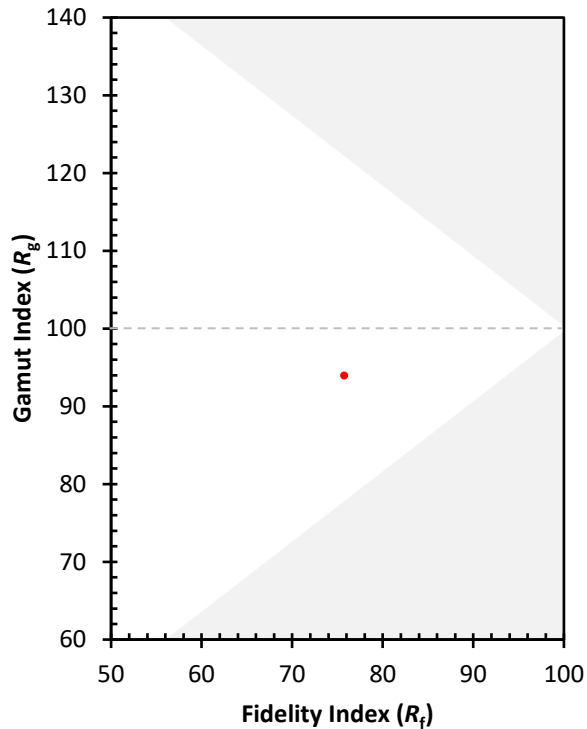

(END OF REPORT)