

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: McGRAW-EDISON

Report Number: P316834

Luminaire Tested: **GLEON-SA0A-750-U-5NQ**

Issue Date: 3/3/2020

**Test Information**

Test Method: LM-79-08  
Report Number: P316834  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-1903-205-5)  
Test Lab: INNOVATION CENTER  
Issue Date: 3/3/2020  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: McGRAW-EDISON  
Catalog Number: GLEON-SA0A-750-U-5NQ  
Description: GALLEON AREA AND ROADWAY LUMINAIRE  
(10) 70 CRI, 5000K, 615mA LIGHTSQUARES WITH 16 LEDS EACH AND TYPE V  
NARROW OPTICS  
Light Source: -  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 47580 lumens  
Efficiency: N/A  
Efficacy: 147.3 lumens/watt  
Luminous Opening: Rectangular (W 2.5' x L: 1' x H: 0')  
IES Classification: Type V - Short  
BUG Rating: B5 - U0 - G3

Input Watts (W): 323  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT




REPORT NUMBER: P316834

CATALOG NUMBER: GLEON-SA0A-750-U-5NQ

## Iso-Footcandle Lines of Horizontal Illumination


✕ Max cd  
 - - - 1/2 Max cd

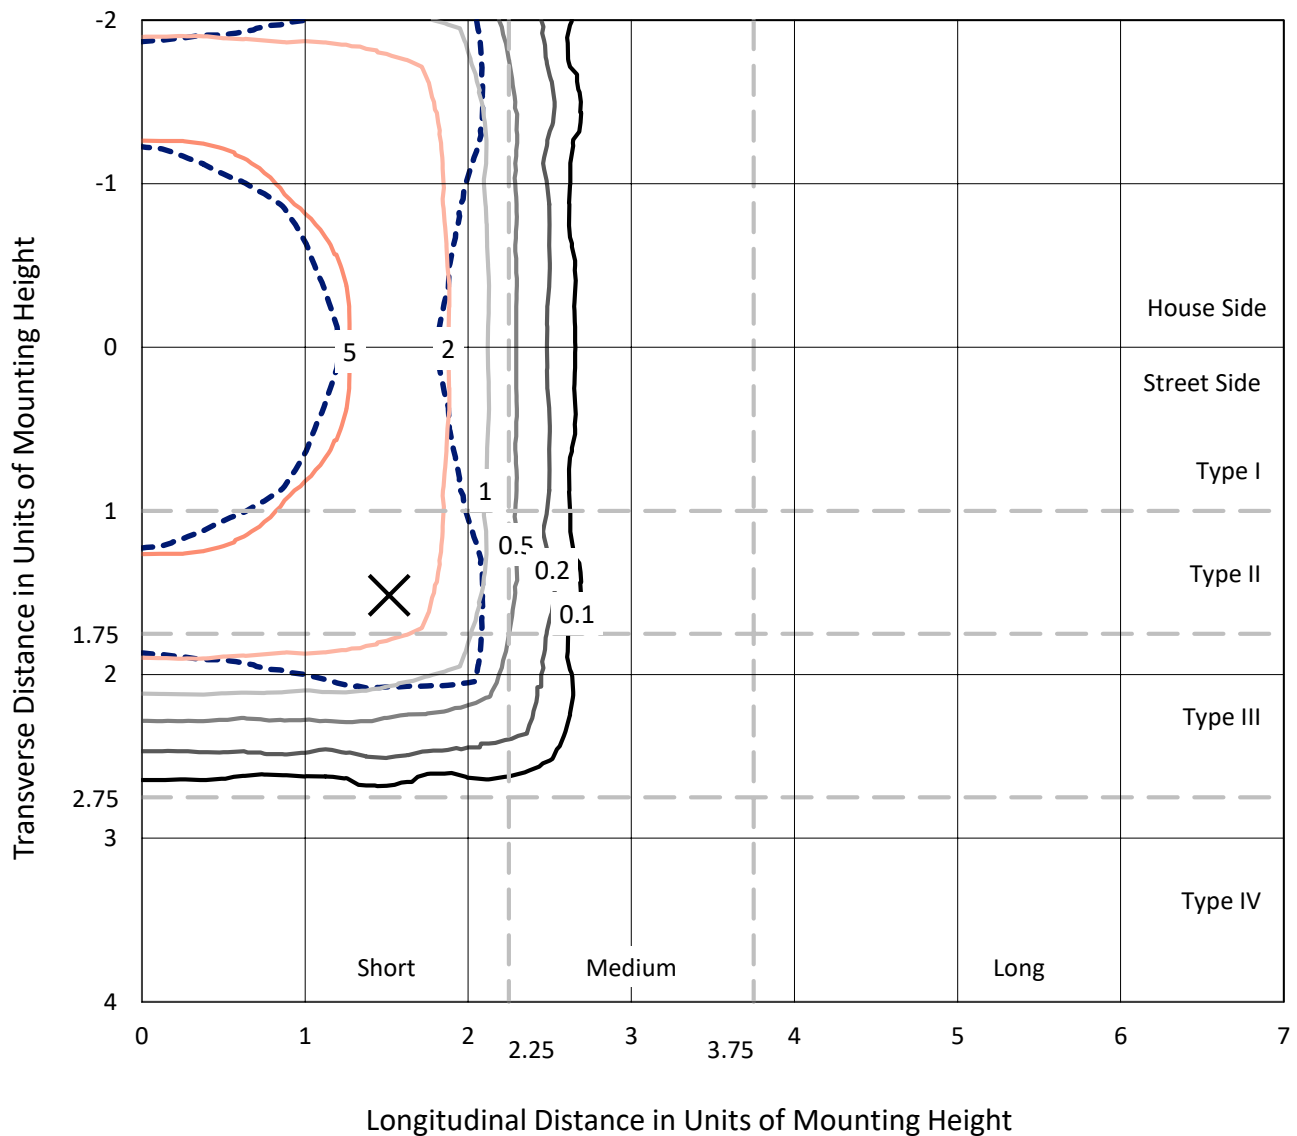

Based on 25 foot mounting height. Maximum calculated value = 9.3 fc  
 Type V - Short - N/A

REPORT NUMBER: P316834  
CATALOG NUMBER: GLEON-SA0A-750-U-5NQ

## Luminous Intensity Polar Plot

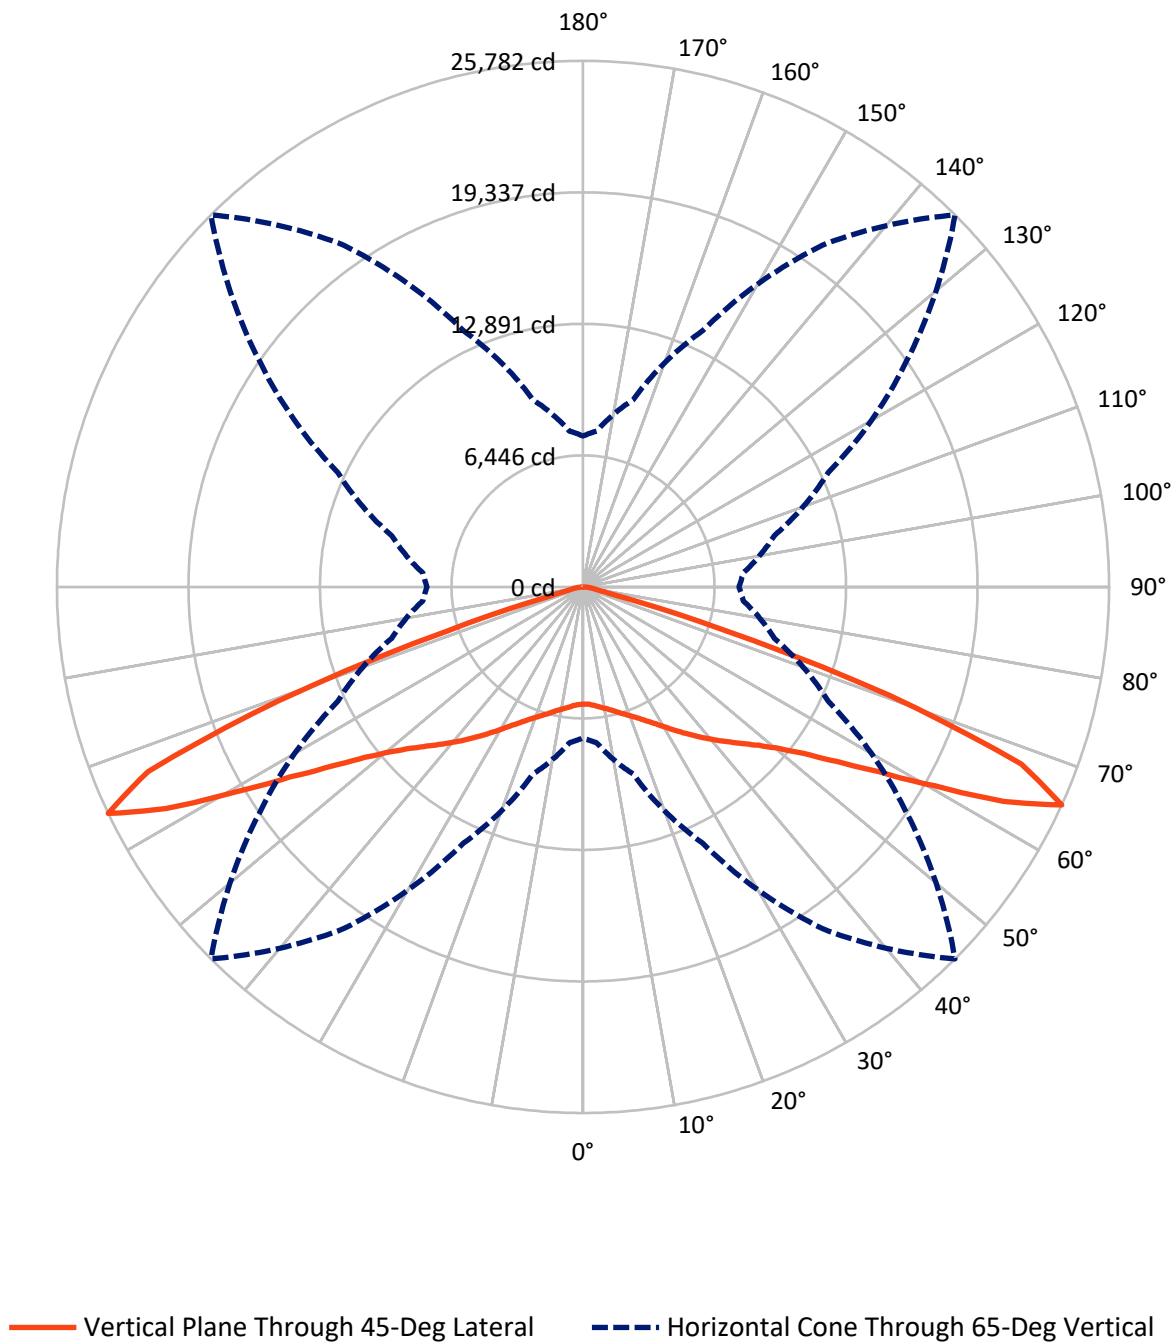

REPORT NUMBER: P316834

CATALOG NUMBER: GLEON-SA0A-750-U-5NQ

**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total   |
|--------------------|-----------|----------|--------|---------|
| <b>House Side</b>  | Lumens    | 23790.0  | 0.0    | 23790.0 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Street Side</b> | Lumens    | 23790.0  | 0.0    | 23790.0 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Total</b>       | Lumens    | 47580.0  | 0.0    | 47580.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0   |

**ZONAL LUMENS:**

| Zone      | Lumens  | % Fixture |
|-----------|---------|-----------|
| 0°-10°    | 563.7   | 1.2       |
| 10°-20°   | 1812.0  | 3.8       |
| 20°-30°   | 3399.7  | 7.1       |
| 30°-40°   | 5622.5  | 11.8      |
| 40°-50°   | 8708.5  | 18.3      |
| 50°-60°   | 13356.3 | 28.1      |
| 60°-70°   | 12463.0 | 26.2      |
| 70°-80°   | 1450.5  | 3.0       |
| 80°-90°   | 203.8   | 0.4       |
| 90°-100°  | 0.0     | 0.0       |
| 100°-110° | 0.0     | 0.0       |
| 110°-120° | 0.0     | 0.0       |
| 120°-130° | 0.0     | 0.0       |
| 130°-140° | 0.0     | 0.0       |
| 140°-150° | 0.0     | 0.0       |
| 150°-160° | 0.0     | 0.0       |
| 160°-170° | 0.0     | 0.0       |
| 170°-180° | 0.0     | 0.0       |
| 0°-90°    | 47580.0 | 100.0     |
| 0°-180°   | 47580.0 | 100.0     |

**Coefficient of Utilization**



REPORT NUMBER: P316834


CATALOG NUMBER: GLEON-SA0A-750-U-5NQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens  | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|---------|-----------|-------------------------|------|---------|
|      |             |         |           | B                       | U    | G       |
| FL   | (0°-30°)    | 2887.8  | 6.1       |                         |      |         |
| FM   | (30°-60°)   | 13843.6 | 29.1      |                         |      |         |
| FH   | (60°-80°)   | 6956.7  | 14.6      |                         |      | G3/7500 |
| FVH  | (80°-90°)   | 101.9   | 0.2       |                         |      | G2/225  |
| BL   | (0°-30°)    | 2887.8  | 6.1       | B4/5000                 |      |         |
| BM   | (30°-60°)   | 13843.6 | 29.1      | B5                      |      |         |
| BH   | (60°-80°)   | 6956.7  | 14.6      | B5                      |      | G3/7500 |
| BVH  | (80°-90°)   | 101.9   | 0.2       |                         |      | G2/225  |
| UL   | (90°-100°)  | 0.0     | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0     | 0.0       |                         | U0/0 |         |

**BUG Rating: B5-U0-G3**

Type V Short

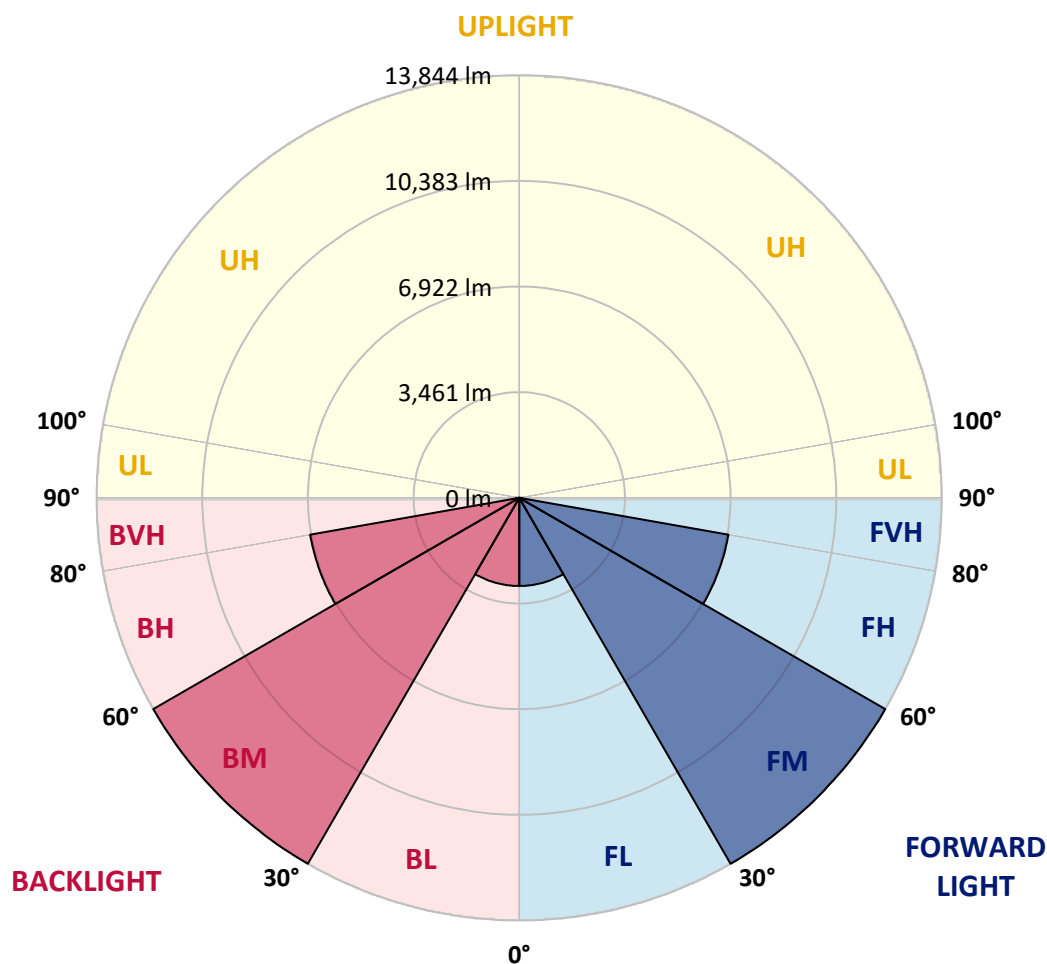

REPORT NUMBER: P316834

CATALOG NUMBER: GLEON-SA0A-750-U-5NQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°      | 5°      | 15°     | 25°     | 35°     | 45°     | 55°     | 65°     | 75°     | 85°     | 90°     |
|-------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| 0°    | 5745.9  | 5745.9  | 5745.9  | 5745.9  | 5745.9  | 5745.9  | 5745.9  | 5745.9  | 5745.9  | 5745.9  | 5745.9  |
| 2.5°  | 5764.8  | 5761.7  | 5764.8  | 5766.4  | 5756.9  | 5761.7  | 5760.1  | 5768.0  | 5771.2  | 5768.0  | 5768.0  |
| 5°    | 5831.2  | 5826.4  | 5832.8  | 5840.7  | 5828.0  | 5831.2  | 5826.4  | 5835.9  | 5839.1  | 5832.8  | 5837.5  |
| 7.5°  | 5922.8  | 5924.4  | 5930.7  | 5944.9  | 5937.0  | 5943.3  | 5933.8  | 5935.4  | 5933.8  | 5924.4  | 5925.9  |
| 10°   | 6022.3  | 6023.9  | 6034.9  | 6053.9  | 6057.0  | 6057.0  | 6050.7  | 6046.0  | 6039.7  | 6033.3  | 6034.9  |
| 12.5° | 6142.3  | 6150.2  | 6158.1  | 6181.8  | 6181.8  | 6194.4  | 6191.3  | 6178.6  | 6167.6  | 6158.1  | 6158.1  |
| 15°   | 6305.0  | 6303.4  | 6312.9  | 6336.6  | 6347.6  | 6368.2  | 6368.2  | 6350.8  | 6336.6  | 6327.1  | 6324.0  |
| 17.5° | 6475.6  | 6480.3  | 6486.6  | 6515.1  | 6532.4  | 6556.1  | 6559.3  | 6545.1  | 6535.6  | 6523.0  | 6515.1  |
| 20°   | 6674.6  | 6682.5  | 6707.7  | 6718.8  | 6734.6  | 6756.7  | 6764.6  | 6761.4  | 6752.0  | 6745.7  | 6747.2  |
| 22.5° | 6906.8  | 6927.3  | 6943.1  | 6958.9  | 6977.8  | 6993.6  | 7001.5  | 7012.6  | 7003.1  | 6998.4  | 6995.2  |
| 25°   | 7187.9  | 7202.1  | 7233.7  | 7262.1  | 7274.8  | 7279.5  | 7289.0  | 7304.8  | 7303.2  | 7292.1  | 7292.1  |
| 27.5° | 7506.9  | 7533.8  | 7573.3  | 7614.3  | 7614.3  | 7598.5  | 7630.1  | 7657.0  | 7647.5  | 7633.3  | 7614.3  |
| 30°   | 7893.9  | 7919.2  | 7965.0  | 8021.8  | 7993.4  | 7982.3  | 8025.0  | 8073.9  | 8059.7  | 8036.0  | 8032.9  |
| 32.5° | 8310.8  | 8334.5  | 8394.6  | 8456.2  | 8419.8  | 8404.0  | 8449.8  | 8520.9  | 8495.6  | 8448.3  | 8419.8  |
| 35°   | 8762.6  | 8786.2  | 8871.5  | 8945.8  | 8884.2  | 8857.3  | 8895.2  | 8972.6  | 8928.4  | 8839.9  | 8817.8  |
| 37.5° | 9253.8  | 9266.4  | 9376.9  | 9452.8  | 9410.1  | 9339.0  | 9386.4  | 9443.3  | 9405.4  | 9298.0  | 9255.3  |
| 40°   | 9763.9  | 9809.7  | 9937.6  | 10026.1 | 9951.9  | 9839.7  | 9918.7  | 9997.7  | 9940.8  | 9803.4  | 9730.7  |
| 42.5° | 10359.3 | 10394.1 | 10564.7 | 10643.6 | 10523.6 | 10365.7 | 10473.1 | 10580.5 | 10523.6 | 10390.9 | 10327.8 |
| 45°   | 10978.5 | 11032.2 | 11235.9 | 11314.9 | 11141.1 | 10940.6 | 11071.7 | 11259.6 | 11254.9 | 11063.8 | 10997.4 |
| 47.5° | 11652.9 | 11706.6 | 11949.8 | 12054.0 | 11866.1 | 11597.6 | 11782.4 | 12047.7 | 12028.8 | 11818.7 | 11765.0 |
| 50°   | 12431.5 | 12488.4 | 12791.6 | 12922.7 | 12747.4 | 12434.7 | 12712.7 | 12946.4 | 12911.7 | 12652.6 | 12657.4 |
| 52.5° | 13409.2 | 13406.0 | 13783.5 | 14010.9 | 13830.9 | 13554.5 | 13810.3 | 14037.8 | 13894.1 | 13535.5 | 13524.5 |
| 55°   | 14265.2 | 14317.3 | 14784.8 | 15216.0 | 15205.0 | 15099.1 | 15201.8 | 15211.3 | 14800.6 | 14323.7 | 14265.2 |
| 57.5° | 14827.5 | 14927.0 | 15585.6 | 16365.8 | 16950.2 | 17090.8 | 16891.8 | 16288.4 | 15326.6 | 14563.7 | 14470.5 |
| 60°   | 14481.6 | 14633.2 | 15667.7 | 17258.2 | 18979.8 | 19805.8 | 18682.8 | 16811.2 | 14917.5 | 13854.6 | 13728.2 |
| 62.5° | 12147.2 | 12403.1 | 13917.7 | 16827.0 | 20726.6 | 23141.5 | 19981.1 | 15972.6 | 13290.7 | 11826.6 | 11610.2 |
| 65°   | 7397.9  | 7668.0  | 9493.8  | 13849.8 | 20443.9 | 25782.3 | 19388.8 | 13257.6 | 9700.7  | 7879.7  | 7645.9  |
| 67.5° | 2465.5  | 2544.4  | 3620.0  | 7655.4  | 16067.3 | 23165.2 | 16094.2 | 7936.5  | 4221.8  | 2798.7  | 2716.6  |
| 70°   | 965.0   | 972.9   | 1148.2  | 2219.1  | 7587.5  | 15911.0 | 8372.4  | 2258.6  | 1200.4  | 949.2   | 969.8   |
| 72.5° | 709.2   | 712.3   | 761.3   | 927.1   | 1977.4  | 7009.4  | 2048.5  | 931.9   | 740.7   | 664.9   | 664.9   |
| 75°   | 570.2   | 570.2   | 604.9   | 676.0   | 886.0   | 1607.8  | 898.7   | 668.1   | 579.6   | 530.7   | 524.4   |
| 77.5° | 450.1   | 459.6   | 486.5   | 532.3   | 600.2   | 773.9   | 622.3   | 529.1   | 467.5   | 421.7   | 412.2   |
| 80°   | 334.8   | 344.3   | 388.5   | 410.6   | 431.2   | 537.0   | 459.6   | 413.8   | 369.6   | 315.9   | 306.4   |
| 82.5° | 219.5   | 229.0   | 284.3   | 296.9   | 292.2   | 350.6   | 309.6   | 304.8   | 271.7   | 203.7   | 194.3   |
| 85°   | 143.7   | 146.9   | 189.5   | 197.4   | 181.6   | 159.5   | 197.4   | 208.5   | 189.5   | 132.7   | 127.9   |
| 87.5° | 67.9    | 67.9    | 96.3    | 90.0    | 82.1    | 66.3    | 90.0    | 105.8   | 107.4   | 64.8    | 63.2    |
| 90°   | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     |

LM-79-2008: Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGRAW-EDISON

Report Number: SP1-1908-441-4-R4

Test Date: 10/02/2019

Luminaire Tested: SA1C-750-U-5WQ

Data in this report applies to families of products SA1C-760-U-5WQ .

### Test Information

Test Method: LM-79-2008  
 Report Number: SP1-1908-441-4-R4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/28/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: MCGRAW-EDISON  
 Catalog Number: **SA1C-750-U-5WQ**  
 Description: MCGRAW EDISON ROADWAY AND AREA LUMINAIRE

\*\*\*THIS IS A REVISION OF SP1-1908-441-4-R3. TO UPDATE THE CATALOG INFORMATION.\*\*\*TESTED IN SITU. ROADWAY AND AREA LUMINAIRE. (1) 70 CRI, 5000K, 1050MA LIGHTSQUARE WITH 16 LEDS AND TYPE V WIDE OPTICS.

### Spectral Parameters

|                           |        |           |      |      |       |
|---------------------------|--------|-----------|------|------|-------|
| CCT (K):                  | 4884   | CRI (Ra): | 73.5 |      |       |
| CIE u':                   | 0.2101 | R1:       | 70.5 | R9:  | -28.4 |
| CIE v':                   | 0.4904 | R2:       | 77.7 | R10: | 48.6  |
| Duv:                      | 0.0037 | R3:       | 84.6 | R11: | 73.2  |
| CIE x:                    | 0.3493 | R4:       | 74.7 | R12: | 50.7  |
| CIE y:                    | 0.3624 | R5:       | 71.9 | R13: | 71.2  |
| CIE z:                    | 0.2884 | R6:       | 70.7 | R14: | 91.4  |
| Peak Wavelength (nm):     | 444    | R7:       | 81.2 |      |       |
| Dominant Wavelength (nm): | 571    | R8:       | 56.9 |      |       |
| Purity:                   | 13.7   |           |      |      |       |
| Rf:                       | 74.9   |           |      |      |       |
| Rg:                       | 96.3   |           |      |      |       |



### Test Conditions


Stabilization Time: 240M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 25.0./44%  
 Sphere Temperature (°C): 25.7

REPORT NUMBER: SP1-1908-441-4-R4

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/28/2019        | 12/28/2019           |
| Power Meter                    | IN0071                | 12/5/2018        | 12/5/2019            |
| AC Power Source                | IN0063                | 12/5/2018        | 12/5/2019            |
| DC Power Source                | IN0208                | 12/5/2018        | 12/5/2019            |
| Sphere Thermometer             | IN0085                | 12/5/2018        | 12/5/2019            |
| Room Thermometer               | IN0046                | 12/5/2018        | 12/5/2019            |

REPORT NUMBER: SP1-1908-441-4-R4

**CIE 1931 Chromaticity Diagram**

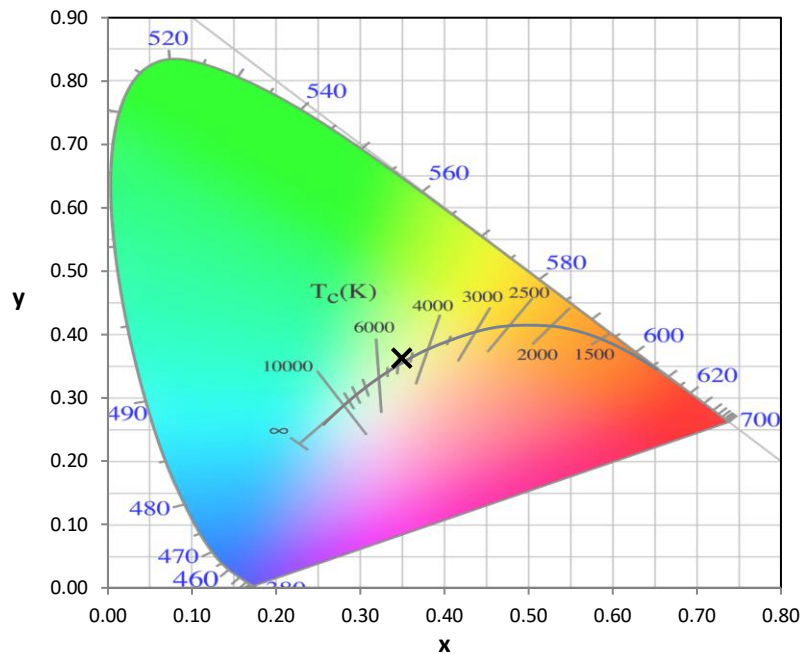

**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-1908-441-4-R4

**Photopic Flux vs. Wavelength**



#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2945             | NR               | 490       | 37941            | NR               | 620       | 88803            | NR               | 750       | 3908             | NR               | 880       | 2997             | NR               |
| 365       | 2596             | NR               | 495       | 48525            | NR               | 625       | 80578            | NR               | 755       | 3988             | NR               | 885       | 2927             | NR               |
| 370       | 2732             | NR               | 500       | 60609            | NR               | 630       | 73127            | NR               | 760       | 3335             | NR               | 890       | 2649             | NR               |
| 375       | 2894             | NR               | 505       | 72036            | NR               | 635       | 66244            | NR               | 765       | 3438             | NR               | 895       | 2828             | NR               |
| 380       | 2822             | NR               | 510       | 82168            | NR               | 640       | 59440            | NR               | 770       | 3427             | NR               | 900       | 1407             | NR               |
| 385       | 2394             | NR               | 515       | 90898            | NR               | 645       | 52864            | NR               | 775       | 2759             | NR               | 905       | 2224             | NR               |
| 390       | 2370             | NR               | 520       | 97142            | NR               | 650       | 47085            | NR               | 780       | 2340             | NR               | 910       | 2905             | NR               |
| 395       | 2267             | NR               | 525       | 103255           | NR               | 655       | 41789            | NR               | 785       | 2412             | NR               | 915       | 3350             | NR               |
| 400       | 2262             | NR               | 530       | 106697           | NR               | 660       | 37064            | NR               | 790       | 1999             | NR               | 920       | 3114             | NR               |
| 405       | 3000             | NR               | 535       | 110081           | NR               | 665       | 32299            | NR               | 795       | 2054             | NR               | 925       | 2834             | NR               |
| 410       | 5324             | NR               | 540       | 112494           | NR               | 670       | 28142            | NR               | 800       | 2331             | NR               | 930       | 2271             | NR               |
| 415       | 10725            | NR               | 545       | 115513           | NR               | 675       | 24505            | NR               | 805       | 2648             | NR               | 935       | 2228             | NR               |
| 420       | 22128            | NR               | 550       | 117203           | NR               | 680       | 21162            | NR               | 810       | 2485             | NR               | 940       | 2833             | NR               |
| 425       | 44095            | NR               | 555       | 119753           | NR               | 685       | 18400            | NR               | 815       | 2409             | NR               | 945       | 2941             | NR               |
| 430       | 77002            | NR               | 560       | 122602           | NR               | 690       | 16065            | NR               | 820       | 2221             | NR               | 950       | 2323             | NR               |
| 435       | 119881           | NR               | 565       | 124314           | NR               | 695       | 13860            | NR               | 825       | 1562             | NR               | 955       | 1667             | NR               |
| 440       | 164454           | NR               | 570       | 126775           | NR               | 700       | 12177            | NR               | 830       | 2249             | NR               | 960       | 749              | NR               |
| 445       | 179997           | NR               | 575       | 127511           | NR               | 705       | 10757            | NR               | 835       | 2573             | NR               | 965       | 2669             | NR               |
| 450       | 142822           | NR               | 580       | 127577           | NR               | 710       | 9601             | NR               | 840       | 2764             | NR               | 970       | 3968             | NR               |
| 455       | 90008            | NR               | 585       | 126153           | NR               | 715       | 8944             | NR               | 845       | 3109             | NR               | 975       | 3886             | NR               |
| 460       | 60557            | NR               | 590       | 123678           | NR               | 720       | 7947             | NR               | 850       | 2963             | NR               | 980       | 2788             | NR               |
| 465       | 43305            | NR               | 595       | 119774           | NR               | 725       | 7062             | NR               | 855       | 2336             | NR               | 985       | 3496             | NR               |
| 470       | 31089            | NR               | 600       | 115733           | NR               | 730       | 6004             | NR               | 860       | 2118             | NR               | 990       | 2913             | NR               |
| 475       | 26278            | NR               | 605       | 109231           | NR               | 735       | 5594             | NR               | 865       | 3144             | NR               | 995       | 4659             | NR               |
| 480       | 27060            | NR               | 610       | 102408           | NR               | 740       | 5165             | NR               | 870       | 3069             | NR               | 1000      | 1308             | NR               |
| 485       | 30698            | NR               | 615       | 96015            | NR               | 745       | 4687             | NR               | 875       | 3311             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-4-R4

Scotopic Flux vs. Wavelength



Scotopic Lumens: 13493.5

S/P: 1.77

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2945             | NR               | 490       | 37941            | NR               | 620       | 88803            | NR               | 750       | 3908             | NR               | 880       | 2997             | NR               |
| 365       | 2596             | NR               | 495       | 48525            | NR               | 625       | 80578            | NR               | 755       | 3988             | NR               | 885       | 2927             | NR               |
| 370       | 2732             | NR               | 500       | 60609            | NR               | 630       | 73127            | NR               | 760       | 3335             | NR               | 890       | 2649             | NR               |
| 375       | 2894             | NR               | 505       | 72036            | NR               | 635       | 66244            | NR               | 765       | 3438             | NR               | 895       | 2828             | NR               |
| 380       | 2822             | NR               | 510       | 82168            | NR               | 640       | 59440            | NR               | 770       | 3427             | NR               | 900       | 1407             | NR               |
| 385       | 2394             | NR               | 515       | 90898            | NR               | 645       | 52864            | NR               | 775       | 2759             | NR               | 905       | 2224             | NR               |
| 390       | 2370             | NR               | 520       | 97142            | NR               | 650       | 47085            | NR               | 780       | 2340             | NR               | 910       | 2905             | NR               |
| 395       | 2267             | NR               | 525       | 103255           | NR               | 655       | 41789            | NR               | 785       | 2412             | NR               | 915       | 3350             | NR               |
| 400       | 2262             | NR               | 530       | 106697           | NR               | 660       | 37064            | NR               | 790       | 1999             | NR               | 920       | 3114             | NR               |
| 405       | 3000             | NR               | 535       | 110081           | NR               | 665       | 32299            | NR               | 795       | 2054             | NR               | 925       | 2834             | NR               |
| 410       | 5324             | NR               | 540       | 112494           | NR               | 670       | 28142            | NR               | 800       | 2331             | NR               | 930       | 2271             | NR               |
| 415       | 10725            | NR               | 545       | 115513           | NR               | 675       | 24505            | NR               | 805       | 2648             | NR               | 935       | 2228             | NR               |
| 420       | 22128            | NR               | 550       | 117203           | NR               | 680       | 21162            | NR               | 810       | 2485             | NR               | 940       | 2833             | NR               |
| 425       | 44095            | NR               | 555       | 119753           | NR               | 685       | 18400            | NR               | 815       | 2409             | NR               | 945       | 2941             | NR               |
| 430       | 77002            | NR               | 560       | 122602           | NR               | 690       | 16065            | NR               | 820       | 2221             | NR               | 950       | 2323             | NR               |
| 435       | 119881           | NR               | 565       | 124314           | NR               | 695       | 13860            | NR               | 825       | 1562             | NR               | 955       | 1667             | NR               |
| 440       | 164454           | NR               | 570       | 126775           | NR               | 700       | 12177            | NR               | 830       | 2249             | NR               | 960       | 749              | NR               |
| 445       | 179997           | NR               | 575       | 127511           | NR               | 705       | 10757            | NR               | 835       | 2573             | NR               | 965       | 2669             | NR               |
| 450       | 142822           | NR               | 580       | 127577           | NR               | 710       | 9601             | NR               | 840       | 2764             | NR               | 970       | 3968             | NR               |
| 455       | 90008            | NR               | 585       | 126153           | NR               | 715       | 8944             | NR               | 845       | 3109             | NR               | 975       | 3886             | NR               |
| 460       | 60557            | NR               | 590       | 123678           | NR               | 720       | 7947             | NR               | 850       | 2963             | NR               | 980       | 2788             | NR               |
| 465       | 43305            | NR               | 595       | 119774           | NR               | 725       | 7062             | NR               | 855       | 2336             | NR               | 985       | 3496             | NR               |
| 470       | 31089            | NR               | 600       | 115733           | NR               | 730       | 6004             | NR               | 860       | 2118             | NR               | 990       | 2913             | NR               |
| 475       | 26278            | NR               | 605       | 109231           | NR               | 735       | 5594             | NR               | 865       | 3144             | NR               | 995       | 4659             | NR               |
| 480       | 27060            | NR               | 610       | 102408           | NR               | 740       | 5165             | NR               | 870       | 3069             | NR               | 1000      | 1308             | NR               |
| 485       | 30698            | NR               | 615       | 96015            | NR               | 745       | 4687             | NR               | 875       | 3311             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-4-R4

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 5378.9**

**M/P: 0.71**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2945             | NR               | 490       | 37941            | NR               | 620       | 88803            | NR               | 750       | 3908             | NR               | 880       | 2997             | NR               |
| 365       | 2596             | NR               | 495       | 48525            | NR               | 625       | 80578            | NR               | 755       | 3988             | NR               | 885       | 2927             | NR               |
| 370       | 2732             | NR               | 500       | 60609            | NR               | 630       | 73127            | NR               | 760       | 3335             | NR               | 890       | 2649             | NR               |
| 375       | 2894             | NR               | 505       | 72036            | NR               | 635       | 66244            | NR               | 765       | 3438             | NR               | 895       | 2828             | NR               |
| 380       | 2822             | NR               | 510       | 82168            | NR               | 640       | 59440            | NR               | 770       | 3427             | NR               | 900       | 1407             | NR               |
| 385       | 2394             | NR               | 515       | 90898            | NR               | 645       | 52864            | NR               | 775       | 2759             | NR               | 905       | 2224             | NR               |
| 390       | 2370             | NR               | 520       | 97142            | NR               | 650       | 47085            | NR               | 780       | 2340             | NR               | 910       | 2905             | NR               |
| 395       | 2267             | NR               | 525       | 103255           | NR               | 655       | 41789            | NR               | 785       | 2412             | NR               | 915       | 3350             | NR               |
| 400       | 2262             | NR               | 530       | 106697           | NR               | 660       | 37064            | NR               | 790       | 1999             | NR               | 920       | 3114             | NR               |
| 405       | 3000             | NR               | 535       | 110081           | NR               | 665       | 32299            | NR               | 795       | 2054             | NR               | 925       | 2834             | NR               |
| 410       | 5324             | NR               | 540       | 112494           | NR               | 670       | 28142            | NR               | 800       | 2331             | NR               | 930       | 2271             | NR               |
| 415       | 10725            | NR               | 545       | 115513           | NR               | 675       | 24505            | NR               | 805       | 2648             | NR               | 935       | 2228             | NR               |
| 420       | 22128            | NR               | 550       | 117203           | NR               | 680       | 21162            | NR               | 810       | 2485             | NR               | 940       | 2833             | NR               |
| 425       | 44095            | NR               | 555       | 119753           | NR               | 685       | 18400            | NR               | 815       | 2409             | NR               | 945       | 2941             | NR               |
| 430       | 77002            | NR               | 560       | 122602           | NR               | 690       | 16065            | NR               | 820       | 2221             | NR               | 950       | 2323             | NR               |
| 435       | 119881           | NR               | 565       | 124314           | NR               | 695       | 13860            | NR               | 825       | 1562             | NR               | 955       | 1667             | NR               |
| 440       | 164454           | NR               | 570       | 126775           | NR               | 700       | 12177            | NR               | 830       | 2249             | NR               | 960       | 749              | NR               |
| 445       | 179997           | NR               | 575       | 127511           | NR               | 705       | 10757            | NR               | 835       | 2573             | NR               | 965       | 2669             | NR               |
| 450       | 142822           | NR               | 580       | 127577           | NR               | 710       | 9601             | NR               | 840       | 2764             | NR               | 970       | 3968             | NR               |
| 455       | 90008            | NR               | 585       | 126153           | NR               | 715       | 8944             | NR               | 845       | 3109             | NR               | 975       | 3886             | NR               |
| 460       | 60557            | NR               | 590       | 123678           | NR               | 720       | 7947             | NR               | 850       | 2963             | NR               | 980       | 2788             | NR               |
| 465       | 43305            | NR               | 595       | 119774           | NR               | 725       | 7062             | NR               | 855       | 2336             | NR               | 985       | 3496             | NR               |
| 470       | 31089            | NR               | 600       | 115733           | NR               | 730       | 6004             | NR               | 860       | 2118             | NR               | 990       | 2913             | NR               |
| 475       | 26278            | NR               | 605       | 109231           | NR               | 735       | 5594             | NR               | 865       | 3144             | NR               | 995       | 4659             | NR               |
| 480       | 27060            | NR               | 610       | 102408           | NR               | 740       | 5165             | NR               | 870       | 3069             | NR               | 1000      | 1308             | NR               |
| 485       | 30698            | NR               | 615       | 96015            | NR               | 745       | 4687             | NR               | 875       | 3311             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**


**Summary**

$R_f = 74.9$   
 $R_g = 96.3$   
 CIE  $R_a = 73.5$   
 $R_g = -28.4$

**Spectral Power Distribution Comparison**



**Color Vector Graphics**

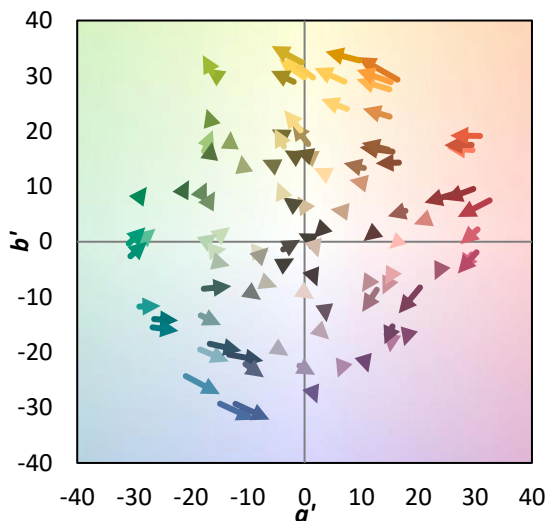

REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**




|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 61 | CES51 = 90 | CES76 = 52 |
| CES02 = 60 | CES27 = 84 | CES52 = 91 | CES77 = 71 |
| CES03 = 30 | CES28 = 81 | CES53 = 79 | CES78 = 54 |
| CES04 = 69 | CES29 = 58 | CES54 = 83 | CES79 = 80 |
| CES05 = 46 | CES30 = 67 | CES55 = 83 | CES80 = 77 |
| CES06 = 50 | CES31 = 63 | CES56 = 73 | CES81 = 77 |
| CES07 = 39 | CES32 = 59 | CES57 = 72 | CES82 = 90 |
| CES08 = 38 | CES33 = 69 | CES58 = 73 | CES83 = 86 |
| CES09 = 29 | CES34 = 69 | CES59 = 88 | CES84 = 88 |
| CES10 = 73 | CES35 = 83 | CES60 = 93 | CES85 = 84 |
| CES11 = 56 | CES36 = 95 | CES61 = 88 | CES86 = 75 |
| CES12 = 61 | CES37 = 78 | CES62 = 85 | CES87 = 78 |
| CES13 = 41 | CES38 = 76 | CES63 = 77 | CES88 = 79 |
| CES14 = 74 | CES39 = 93 | CES64 = 74 | CES89 = 75 |
| CES15 = 70 | CES40 = 86 | CES65 = 67 | CES90 = 77 |
| CES16 = 46 | CES41 = 87 | CES66 = 69 | CES91 = 89 |
| CES17 = 49 | CES42 = 78 | CES67 = 67 | CES92 = 66 |
| CES18 = 55 | CES43 = 75 | CES68 = 73 | CES93 = 80 |
| CES19 = 71 | CES44 = 99 | CES69 = 81 | CES94 = 57 |
| CES20 = 64 | CES45 = 83 | CES70 = 63 | CES95 = 71 |
| CES21 = 85 | CES46 = 81 | CES71 = 60 | CES96 = 78 |
| CES22 = 77 | CES47 = 80 | CES72 = 86 | CES97 = 85 |
| CES23 = 91 | CES48 = 72 | CES73 = 53 | CES98 = 75 |
| CES24 = 90 | CES49 = 81 | CES74 = 96 | CES99 = 62 |
| CES25 = 71 | CES50 = 89 | CES75 = 58 |            |



REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**

Color Rendition by Hue-Angle Bin

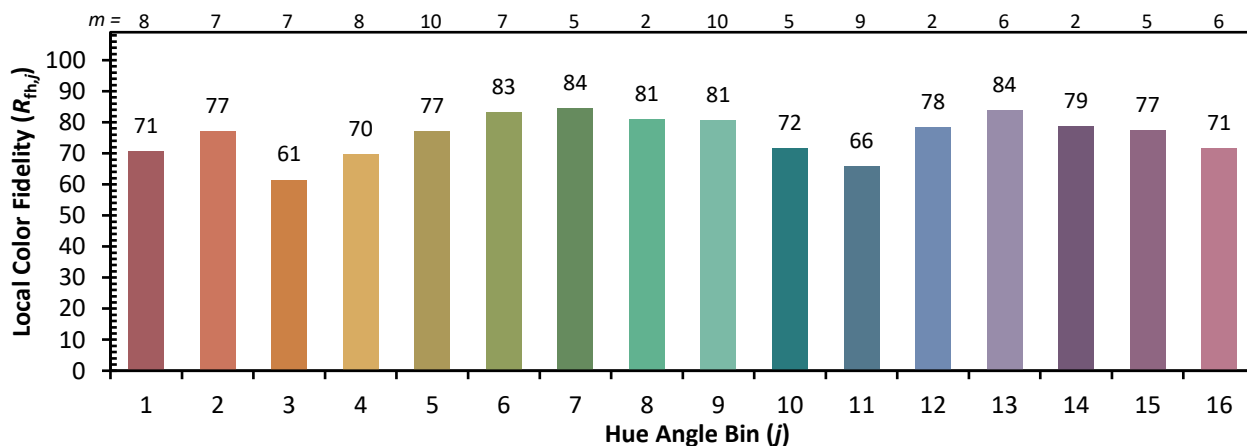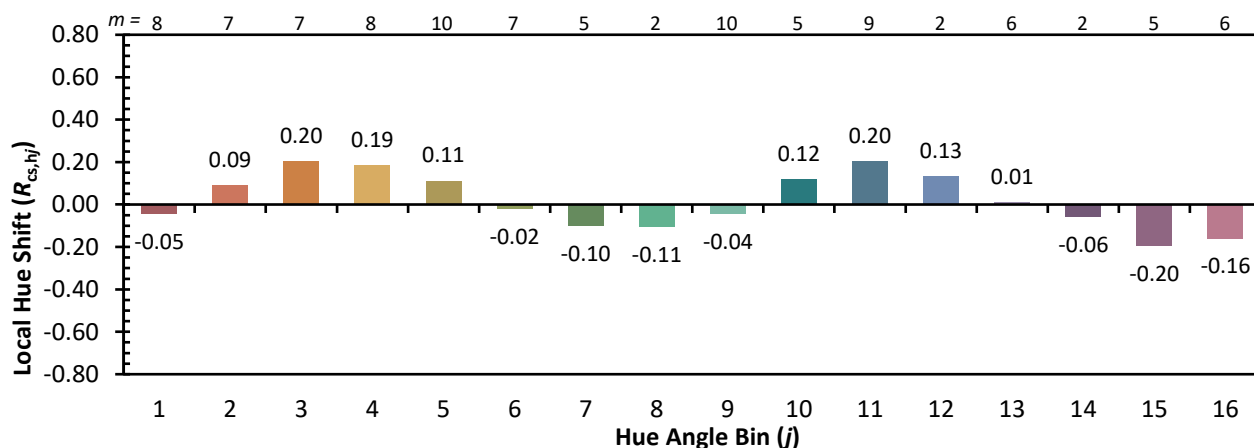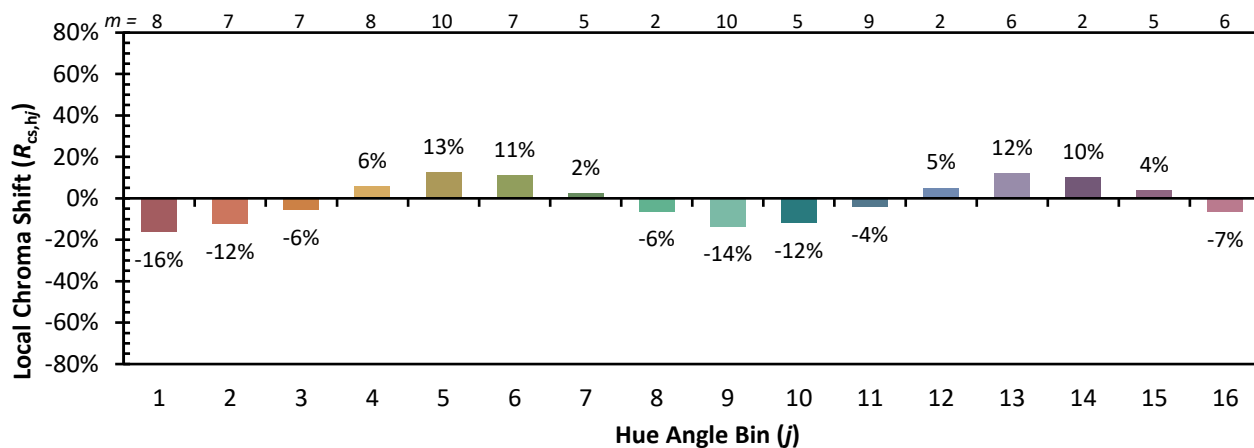

REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**

**Measure Comparisons**



(END OF REPORT)