

Signify Classified - Internal  
Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: McGRAW-EDISON

Report Number: P316525

Luminaire Tested: **GLEON-SA1C-750-U-5MQ**

Issue Date: 3/3/2020

**Test Information**

Test Method: LM-79-08  
Report Number: P316525  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-1903-205-6)  
Test Lab: INNOVATION CENTER  
Issue Date: 3/3/2020  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: McGRAW-EDISON  
Catalog Number: GLEON-SA1C-750-U-5MQ  
Description: GALLEON AREA AND ROADWAY LUMINAIRE  
(1) 70 CRI, 5000K, 1050mA LIGHTSQUARE WITH 16 LEDS AND TYPE V MEDIUM OPTICS  
Light Source: -  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 7779 lumens  
Efficiency: N/A  
Efficacy: 131.8 lumens/watt  
Luminous Opening: Rectangular (W 0.5' x L: 0.5' x H: 0')  
IES Classification: Type V - Short  
BUG Rating: B3 - U0 - G2


Input Watts (W): 59  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



REPORT NUMBER: P316525  
 CATALOG NUMBER: GLEON-SA1C-750-U-5MQ

## Iso-Footcandle Lines of Horizontal Illumination


✕ Max cd  
 - - - 1/2 Max cd

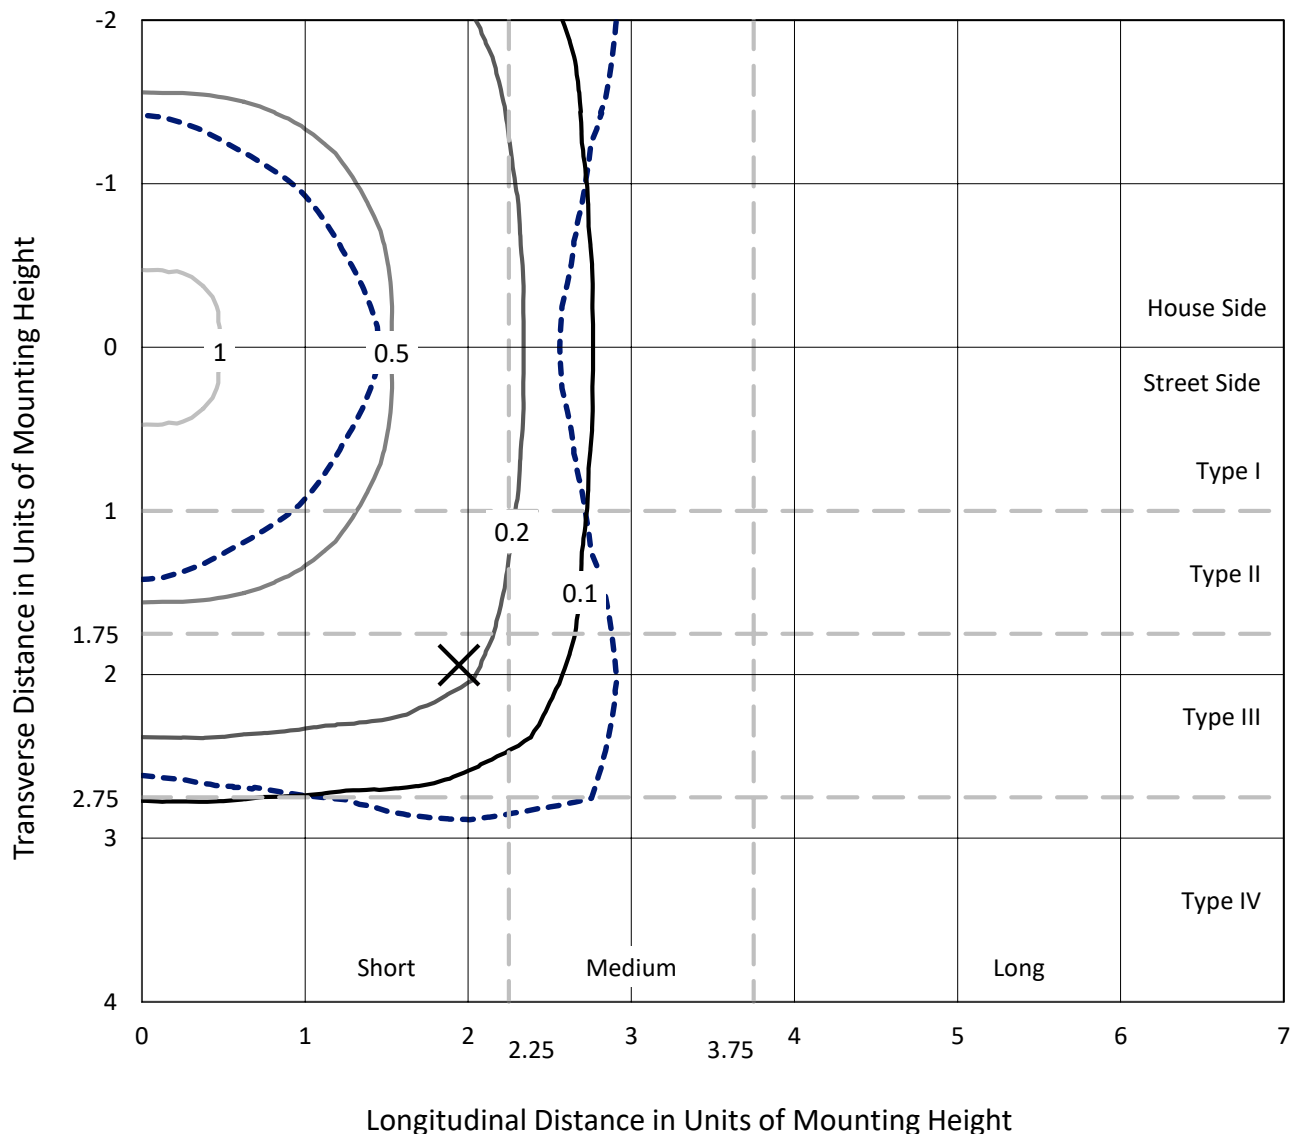

Based on 25 foot mounting height. Maximum calculated value = 1.4 fc  
 Type V - Short - N/A

REPORT NUMBER: P316525  
CATALOG NUMBER: GLEON-SA1C-750-U-5MQ

## Luminous Intensity Polar Plot

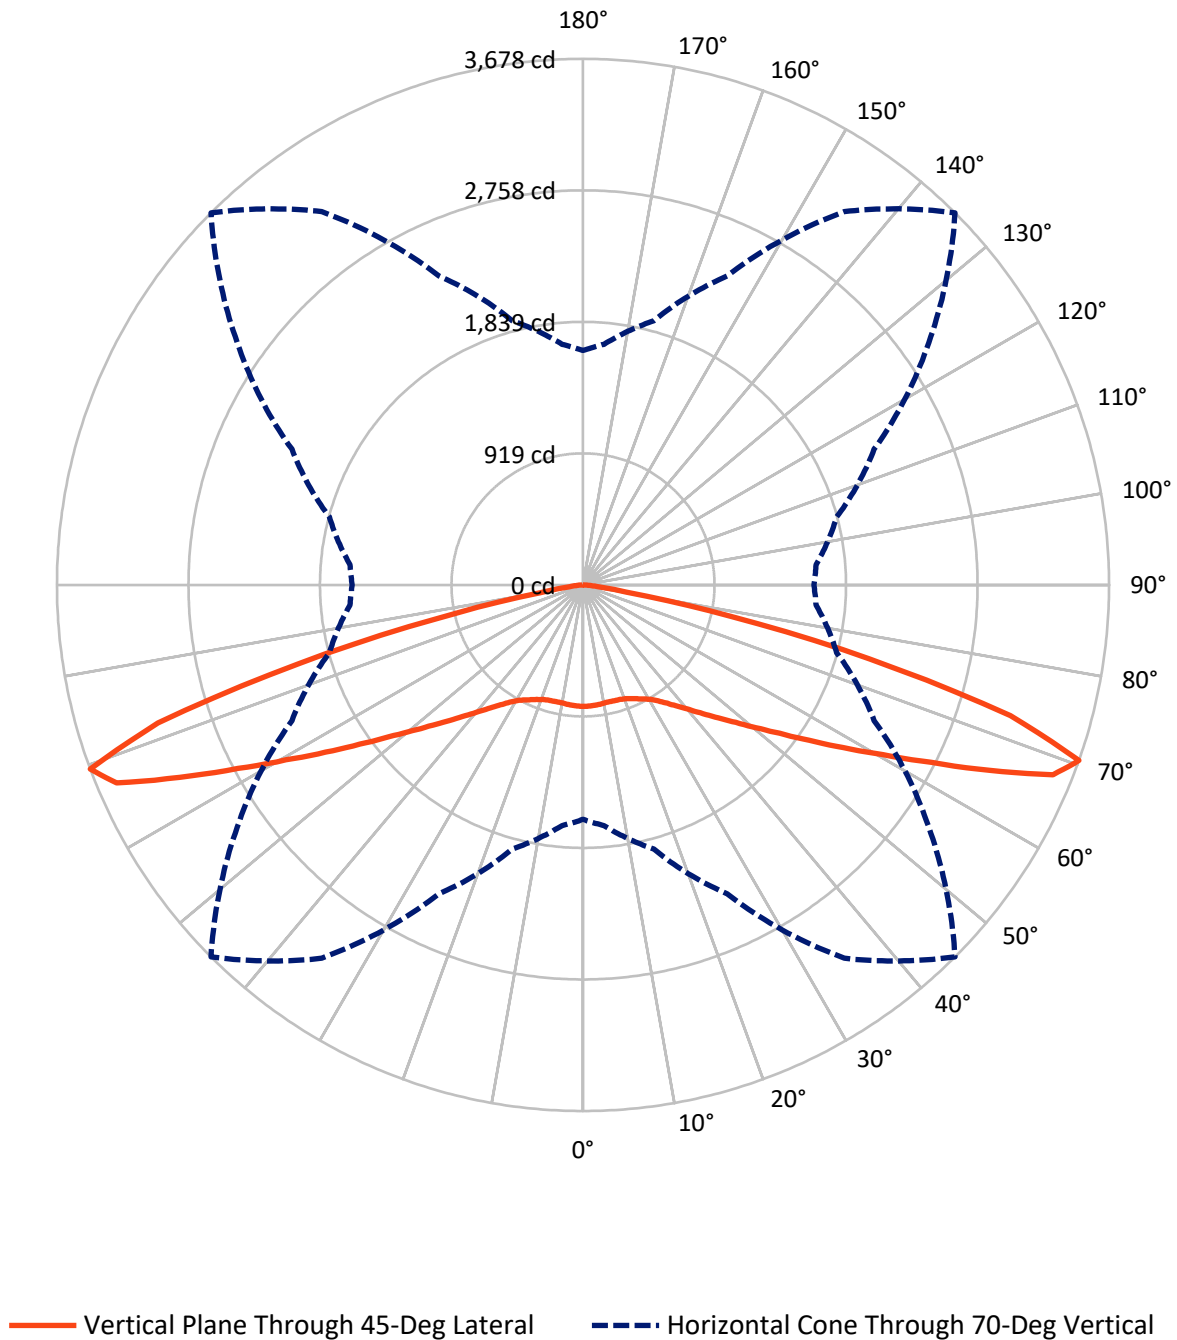

REPORT NUMBER: P316525

CATALOG NUMBER: GLEON-SA1C-750-U-5MQ

**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total  |
|--------------------|-----------|----------|--------|--------|
| <b>House Side</b>  | Lumens    | 3889.5   | 0.0    | 3889.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Street Side</b> | Lumens    | 3889.5   | 0.0    | 3889.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Total</b>       | Lumens    | 7779.0   | 0.0    | 7779.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0  |

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 80.5   | 1.0       |
| 10°-20°   | 236.2  | 3.0       |
| 20°-30°   | 402.1  | 5.2       |
| 30°-40°   | 637.8  | 8.2       |
| 40°-50°   | 1037.8 | 13.3      |
| 50°-60°   | 1711.2 | 22.0      |
| 60°-70°   | 2512.1 | 32.3      |
| 70°-80°   | 1110.9 | 14.3      |
| 80°-90°   | 50.3   | 0.6       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-90°    | 7779.0 | 100.0     |
| 0°-180°   | 7779.0 | 100.0     |

**Coefficient of Utilization**



REPORT NUMBER: P316525


CATALOG NUMBER: GLEON-SA1C-750-U-5MQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 359.4  | 4.6       |                         |      |         |
| FM   | (30°-60°)   | 1693.4 | 21.8      |                         |      |         |
| FH   | (60°-80°)   | 1811.5 | 23.3      |                         |      | G2/5000 |
| FVH  | (80°-90°)   | 25.2   | 0.3       |                         |      | G1/100  |
| BL   | (0°-30°)    | 359.4  | 4.6       | B1/500                  |      |         |
| BM   | (30°-60°)   | 1693.4 | 21.8      | B2/2500                 |      |         |
| BH   | (60°-80°)   | 1811.5 | 23.3      | B3/2500                 |      | G2/5000 |
| BVH  | (80°-90°)   | 25.2   | 0.3       |                         |      | G1/100  |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B3-U0-G2**

Type V Short

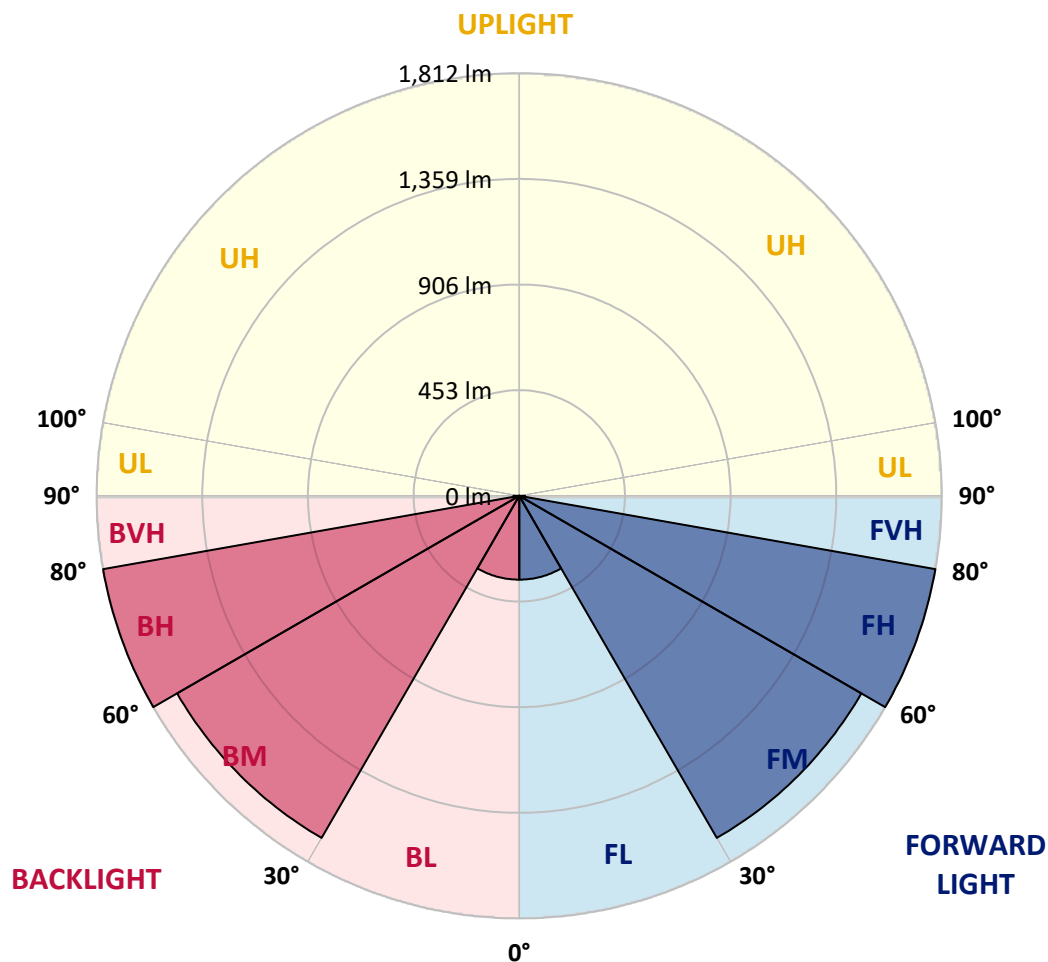



REPORT NUMBER: P316525

CATALOG NUMBER: GLEON-SA1C-750-U-5MQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 5°     | 15°    | 25°    | 35°    | 45°    | 55°    | 65°    | 75°    | 85°    | 90°    |
|-------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| 0°    | 849.6  | 849.6  | 849.6  | 849.6  | 849.6  | 849.6  | 849.6  | 849.6  | 849.6  | 849.6  | 849.6  |
| 2.5°  | 848.3  | 847.5  | 849.3  | 849.1  | 847.5  | 847.8  | 847.8  | 848.6  | 848.6  | 848.0  | 848.0  |
| 5°    | 845.2  | 844.7  | 846.8  | 846.8  | 845.2  | 845.7  | 846.2  | 847.0  | 846.8  | 846.2  | 846.0  |
| 7.5°  | 841.3  | 841.1  | 843.2  | 843.2  | 842.1  | 842.6  | 842.1  | 842.4  | 841.9  | 841.3  | 840.6  |
| 10°   | 834.9  | 835.4  | 837.2  | 837.7  | 837.7  | 838.0  | 837.5  | 836.2  | 835.4  | 834.7  | 833.9  |
| 12.5° | 829.0  | 828.7  | 831.3  | 832.6  | 834.7  | 837.0  | 835.4  | 831.8  | 830.3  | 828.7  | 828.2  |
| 15°   | 825.1  | 825.4  | 828.0  | 830.3  | 833.9  | 838.8  | 837.0  | 831.3  | 828.2  | 826.4  | 825.9  |
| 17.5° | 824.4  | 824.9  | 828.2  | 832.3  | 836.2  | 841.6  | 840.6  | 834.9  | 829.8  | 826.4  | 825.6  |
| 20°   | 826.2  | 826.4  | 831.6  | 837.5  | 844.2  | 849.3  | 847.0  | 840.8  | 833.9  | 828.7  | 827.4  |
| 22.5° | 829.5  | 830.5  | 837.0  | 846.2  | 856.5  | 863.5  | 860.7  | 850.1  | 839.3  | 832.9  | 831.1  |
| 25°   | 840.1  | 840.3  | 849.1  | 861.7  | 874.0  | 882.0  | 878.7  | 863.7  | 849.8  | 842.6  | 840.3  |
| 27.5° | 861.9  | 862.7  | 871.5  | 886.1  | 896.7  | 901.9  | 899.8  | 887.7  | 875.8  | 868.1  | 868.9  |
| 30°   | 893.6  | 894.6  | 904.4  | 920.6  | 927.1  | 928.4  | 927.9  | 922.2  | 911.4  | 901.1  | 901.9  |
| 32.5° | 932.2  | 932.7  | 945.9  | 960.5  | 965.7  | 966.7  | 965.7  | 960.5  | 947.7  | 933.8  | 934.5  |
| 35°   | 981.9  | 983.5  | 996.1  | 1010.2 | 1014.4 | 1016.4 | 1014.6 | 1007.9 | 994.5  | 980.9  | 980.4  |
| 37.5° | 1043.2 | 1043.4 | 1056.6 | 1071.3 | 1076.4 | 1076.9 | 1074.9 | 1070.5 | 1053.7 | 1041.4 | 1040.6 |
| 40°   | 1114.2 | 1115.3 | 1130.7 | 1146.4 | 1148.5 | 1146.2 | 1149.0 | 1146.4 | 1129.2 | 1115.0 | 1117.3 |
| 42.5° | 1200.8 | 1203.1 | 1221.6 | 1237.1 | 1231.1 | 1229.8 | 1231.6 | 1232.4 | 1218.5 | 1201.3 | 1199.7 |
| 45°   | 1301.4 | 1303.5 | 1326.6 | 1339.0 | 1335.1 | 1326.6 | 1330.2 | 1336.4 | 1317.1 | 1295.8 | 1297.8 |
| 47.5° | 1416.2 | 1421.4 | 1446.1 | 1457.7 | 1448.2 | 1436.6 | 1443.5 | 1452.8 | 1430.1 | 1403.6 | 1402.3 |
| 50°   | 1543.9 | 1550.4 | 1583.3 | 1599.5 | 1590.0 | 1568.6 | 1580.2 | 1586.4 | 1553.7 | 1519.5 | 1516.6 |
| 52.5° | 1680.1 | 1686.6 | 1728.0 | 1761.5 | 1755.3 | 1722.1 | 1738.3 | 1731.9 | 1694.3 | 1648.2 | 1644.6 |
| 55°   | 1834.3 | 1836.9 | 1881.7 | 1935.8 | 1942.0 | 1917.5 | 1916.5 | 1905.9 | 1850.3 | 1797.0 | 1794.4 |
| 57.5° | 1992.9 | 1994.7 | 2052.7 | 2116.5 | 2145.6 | 2145.6 | 2116.8 | 2094.4 | 2020.5 | 1958.7 | 1952.2 |
| 60°   | 2164.1 | 2170.6 | 2234.7 | 2321.4 | 2389.4 | 2409.5 | 2358.5 | 2297.5 | 2217.2 | 2141.7 | 2134.3 |
| 62.5° | 2316.5 | 2324.0 | 2422.1 | 2551.3 | 2660.5 | 2733.6 | 2609.0 | 2509.6 | 2363.4 | 2242.4 | 2228.2 |
| 65°   | 2335.9 | 2355.9 | 2498.8 | 2732.8 | 2977.2 | 3123.1 | 2884.2 | 2639.4 | 2372.9 | 2204.8 | 2190.4 |
| 67.5° | 2133.2 | 2167.2 | 2360.3 | 2724.6 | 3229.5 | 3542.8 | 3060.1 | 2565.2 | 2202.0 | 2016.1 | 2000.1 |
| 70°   | 1639.2 | 1688.6 | 1911.3 | 2383.2 | 3186.0 | 3677.9 | 2949.9 | 2245.7 | 1835.9 | 1635.8 | 1613.4 |
| 72.5° | 899.3  | 919.6  | 1119.9 | 1632.0 | 2554.2 | 3125.5 | 2460.5 | 1660.6 | 1217.5 | 990.7  | 953.1  |
| 75°   | 285.3  | 292.5  | 394.4  | 667.8  | 1444.8 | 2070.2 | 1563.0 | 815.1  | 448.7  | 330.8  | 327.0  |
| 77.5° | 126.7  | 127.4  | 142.6  | 194.9  | 497.7  | 1048.9 | 597.8  | 221.9  | 152.9  | 133.6  | 138.0  |
| 80°   | 80.1   | 80.1   | 88.3   | 96.5   | 135.4  | 304.6  | 161.7  | 105.6  | 90.1   | 83.7   | 85.5   |
| 82.5° | 38.4   | 42.5   | 57.4   | 61.8   | 74.4   | 102.5  | 82.9   | 69.0   | 60.2   | 44.8   | 41.7   |
| 85°   | 25.2   | 21.1   | 36.3   | 40.9   | 43.3   | 49.2   | 48.1   | 45.6   | 39.4   | 22.4   | 25.0   |
| 87.5° | 11.3   | 10.8   | 18.8   | 17.2   | 16.2   | 12.4   | 18.5   | 22.9   | 22.1   | 11.1   | 11.1   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2008: Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGRAW-EDISON

Report Number: SP1-1908-441-4-R4

Test Date: 10/02/2019

Luminaire Tested: SA1C-750-U-5WQ

Data in this report applies to families of products SA1C-760-U-5WQ .

### Test Information

Test Method: LM-79-2008  
 Report Number: SP1-1908-441-4-R4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/28/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: MCGRAW-EDISON  
 Catalog Number: **SA1C-750-U-5WQ**  
 Description: MCGRAW EDISON ROADWAY AND AREA LUMINAIRE


\*\*\*THIS IS A REVISION OF SP1-1908-441-4-R3. TO UPDATE THE CATALOG INFORMATION.\*\*\*TESTED IN SITU. ROADWAY AND AREA LUMINAIRE. (1) 70 CRI, 5000K, 1050MA LIGHTSQUARE WITH 16 LEDS AND TYPE V WIDE OPTICS.

### Spectral Parameters

|                           |        |           |      |      |       |
|---------------------------|--------|-----------|------|------|-------|
| CCT (K):                  | 4884   | CRI (Ra): | 73.5 |      |       |
| CIE u':                   | 0.2101 | R1:       | 70.5 | R9:  | -28.4 |
| CIE v':                   | 0.4904 | R2:       | 77.7 | R10: | 48.6  |
| Duv:                      | 0.0037 | R3:       | 84.6 | R11: | 73.2  |
| CIE x:                    | 0.3493 | R4:       | 74.7 | R12: | 50.7  |
| CIE y:                    | 0.3624 | R5:       | 71.9 | R13: | 71.2  |
| CIE z:                    | 0.2884 | R6:       | 70.7 | R14: | 91.4  |
| Peak Wavelength (nm):     | 444    | R7:       | 81.2 |      |       |
| Dominant Wavelength (nm): | 571    | R8:       | 56.9 |      |       |
| Purity:                   | 13.7   |           |      |      |       |
| Rf:                       | 74.9   |           |      |      |       |
| Rg:                       | 96.3   |           |      |      |       |

### Test Conditions

Stabilization Time: 240M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 25.0./44%  
 Sphere Temperature (°C): 25.7

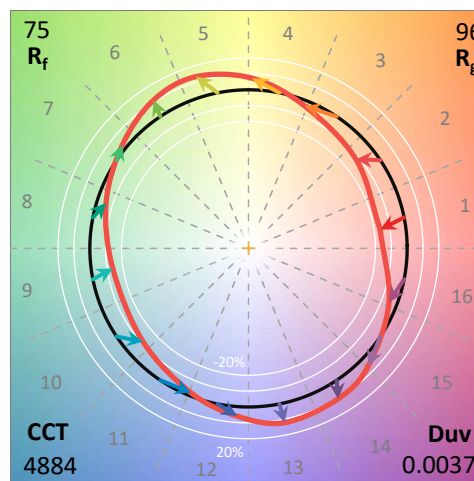


REPORT NUMBER: SP1-1908-441-4-R4

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/28/2019        | 12/28/2019           |
| Power Meter                    | IN0071                | 12/5/2018        | 12/5/2019            |
| AC Power Source                | IN0063                | 12/5/2018        | 12/5/2019            |
| DC Power Source                | IN0208                | 12/5/2018        | 12/5/2019            |
| Sphere Thermometer             | IN0085                | 12/5/2018        | 12/5/2019            |
| Room Thermometer               | IN0046                | 12/5/2018        | 12/5/2019            |

REPORT NUMBER: SP1-1908-441-4-R4

CIE 1931 Chromaticity Diagram

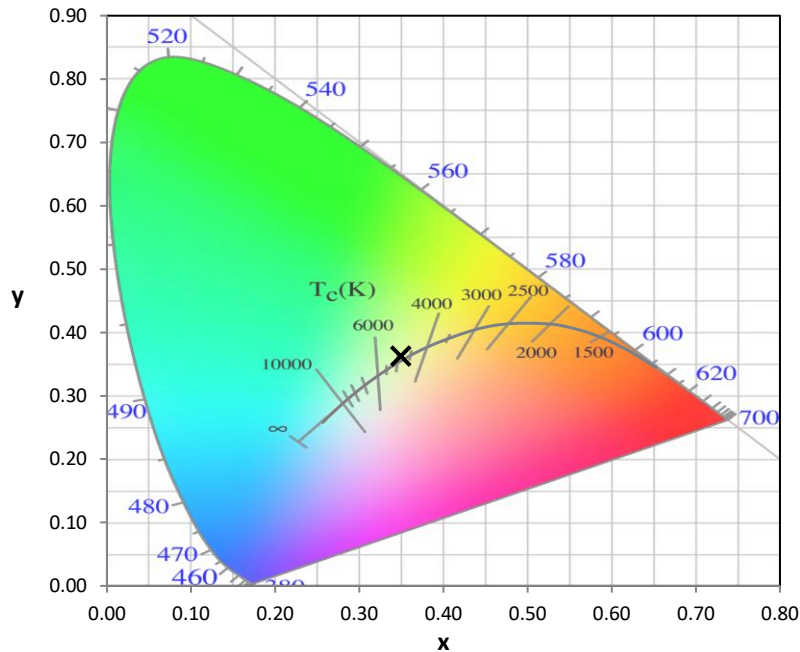

CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-1908-441-4-R4

**Photopic Flux vs. Wavelength**



#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2945             | NR               | 490       | 37941            | NR               | 620       | 88803            | NR               | 750       | 3908             | NR               | 880       | 2997             | NR               |
| 365       | 2596             | NR               | 495       | 48525            | NR               | 625       | 80578            | NR               | 755       | 3988             | NR               | 885       | 2927             | NR               |
| 370       | 2732             | NR               | 500       | 60609            | NR               | 630       | 73127            | NR               | 760       | 3335             | NR               | 890       | 2649             | NR               |
| 375       | 2894             | NR               | 505       | 72036            | NR               | 635       | 66244            | NR               | 765       | 3438             | NR               | 895       | 2828             | NR               |
| 380       | 2822             | NR               | 510       | 82168            | NR               | 640       | 59440            | NR               | 770       | 3427             | NR               | 900       | 1407             | NR               |
| 385       | 2394             | NR               | 515       | 90898            | NR               | 645       | 52864            | NR               | 775       | 2759             | NR               | 905       | 2224             | NR               |
| 390       | 2370             | NR               | 520       | 97142            | NR               | 650       | 47085            | NR               | 780       | 2340             | NR               | 910       | 2905             | NR               |
| 395       | 2267             | NR               | 525       | 103255           | NR               | 655       | 41789            | NR               | 785       | 2412             | NR               | 915       | 3350             | NR               |
| 400       | 2262             | NR               | 530       | 106697           | NR               | 660       | 37064            | NR               | 790       | 1999             | NR               | 920       | 3114             | NR               |
| 405       | 3000             | NR               | 535       | 110081           | NR               | 665       | 32299            | NR               | 795       | 2054             | NR               | 925       | 2834             | NR               |
| 410       | 5324             | NR               | 540       | 112494           | NR               | 670       | 28142            | NR               | 800       | 2331             | NR               | 930       | 2271             | NR               |
| 415       | 10725            | NR               | 545       | 115513           | NR               | 675       | 24505            | NR               | 805       | 2648             | NR               | 935       | 2228             | NR               |
| 420       | 22128            | NR               | 550       | 117203           | NR               | 680       | 21162            | NR               | 810       | 2485             | NR               | 940       | 2833             | NR               |
| 425       | 44095            | NR               | 555       | 119753           | NR               | 685       | 18400            | NR               | 815       | 2409             | NR               | 945       | 2941             | NR               |
| 430       | 77002            | NR               | 560       | 122602           | NR               | 690       | 16065            | NR               | 820       | 2221             | NR               | 950       | 2323             | NR               |
| 435       | 119881           | NR               | 565       | 124314           | NR               | 695       | 13860            | NR               | 825       | 1562             | NR               | 955       | 1667             | NR               |
| 440       | 164454           | NR               | 570       | 126775           | NR               | 700       | 12177            | NR               | 830       | 2249             | NR               | 960       | 749              | NR               |
| 445       | 179997           | NR               | 575       | 127511           | NR               | 705       | 10757            | NR               | 835       | 2573             | NR               | 965       | 2669             | NR               |
| 450       | 142822           | NR               | 580       | 127577           | NR               | 710       | 9601             | NR               | 840       | 2764             | NR               | 970       | 3968             | NR               |
| 455       | 90008            | NR               | 585       | 126153           | NR               | 715       | 8944             | NR               | 845       | 3109             | NR               | 975       | 3886             | NR               |
| 460       | 60557            | NR               | 590       | 123678           | NR               | 720       | 7947             | NR               | 850       | 2963             | NR               | 980       | 2788             | NR               |
| 465       | 43305            | NR               | 595       | 119774           | NR               | 725       | 7062             | NR               | 855       | 2336             | NR               | 985       | 3496             | NR               |
| 470       | 31089            | NR               | 600       | 115733           | NR               | 730       | 6004             | NR               | 860       | 2118             | NR               | 990       | 2913             | NR               |
| 475       | 26278            | NR               | 605       | 109231           | NR               | 735       | 5594             | NR               | 865       | 3144             | NR               | 995       | 4659             | NR               |
| 480       | 27060            | NR               | 610       | 102408           | NR               | 740       | 5165             | NR               | 870       | 3069             | NR               | 1000      | 1308             | NR               |
| 485       | 30698            | NR               | 615       | 96015            | NR               | 745       | 4687             | NR               | 875       | 3311             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-4-R4

Scotopic Flux vs. Wavelength



Scotopic Lumens: 13493.5

S/P: 1.77

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2945             | NR               | 490       | 37941            | NR               | 620       | 88803            | NR               | 750       | 3908             | NR               | 880       | 2997             | NR               |
| 365       | 2596             | NR               | 495       | 48525            | NR               | 625       | 80578            | NR               | 755       | 3988             | NR               | 885       | 2927             | NR               |
| 370       | 2732             | NR               | 500       | 60609            | NR               | 630       | 73127            | NR               | 760       | 3335             | NR               | 890       | 2649             | NR               |
| 375       | 2894             | NR               | 505       | 72036            | NR               | 635       | 66244            | NR               | 765       | 3438             | NR               | 895       | 2828             | NR               |
| 380       | 2822             | NR               | 510       | 82168            | NR               | 640       | 59440            | NR               | 770       | 3427             | NR               | 900       | 1407             | NR               |
| 385       | 2394             | NR               | 515       | 90898            | NR               | 645       | 52864            | NR               | 775       | 2759             | NR               | 905       | 2224             | NR               |
| 390       | 2370             | NR               | 520       | 97142            | NR               | 650       | 47085            | NR               | 780       | 2340             | NR               | 910       | 2905             | NR               |
| 395       | 2267             | NR               | 525       | 103255           | NR               | 655       | 41789            | NR               | 785       | 2412             | NR               | 915       | 3350             | NR               |
| 400       | 2262             | NR               | 530       | 106697           | NR               | 660       | 37064            | NR               | 790       | 1999             | NR               | 920       | 3114             | NR               |
| 405       | 3000             | NR               | 535       | 110081           | NR               | 665       | 32299            | NR               | 795       | 2054             | NR               | 925       | 2834             | NR               |
| 410       | 5324             | NR               | 540       | 112494           | NR               | 670       | 28142            | NR               | 800       | 2331             | NR               | 930       | 2271             | NR               |
| 415       | 10725            | NR               | 545       | 115513           | NR               | 675       | 24505            | NR               | 805       | 2648             | NR               | 935       | 2228             | NR               |
| 420       | 22128            | NR               | 550       | 117203           | NR               | 680       | 21162            | NR               | 810       | 2485             | NR               | 940       | 2833             | NR               |
| 425       | 44095            | NR               | 555       | 119753           | NR               | 685       | 18400            | NR               | 815       | 2409             | NR               | 945       | 2941             | NR               |
| 430       | 77002            | NR               | 560       | 122602           | NR               | 690       | 16065            | NR               | 820       | 2221             | NR               | 950       | 2323             | NR               |
| 435       | 119881           | NR               | 565       | 124314           | NR               | 695       | 13860            | NR               | 825       | 1562             | NR               | 955       | 1667             | NR               |
| 440       | 164454           | NR               | 570       | 126775           | NR               | 700       | 12177            | NR               | 830       | 2249             | NR               | 960       | 749              | NR               |
| 445       | 179997           | NR               | 575       | 127511           | NR               | 705       | 10757            | NR               | 835       | 2573             | NR               | 965       | 2669             | NR               |
| 450       | 142822           | NR               | 580       | 127577           | NR               | 710       | 9601             | NR               | 840       | 2764             | NR               | 970       | 3968             | NR               |
| 455       | 90008            | NR               | 585       | 126153           | NR               | 715       | 8944             | NR               | 845       | 3109             | NR               | 975       | 3886             | NR               |
| 460       | 60557            | NR               | 590       | 123678           | NR               | 720       | 7947             | NR               | 850       | 2963             | NR               | 980       | 2788             | NR               |
| 465       | 43305            | NR               | 595       | 119774           | NR               | 725       | 7062             | NR               | 855       | 2336             | NR               | 985       | 3496             | NR               |
| 470       | 31089            | NR               | 600       | 115733           | NR               | 730       | 6004             | NR               | 860       | 2118             | NR               | 990       | 2913             | NR               |
| 475       | 26278            | NR               | 605       | 109231           | NR               | 735       | 5594             | NR               | 865       | 3144             | NR               | 995       | 4659             | NR               |
| 480       | 27060            | NR               | 610       | 102408           | NR               | 740       | 5165             | NR               | 870       | 3069             | NR               | 1000      | 1308             | NR               |
| 485       | 30698            | NR               | 615       | 96015            | NR               | 745       | 4687             | NR               | 875       | 3311             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-4-R4

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 5378.9**

**M/P: 0.71**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2945             | NR               | 490       | 37941            | NR               | 620       | 88803            | NR               | 750       | 3908             | NR               | 880       | 2997             | NR               |
| 365       | 2596             | NR               | 495       | 48525            | NR               | 625       | 80578            | NR               | 755       | 3988             | NR               | 885       | 2927             | NR               |
| 370       | 2732             | NR               | 500       | 60609            | NR               | 630       | 73127            | NR               | 760       | 3335             | NR               | 890       | 2649             | NR               |
| 375       | 2894             | NR               | 505       | 72036            | NR               | 635       | 66244            | NR               | 765       | 3438             | NR               | 895       | 2828             | NR               |
| 380       | 2822             | NR               | 510       | 82168            | NR               | 640       | 59440            | NR               | 770       | 3427             | NR               | 900       | 1407             | NR               |
| 385       | 2394             | NR               | 515       | 90898            | NR               | 645       | 52864            | NR               | 775       | 2759             | NR               | 905       | 2224             | NR               |
| 390       | 2370             | NR               | 520       | 97142            | NR               | 650       | 47085            | NR               | 780       | 2340             | NR               | 910       | 2905             | NR               |
| 395       | 2267             | NR               | 525       | 103255           | NR               | 655       | 41789            | NR               | 785       | 2412             | NR               | 915       | 3350             | NR               |
| 400       | 2262             | NR               | 530       | 106697           | NR               | 660       | 37064            | NR               | 790       | 1999             | NR               | 920       | 3114             | NR               |
| 405       | 3000             | NR               | 535       | 110081           | NR               | 665       | 32299            | NR               | 795       | 2054             | NR               | 925       | 2834             | NR               |
| 410       | 5324             | NR               | 540       | 112494           | NR               | 670       | 28142            | NR               | 800       | 2331             | NR               | 930       | 2271             | NR               |
| 415       | 10725            | NR               | 545       | 115513           | NR               | 675       | 24505            | NR               | 805       | 2648             | NR               | 935       | 2228             | NR               |
| 420       | 22128            | NR               | 550       | 117203           | NR               | 680       | 21162            | NR               | 810       | 2485             | NR               | 940       | 2833             | NR               |
| 425       | 44095            | NR               | 555       | 119753           | NR               | 685       | 18400            | NR               | 815       | 2409             | NR               | 945       | 2941             | NR               |
| 430       | 77002            | NR               | 560       | 122602           | NR               | 690       | 16065            | NR               | 820       | 2221             | NR               | 950       | 2323             | NR               |
| 435       | 119881           | NR               | 565       | 124314           | NR               | 695       | 13860            | NR               | 825       | 1562             | NR               | 955       | 1667             | NR               |
| 440       | 164454           | NR               | 570       | 126775           | NR               | 700       | 12177            | NR               | 830       | 2249             | NR               | 960       | 749              | NR               |
| 445       | 179997           | NR               | 575       | 127511           | NR               | 705       | 10757            | NR               | 835       | 2573             | NR               | 965       | 2669             | NR               |
| 450       | 142822           | NR               | 580       | 127577           | NR               | 710       | 9601             | NR               | 840       | 2764             | NR               | 970       | 3968             | NR               |
| 455       | 90008            | NR               | 585       | 126153           | NR               | 715       | 8944             | NR               | 845       | 3109             | NR               | 975       | 3886             | NR               |
| 460       | 60557            | NR               | 590       | 123678           | NR               | 720       | 7947             | NR               | 850       | 2963             | NR               | 980       | 2788             | NR               |
| 465       | 43305            | NR               | 595       | 119774           | NR               | 725       | 7062             | NR               | 855       | 2336             | NR               | 985       | 3496             | NR               |
| 470       | 31089            | NR               | 600       | 115733           | NR               | 730       | 6004             | NR               | 860       | 2118             | NR               | 990       | 2913             | NR               |
| 475       | 26278            | NR               | 605       | 109231           | NR               | 735       | 5594             | NR               | 865       | 3144             | NR               | 995       | 4659             | NR               |
| 480       | 27060            | NR               | 610       | 102408           | NR               | 740       | 5165             | NR               | 870       | 3069             | NR               | 1000      | 1308             | NR               |
| 485       | 30698            | NR               | 615       | 96015            | NR               | 745       | 4687             | NR               | 875       | 3311             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-4-R4


**TM-30-18**

### Summary

$R_f = 74.9$   
 $R_g = 96.3$   
 CIE  $R_a = 73.5$   
 $R_g = -28.4$



### Color Vector Graphics

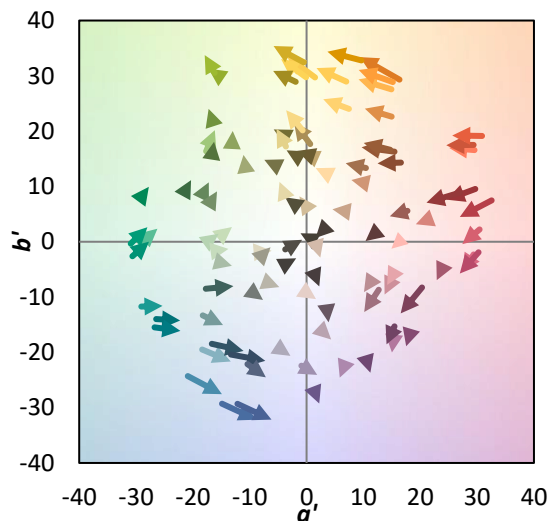

REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**


|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 61 | CES51 = 90 | CES76 = 52 |
| CES02 = 60 | CES27 = 84 | CES52 = 91 | CES77 = 71 |
| CES03 = 30 | CES28 = 81 | CES53 = 79 | CES78 = 54 |
| CES04 = 69 | CES29 = 58 | CES54 = 83 | CES79 = 80 |
| CES05 = 46 | CES30 = 67 | CES55 = 83 | CES80 = 77 |
| CES06 = 50 | CES31 = 63 | CES56 = 73 | CES81 = 77 |
| CES07 = 39 | CES32 = 59 | CES57 = 72 | CES82 = 90 |
| CES08 = 38 | CES33 = 69 | CES58 = 73 | CES83 = 86 |
| CES09 = 29 | CES34 = 69 | CES59 = 88 | CES84 = 88 |
| CES10 = 73 | CES35 = 83 | CES60 = 93 | CES85 = 84 |
| CES11 = 56 | CES36 = 95 | CES61 = 88 | CES86 = 75 |
| CES12 = 61 | CES37 = 78 | CES62 = 85 | CES87 = 78 |
| CES13 = 41 | CES38 = 76 | CES63 = 77 | CES88 = 79 |
| CES14 = 74 | CES39 = 93 | CES64 = 74 | CES89 = 75 |
| CES15 = 70 | CES40 = 86 | CES65 = 67 | CES90 = 77 |
| CES16 = 46 | CES41 = 87 | CES66 = 69 | CES91 = 89 |
| CES17 = 49 | CES42 = 78 | CES67 = 67 | CES92 = 66 |
| CES18 = 55 | CES43 = 75 | CES68 = 73 | CES93 = 80 |
| CES19 = 71 | CES44 = 99 | CES69 = 81 | CES94 = 57 |
| CES20 = 64 | CES45 = 83 | CES70 = 63 | CES95 = 71 |
| CES21 = 85 | CES46 = 81 | CES71 = 60 | CES96 = 78 |
| CES22 = 77 | CES47 = 80 | CES72 = 86 | CES97 = 85 |
| CES23 = 91 | CES48 = 72 | CES73 = 53 | CES98 = 75 |
| CES24 = 90 | CES49 = 81 | CES74 = 96 | CES99 = 62 |
| CES25 = 71 | CES50 = 89 | CES75 = 58 |            |



REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**

Color Rendition by Hue-Angle Bin

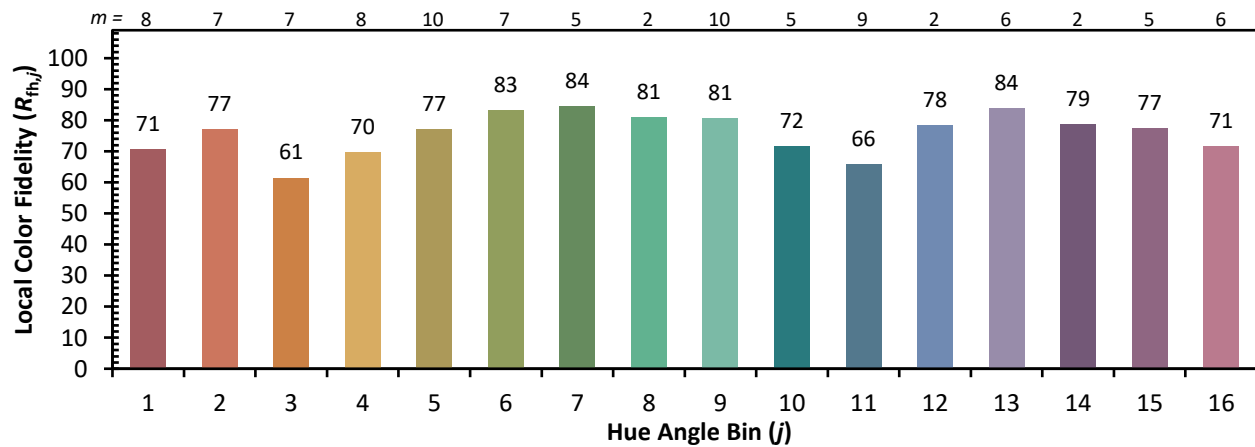

REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**

**Measure Comparisons**



(END OF REPORT)