

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: McGRAW-EDISON

Report Number: P316847

Luminaire Tested: **GLEON-SA3C-750-U-5NQ**

Issue Date: 3/3/2020

**Test Information**

Test Method: LM-79-08  
Report Number: P316847  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-1903-205-5)  
Test Lab: INNOVATION CENTER  
Issue Date: 3/3/2020  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: McGRAW-EDISON  
Catalog Number: GLEON-SA3C-750-U-5NQ  
Description: GALLEON AREA AND ROADWAY LUMINAIRE  
(3) 70 CRI, 5000K, 1050mA LIGHTSQUARES WITH 16 LEDS EACH AND TYPE V  
NARROW OPTICS  
Light Source: -  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 22275 lumens  
Efficiency: N/A  
Efficacy: 134.2 lumens/watt  
Luminous Opening: Rectangular (W 1' x L: 1' x H: 0')  
IES Classification: Type V - Short  
BUG Rating: B4 - U0 - G2

Input Watts (W): 166  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT




REPORT NUMBER: P316847

CATALOG NUMBER: GLEON-SA3C-750-U-5N9

## Iso-Footcandle Lines of Horizontal Illumination


✕ Max cd  
 - - - 1/2 Max cd

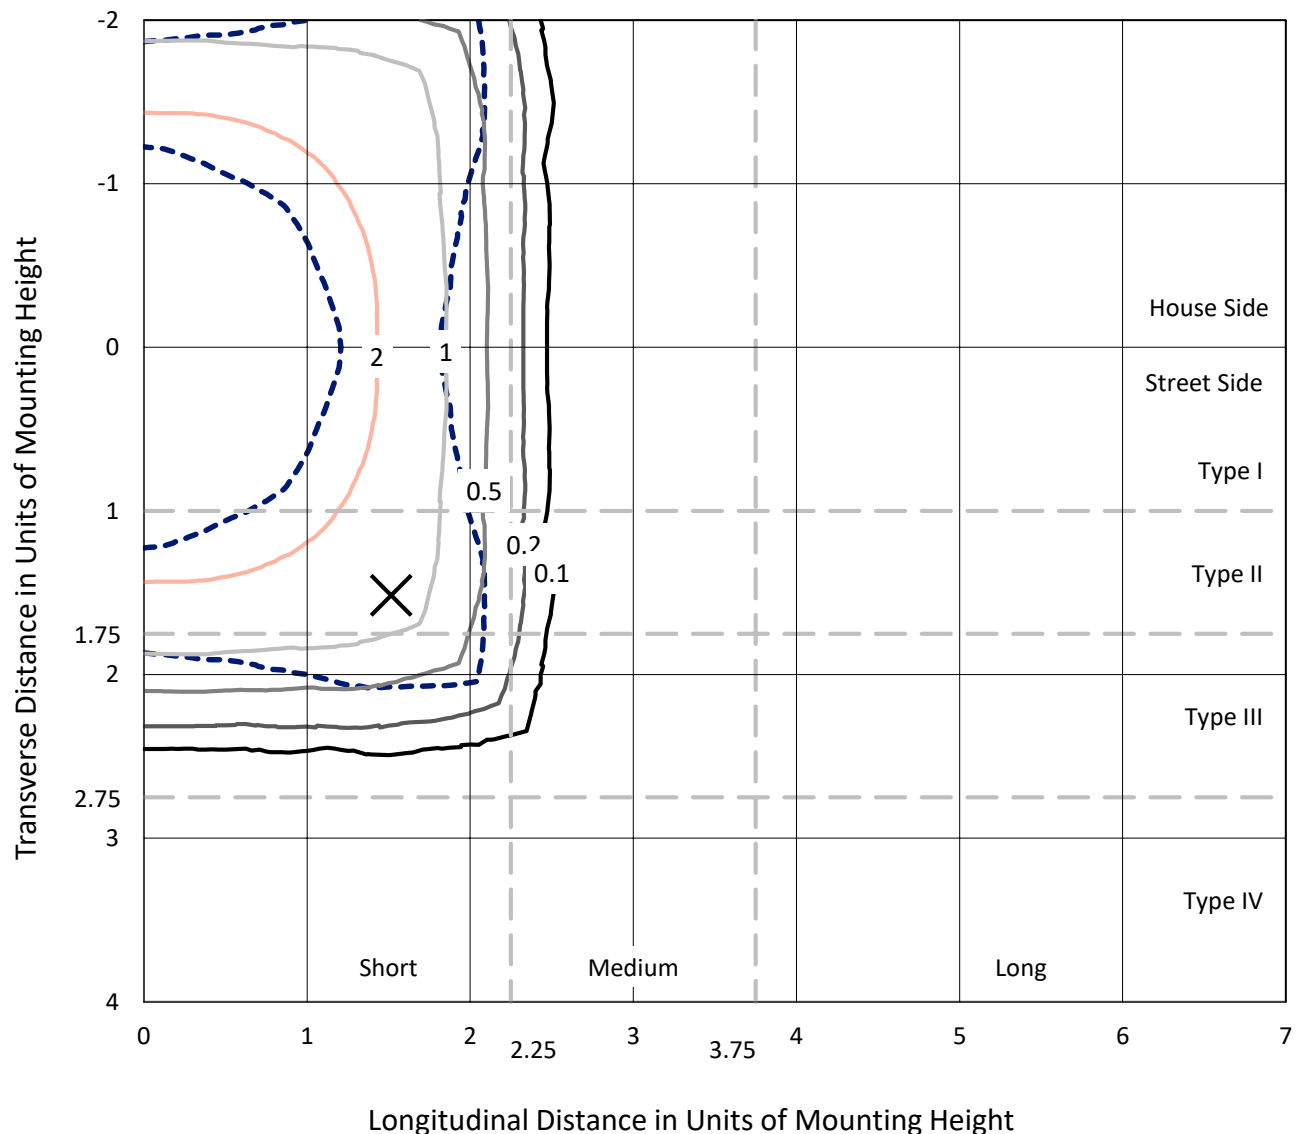

Based on 25 foot mounting height. Maximum calculated value = 4.3 fc  
 Type V - Short - N/A

REPORT NUMBER: P316847  
CATALOG NUMBER: GLEON-SA3C-750-U-5NQ

## Luminous Intensity Polar Plot

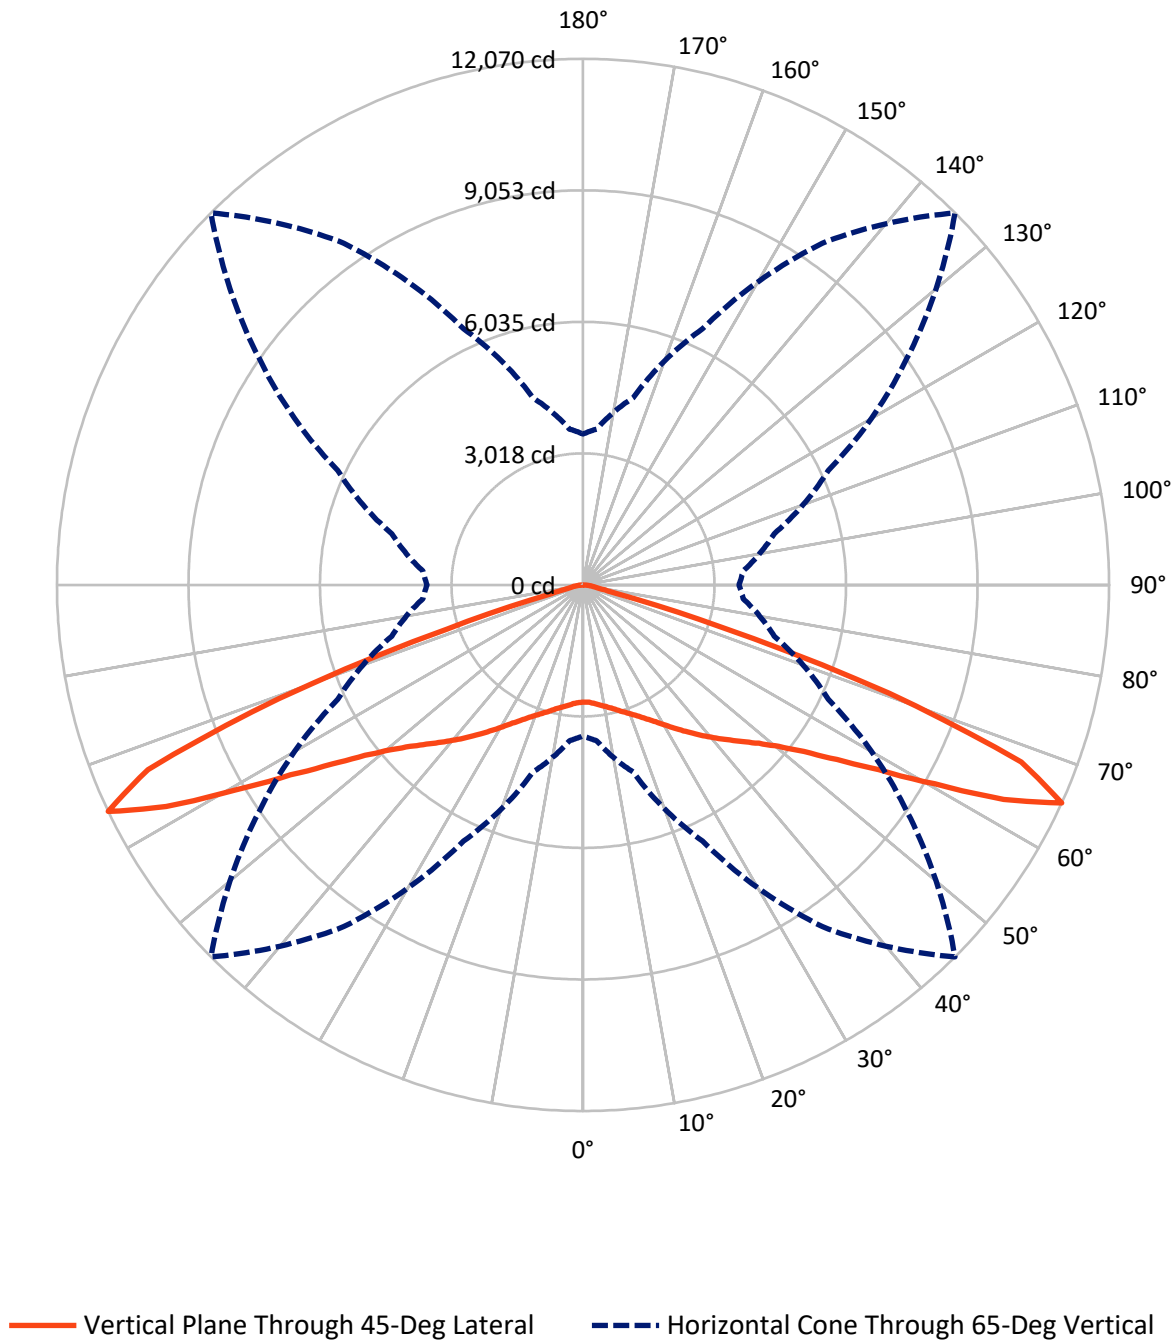

REPORT NUMBER: P316847

CATALOG NUMBER: GLEON-SA3C-750-U-5NQ


**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total   |
|--------------------|-----------|----------|--------|---------|
| <b>House Side</b>  | Lumens    | 11137.5  | 0.0    | 11137.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Street Side</b> | Lumens    | 11137.5  | 0.0    | 11137.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Total</b>       | Lumens    | 22275.0  | 0.0    | 22275.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0   |

**ZONAL LUMENS:**

| Zone      | Lumens  | % Fixture |
|-----------|---------|-----------|
| 0°-10°    | 263.9   | 1.2       |
| 10°-20°   | 848.3   | 3.8       |
| 20°-30°   | 1591.6  | 7.1       |
| 30°-40°   | 2632.2  | 11.8      |
| 40°-50°   | 4076.9  | 18.3      |
| 50°-60°   | 6252.9  | 28.1      |
| 60°-70°   | 5834.6  | 26.2      |
| 70°-80°   | 679.1   | 3.0       |
| 80°-90°   | 95.4    | 0.4       |
| 90°-100°  | 0.0     | 0.0       |
| 100°-110° | 0.0     | 0.0       |
| 110°-120° | 0.0     | 0.0       |
| 120°-130° | 0.0     | 0.0       |
| 130°-140° | 0.0     | 0.0       |
| 140°-150° | 0.0     | 0.0       |
| 150°-160° | 0.0     | 0.0       |
| 160°-170° | 0.0     | 0.0       |
| 170°-180° | 0.0     | 0.0       |
| 0°-90°    | 22275.0 | 100.0     |
| 0°-180°   | 22275.0 | 100.0     |

**Coefficient of Utilization**

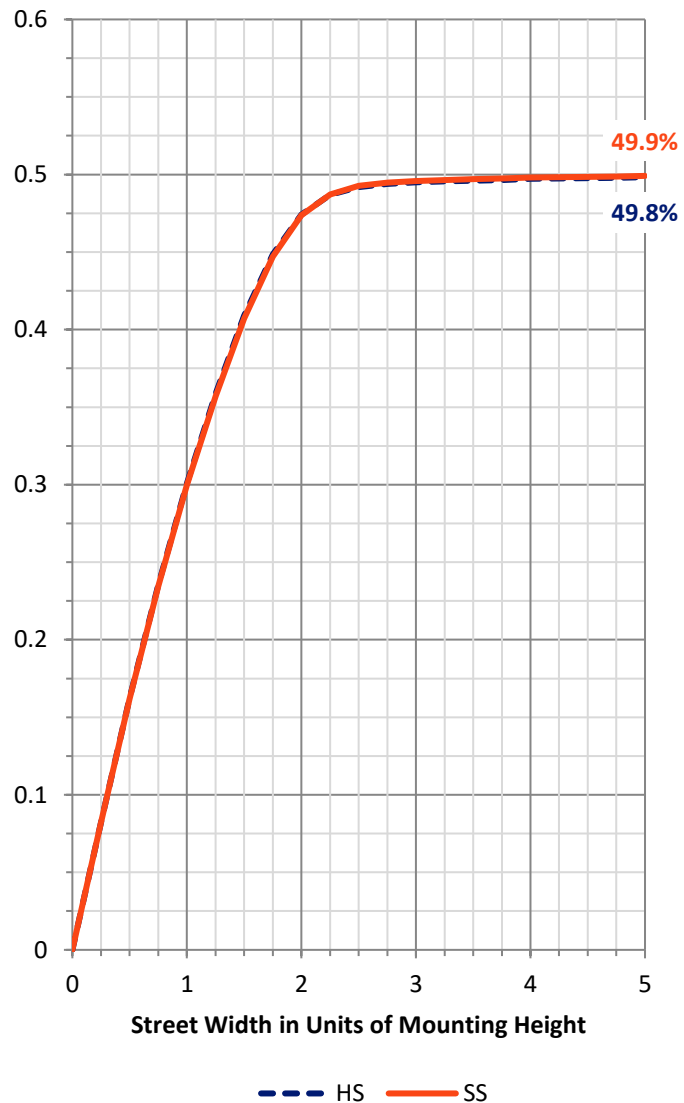

REPORT NUMBER: P316847


CATALOG NUMBER: GLEON-SA3C-750-U-5NQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 1351.9 | 6.1       |                         |      |         |
| FM   | (30°-60°)   | 6481.0 | 29.1      |                         |      |         |
| FH   | (60°-80°)   | 3256.9 | 14.6      |                         |      | G2/5000 |
| FVH  | (80°-90°)   | 47.7   | 0.2       |                         |      | G1/100  |
| BL   | (0°-30°)    | 1351.9 | 6.1       | B3/2500                 |      |         |
| BM   | (30°-60°)   | 6481.0 | 29.1      | B4/8500                 |      |         |
| BH   | (60°-80°)   | 3256.9 | 14.6      | B4/5000                 |      | G2/5000 |
| BVH  | (80°-90°)   | 47.7   | 0.2       |                         |      | G1/100  |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B4-U0-G2**

Type V Short

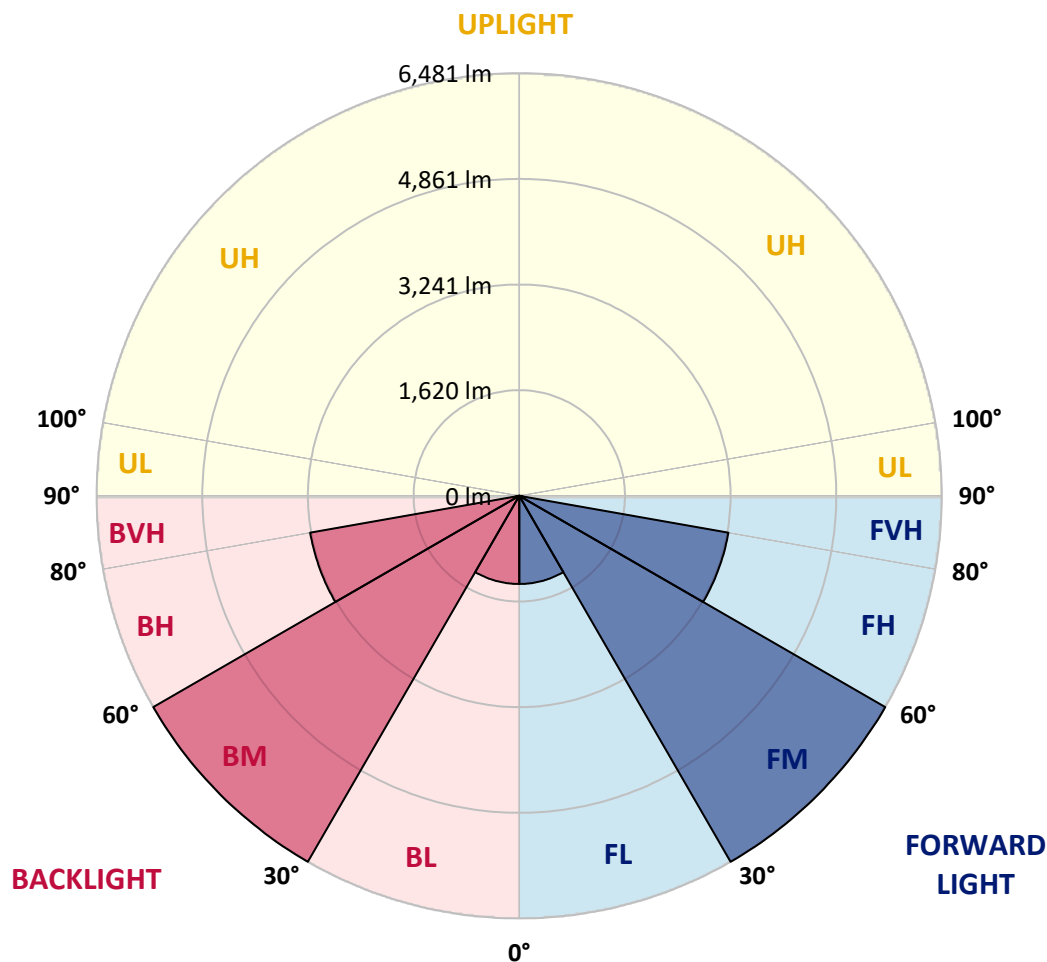



REPORT NUMBER: P316847

CATALOG NUMBER: GLEON-SA3C-750-U-5NQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 5°     | 15°    | 25°    | 35°    | 45°     | 55°    | 65°    | 75°    | 85°    | 90°    |
|-------|--------|--------|--------|--------|--------|---------|--------|--------|--------|--------|--------|
| 0°    | 2690.0 | 2690.0 | 2690.0 | 2690.0 | 2690.0 | 2690.0  | 2690.0 | 2690.0 | 2690.0 | 2690.0 | 2690.0 |
| 2.5°  | 2698.9 | 2697.4 | 2698.9 | 2699.6 | 2695.2 | 2697.4  | 2696.6 | 2700.3 | 2701.8 | 2700.3 | 2700.3 |
| 5°    | 2729.9 | 2727.7 | 2730.7 | 2734.4 | 2728.4 | 2729.9  | 2727.7 | 2732.1 | 2733.6 | 2730.7 | 2732.9 |
| 7.5°  | 2772.8 | 2773.5 | 2776.5 | 2783.2 | 2779.5 | 2782.4  | 2778.0 | 2778.7 | 2778.0 | 2773.5 | 2774.3 |
| 10°   | 2819.4 | 2820.1 | 2825.3 | 2834.2 | 2835.7 | 2835.7  | 2832.7 | 2830.5 | 2827.5 | 2824.6 | 2825.3 |
| 12.5° | 2875.6 | 2879.3 | 2883.0 | 2894.1 | 2894.1 | 2900.0  | 2898.5 | 2892.6 | 2887.4 | 2883.0 | 2883.0 |
| 15°   | 2951.7 | 2951.0 | 2955.4 | 2966.5 | 2971.7 | 2981.3  | 2981.3 | 2973.2 | 2966.5 | 2962.1 | 2960.6 |
| 17.5° | 3031.6 | 3033.8 | 3036.8 | 3050.1 | 3058.2 | 3069.3  | 3070.8 | 3064.1 | 3059.7 | 3053.8 | 3050.1 |
| 20°   | 3124.8 | 3128.5 | 3140.3 | 3145.5 | 3152.9 | 3163.2  | 3166.9 | 3165.4 | 3161.0 | 3158.0 | 3158.8 |
| 22.5° | 3233.5 | 3243.1 | 3250.5 | 3257.9 | 3266.7 | 3274.1  | 3277.8 | 3283.0 | 3278.6 | 3276.3 | 3274.9 |
| 25°   | 3365.1 | 3371.7 | 3386.5 | 3399.8 | 3405.7 | 3408.0  | 3412.4 | 3419.8 | 3419.1 | 3413.9 | 3413.9 |
| 27.5° | 3514.4 | 3527.0 | 3545.5 | 3564.7 | 3564.7 | 3557.3  | 3572.1 | 3584.7 | 3580.2 | 3573.6 | 3564.7 |
| 30°   | 3695.6 | 3707.4 | 3728.9 | 3755.5 | 3742.2 | 3737.0  | 3757.0 | 3779.9 | 3773.2 | 3762.1 | 3760.7 |
| 32.5° | 3890.8 | 3901.9 | 3930.0 | 3958.8 | 3941.8 | 3934.4  | 3955.9 | 3989.1 | 3977.3 | 3955.1 | 3941.8 |
| 35°   | 4102.3 | 4113.4 | 4153.3 | 4188.0 | 4159.2 | 4146.6  | 4164.4 | 4200.6 | 4179.9 | 4138.5 | 4128.1 |
| 37.5° | 4332.2 | 4338.1 | 4389.9 | 4425.4 | 4405.4 | 4372.2  | 4394.3 | 4421.0 | 4403.2 | 4352.9 | 4333.0 |
| 40°   | 4571.1 | 4592.5 | 4652.4 | 4693.8 | 4659.0 | 4606.5  | 4643.5 | 4680.5 | 4653.9 | 4589.5 | 4555.5 |
| 42.5° | 4849.8 | 4866.1 | 4945.9 | 4982.9 | 4926.7 | 4852.8  | 4903.1 | 4953.3 | 4926.7 | 4864.6 | 4835.0 |
| 45°   | 5139.7 | 5164.8 | 5260.2 | 5297.2 | 5215.8 | 5121.9  | 5183.3 | 5271.3 | 5269.1 | 5179.6 | 5148.5 |
| 47.5° | 5455.4 | 5480.5 | 5594.4 | 5643.2 | 5555.2 | 5429.5  | 5516.0 | 5640.3 | 5631.4 | 5533.0 | 5507.9 |
| 50°   | 5819.9 | 5846.5 | 5988.5 | 6049.9 | 5967.8 | 5821.4  | 5951.5 | 6061.0 | 6044.7 | 5923.4 | 5925.7 |
| 52.5° | 6277.6 | 6276.1 | 6452.9 | 6559.3 | 6475.0 | 6345.7  | 6465.4 | 6571.9 | 6504.6 | 6336.8 | 6331.6 |
| 55°   | 6678.4 | 6702.8 | 6921.7 | 7123.5 | 7118.3 | 7068.8  | 7116.9 | 7121.3 | 6929.0 | 6705.7 | 6678.4 |
| 57.5° | 6941.6 | 6988.2 | 7296.5 | 7661.8 | 7935.4 | 8001.2  | 7908.0 | 7625.6 | 7175.3 | 6818.1 | 6774.5 |
| 60°   | 6779.7 | 6850.7 | 7335.0 | 8079.6 | 8885.5 | 9272.3  | 8746.5 | 7870.3 | 6983.8 | 6486.1 | 6427.0 |
| 62.5° | 5686.8 | 5806.6 | 6515.7 | 7877.7 | 9703.3 | 10833.9 | 9354.3 | 7477.7 | 6222.2 | 5536.7 | 5435.4 |
| 65°   | 3463.4 | 3589.9 | 4444.6 | 6483.9 | 9571.0 | 12070.2 | 9077.0 | 6206.6 | 4541.5 | 3688.9 | 3579.5 |
| 67.5° | 1154.2 | 1191.2 | 1694.7 | 3583.9 | 7522.1 | 10845.0 | 7534.6 | 3715.6 | 1976.5 | 1310.2 | 1271.8 |
| 70°   | 451.8  | 455.5  | 537.6  | 1038.9 | 3552.1 | 7448.9  | 3919.6 | 1057.4 | 562.0  | 444.4  | 454.0  |
| 72.5° | 332.0  | 333.5  | 356.4  | 434.0  | 925.7  | 3281.5  | 959.0  | 436.3  | 346.8  | 311.3  | 311.3  |
| 75°   | 266.9  | 266.9  | 283.2  | 316.5  | 414.8  | 752.7   | 420.7  | 312.8  | 271.4  | 248.4  | 245.5  |
| 77.5° | 210.7  | 215.2  | 227.7  | 249.2  | 281.0  | 362.3   | 291.3  | 247.7  | 218.9  | 197.4  | 193.0  |
| 80°   | 156.8  | 161.2  | 181.9  | 192.2  | 201.9  | 251.4   | 215.2  | 193.7  | 173.0  | 147.9  | 143.4  |
| 82.5° | 102.8  | 107.2  | 133.1  | 139.0  | 136.8  | 164.1   | 144.9  | 142.7  | 127.2  | 95.4   | 90.9   |
| 85°   | 67.3   | 68.8   | 88.7   | 92.4   | 85.0   | 74.7    | 92.4   | 97.6   | 88.7   | 62.1   | 59.9   |
| 87.5° | 31.8   | 31.8   | 45.1   | 42.1   | 38.4   | 31.1    | 42.1   | 49.5   | 50.3   | 30.3   | 29.6   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0     | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2008: Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGRAW-EDISON

Report Number: SP1-1908-441-4-R4

Test Date: 10/02/2019

Luminaire Tested: SA1C-750-U-5WQ

Data in this report applies to families of products SA1C-760-U-5WQ .




### Test Information

Test Method: LM-79-2008  
 Report Number: SP1-1908-441-4-R4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/28/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: MCGRAW-EDISON  
 Catalog Number: **SA1C-750-U-5WQ**  
 Description: MCGRAW EDISON ROADWAY AND AREA LUMINAIRE

\*\*\*THIS IS A REVISION OF SP1-1908-441-4-R3. TO UPDATE THE CATALOG INFORMATION.\*\*\*TESTED IN SITU. ROADWAY AND AREA LUMINAIRE. (1) 70 CRI, 5000K, 1050MA LIGHTSQUARE WITH 16 LEDS AND TYPE V WIDE OPTICS.

### Spectral Parameters

|                           |        |           |      |      |       |
|---------------------------|--------|-----------|------|------|-------|
| CCT (K):                  | 4884   | CRI (Ra): | 73.5 |      |       |
| CIE u':                   | 0.2101 | R1:       | 70.5 | R9:  | -28.4 |
| CIE v':                   | 0.4904 | R2:       | 77.7 | R10: | 48.6  |
| Duv:                      | 0.0037 | R3:       | 84.6 | R11: | 73.2  |
| CIE x:                    | 0.3493 | R4:       | 74.7 | R12: | 50.7  |
| CIE y:                    | 0.3624 | R5:       | 71.9 | R13: | 71.2  |
| CIE z:                    | 0.2884 | R6:       | 70.7 | R14: | 91.4  |
| Peak Wavelength (nm):     | 444    | R7:       | 81.2 |      |       |
| Dominant Wavelength (nm): | 571    | R8:       | 56.9 |      |       |
| Purity:                   | 13.7   |           |      |      |       |
| Rf:                       | 74.9   |           |      |      |       |
| Rg:                       | 96.3   |           |      |      |       |

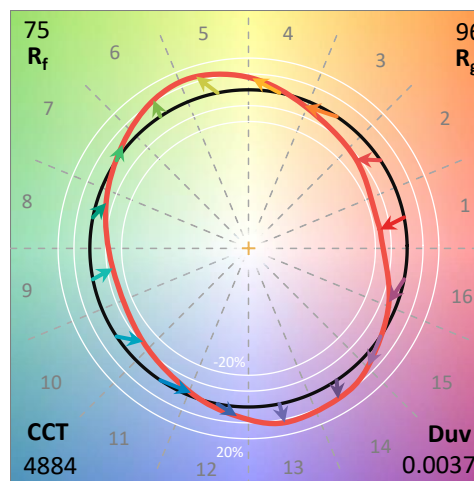

### Test Conditions


Stabilization Time: 240M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 25.0./44%  
 Sphere Temperature (°C): 25.7

REPORT NUMBER: SP1-1908-441-4-R4


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/28/2019        | 12/28/2019           |
| Power Meter                    | IN0071                | 12/5/2018        | 12/5/2019            |
| AC Power Source                | IN0063                | 12/5/2018        | 12/5/2019            |
| DC Power Source                | IN0208                | 12/5/2018        | 12/5/2019            |
| Sphere Thermometer             | IN0085                | 12/5/2018        | 12/5/2019            |
| Room Thermometer               | IN0046                | 12/5/2018        | 12/5/2019            |

REPORT NUMBER: SP1-1908-441-4-R4

**CIE 1931 Chromaticity Diagram**

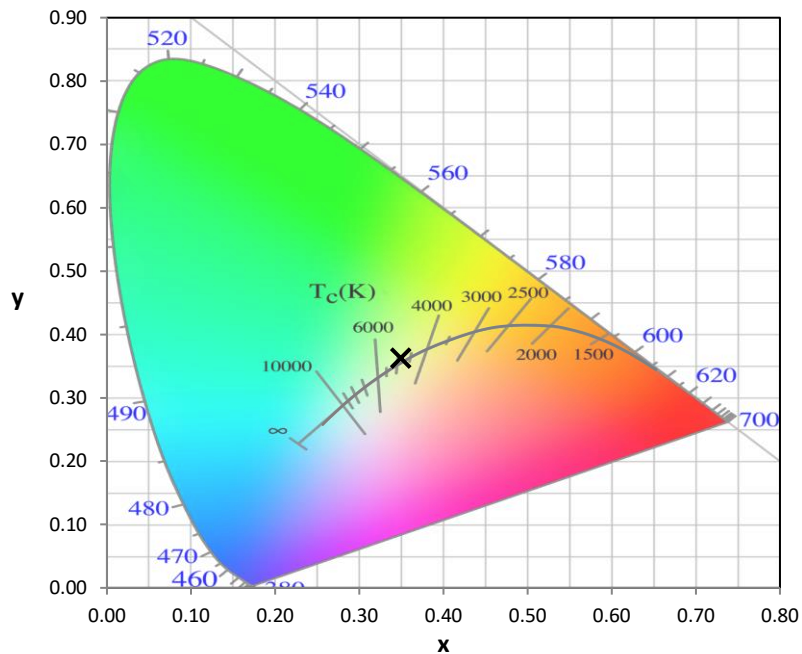


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

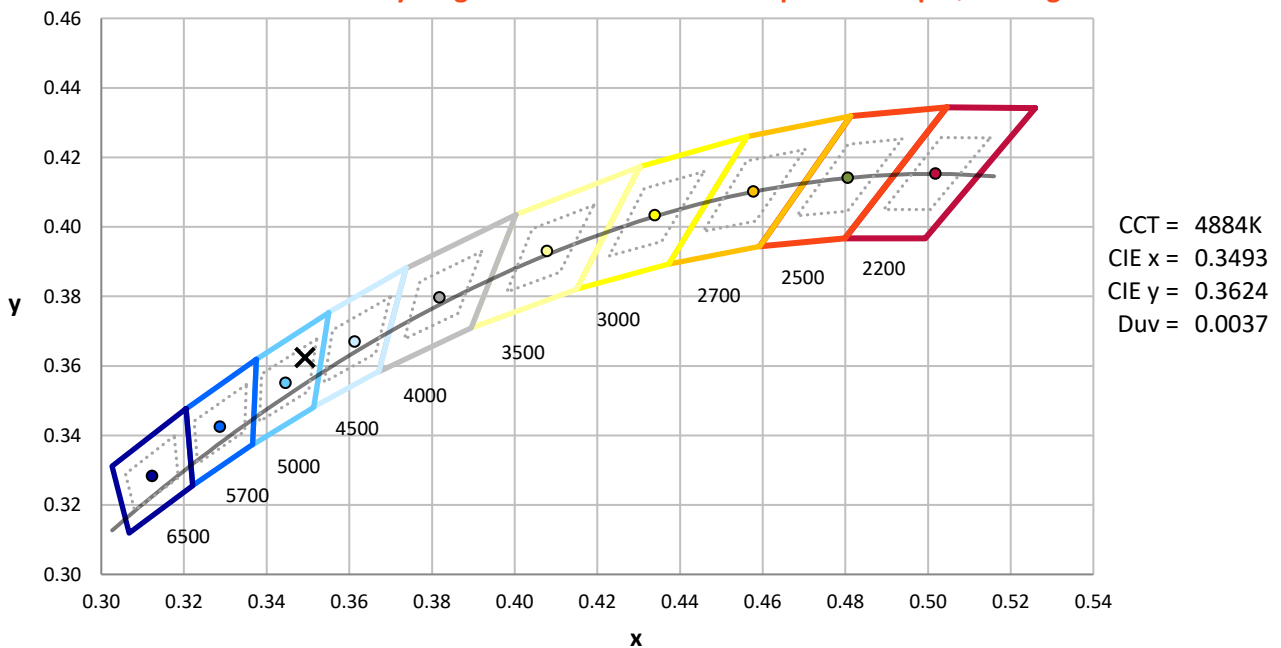

Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-1908-441-4-R4

**Photopic Flux vs. Wavelength**

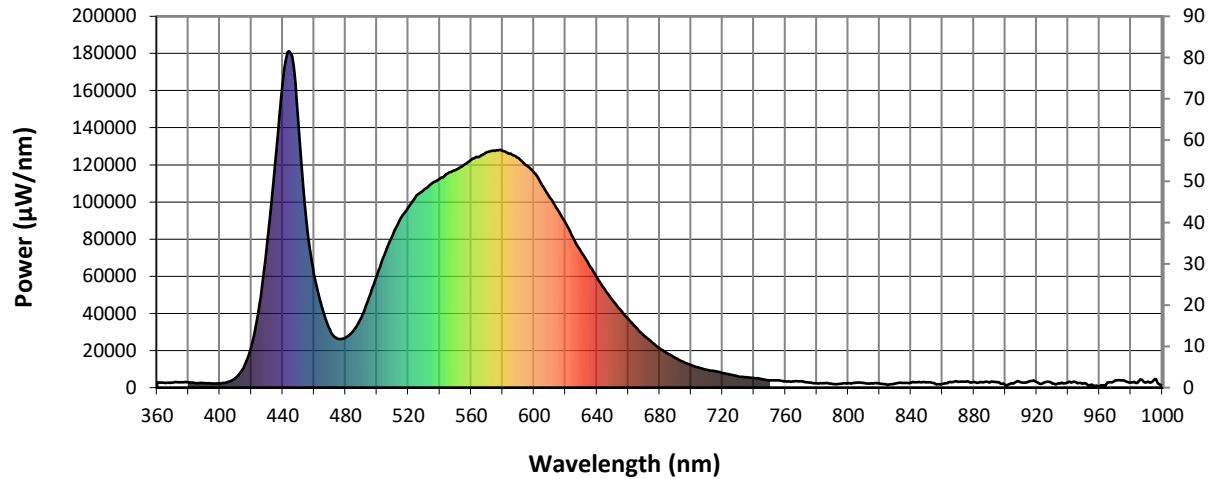


#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2945             | NR               | 490       | 37941            | NR               | 620       | 88803            | NR               | 750       | 3908             | NR               | 880       | 2997             | NR               |
| 365       | 2596             | NR               | 495       | 48525            | NR               | 625       | 80578            | NR               | 755       | 3988             | NR               | 885       | 2927             | NR               |
| 370       | 2732             | NR               | 500       | 60609            | NR               | 630       | 73127            | NR               | 760       | 3335             | NR               | 890       | 2649             | NR               |
| 375       | 2894             | NR               | 505       | 72036            | NR               | 635       | 66244            | NR               | 765       | 3438             | NR               | 895       | 2828             | NR               |
| 380       | 2822             | NR               | 510       | 82168            | NR               | 640       | 59440            | NR               | 770       | 3427             | NR               | 900       | 1407             | NR               |
| 385       | 2394             | NR               | 515       | 90898            | NR               | 645       | 52864            | NR               | 775       | 2759             | NR               | 905       | 2224             | NR               |
| 390       | 2370             | NR               | 520       | 97142            | NR               | 650       | 47085            | NR               | 780       | 2340             | NR               | 910       | 2905             | NR               |
| 395       | 2267             | NR               | 525       | 103255           | NR               | 655       | 41789            | NR               | 785       | 2412             | NR               | 915       | 3350             | NR               |
| 400       | 2262             | NR               | 530       | 106697           | NR               | 660       | 37064            | NR               | 790       | 1999             | NR               | 920       | 3114             | NR               |
| 405       | 3000             | NR               | 535       | 110081           | NR               | 665       | 32299            | NR               | 795       | 2054             | NR               | 925       | 2834             | NR               |
| 410       | 5324             | NR               | 540       | 112494           | NR               | 670       | 28142            | NR               | 800       | 2331             | NR               | 930       | 2271             | NR               |
| 415       | 10725            | NR               | 545       | 115513           | NR               | 675       | 24505            | NR               | 805       | 2648             | NR               | 935       | 2228             | NR               |
| 420       | 22128            | NR               | 550       | 117203           | NR               | 680       | 21162            | NR               | 810       | 2485             | NR               | 940       | 2833             | NR               |
| 425       | 44095            | NR               | 555       | 119753           | NR               | 685       | 18400            | NR               | 815       | 2409             | NR               | 945       | 2941             | NR               |
| 430       | 77002            | NR               | 560       | 122602           | NR               | 690       | 16065            | NR               | 820       | 2221             | NR               | 950       | 2323             | NR               |
| 435       | 119881           | NR               | 565       | 124314           | NR               | 695       | 13860            | NR               | 825       | 1562             | NR               | 955       | 1667             | NR               |
| 440       | 164454           | NR               | 570       | 126775           | NR               | 700       | 12177            | NR               | 830       | 2249             | NR               | 960       | 749              | NR               |
| 445       | 179997           | NR               | 575       | 127511           | NR               | 705       | 10757            | NR               | 835       | 2573             | NR               | 965       | 2669             | NR               |
| 450       | 142822           | NR               | 580       | 127577           | NR               | 710       | 9601             | NR               | 840       | 2764             | NR               | 970       | 3968             | NR               |
| 455       | 90008            | NR               | 585       | 126153           | NR               | 715       | 8944             | NR               | 845       | 3109             | NR               | 975       | 3886             | NR               |
| 460       | 60557            | NR               | 590       | 123678           | NR               | 720       | 7947             | NR               | 850       | 2963             | NR               | 980       | 2788             | NR               |
| 465       | 43305            | NR               | 595       | 119774           | NR               | 725       | 7062             | NR               | 855       | 2336             | NR               | 985       | 3496             | NR               |
| 470       | 31089            | NR               | 600       | 115733           | NR               | 730       | 6004             | NR               | 860       | 2118             | NR               | 990       | 2913             | NR               |
| 475       | 26278            | NR               | 605       | 109231           | NR               | 735       | 5594             | NR               | 865       | 3144             | NR               | 995       | 4659             | NR               |
| 480       | 27060            | NR               | 610       | 102408           | NR               | 740       | 5165             | NR               | 870       | 3069             | NR               | 1000      | 1308             | NR               |
| 485       | 30698            | NR               | 615       | 96015            | NR               | 745       | 4687             | NR               | 875       | 3311             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-4-R4

Scotopic Flux vs. Wavelength

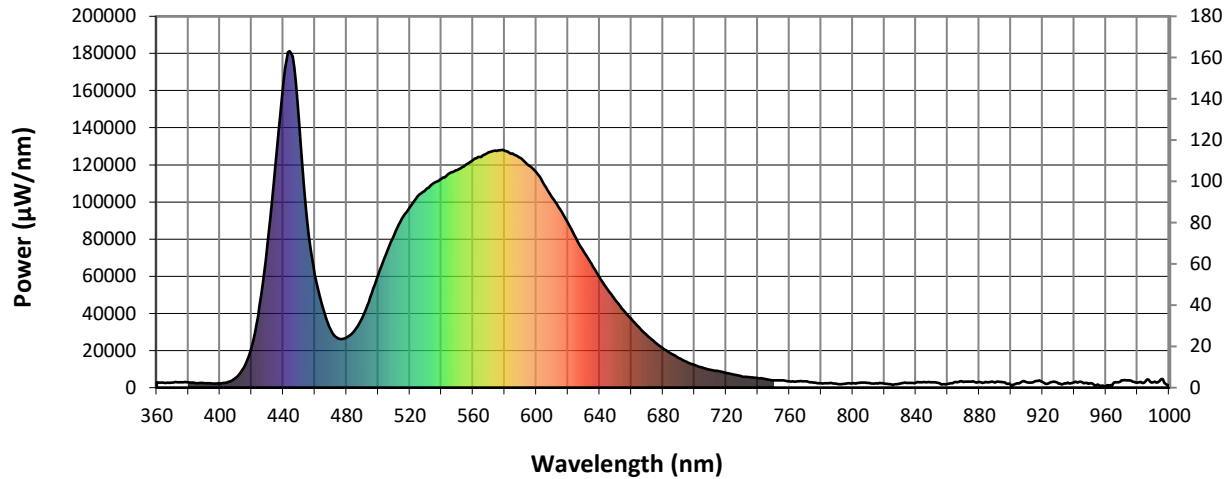


Scotopic Lumens: 13493.5

S/P: 1.77

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2945             | NR               | 490       | 37941            | NR               | 620       | 88803            | NR               | 750       | 3908             | NR               | 880       | 2997             | NR               |
| 365       | 2596             | NR               | 495       | 48525            | NR               | 625       | 80578            | NR               | 755       | 3988             | NR               | 885       | 2927             | NR               |
| 370       | 2732             | NR               | 500       | 60609            | NR               | 630       | 73127            | NR               | 760       | 3335             | NR               | 890       | 2649             | NR               |
| 375       | 2894             | NR               | 505       | 72036            | NR               | 635       | 66244            | NR               | 765       | 3438             | NR               | 895       | 2828             | NR               |
| 380       | 2822             | NR               | 510       | 82168            | NR               | 640       | 59440            | NR               | 770       | 3427             | NR               | 900       | 1407             | NR               |
| 385       | 2394             | NR               | 515       | 90898            | NR               | 645       | 52864            | NR               | 775       | 2759             | NR               | 905       | 2224             | NR               |
| 390       | 2370             | NR               | 520       | 97142            | NR               | 650       | 47085            | NR               | 780       | 2340             | NR               | 910       | 2905             | NR               |
| 395       | 2267             | NR               | 525       | 103255           | NR               | 655       | 41789            | NR               | 785       | 2412             | NR               | 915       | 3350             | NR               |
| 400       | 2262             | NR               | 530       | 106697           | NR               | 660       | 37064            | NR               | 790       | 1999             | NR               | 920       | 3114             | NR               |
| 405       | 3000             | NR               | 535       | 110081           | NR               | 665       | 32299            | NR               | 795       | 2054             | NR               | 925       | 2834             | NR               |
| 410       | 5324             | NR               | 540       | 112494           | NR               | 670       | 28142            | NR               | 800       | 2331             | NR               | 930       | 2271             | NR               |
| 415       | 10725            | NR               | 545       | 115513           | NR               | 675       | 24505            | NR               | 805       | 2648             | NR               | 935       | 2228             | NR               |
| 420       | 22128            | NR               | 550       | 117203           | NR               | 680       | 21162            | NR               | 810       | 2485             | NR               | 940       | 2833             | NR               |
| 425       | 44095            | NR               | 555       | 119753           | NR               | 685       | 18400            | NR               | 815       | 2409             | NR               | 945       | 2941             | NR               |
| 430       | 77002            | NR               | 560       | 122602           | NR               | 690       | 16065            | NR               | 820       | 2221             | NR               | 950       | 2323             | NR               |
| 435       | 119881           | NR               | 565       | 124314           | NR               | 695       | 13860            | NR               | 825       | 1562             | NR               | 955       | 1667             | NR               |
| 440       | 164454           | NR               | 570       | 126775           | NR               | 700       | 12177            | NR               | 830       | 2249             | NR               | 960       | 749              | NR               |
| 445       | 179997           | NR               | 575       | 127511           | NR               | 705       | 10757            | NR               | 835       | 2573             | NR               | 965       | 2669             | NR               |
| 450       | 142822           | NR               | 580       | 127577           | NR               | 710       | 9601             | NR               | 840       | 2764             | NR               | 970       | 3968             | NR               |
| 455       | 90008            | NR               | 585       | 126153           | NR               | 715       | 8944             | NR               | 845       | 3109             | NR               | 975       | 3886             | NR               |
| 460       | 60557            | NR               | 590       | 123678           | NR               | 720       | 7947             | NR               | 850       | 2963             | NR               | 980       | 2788             | NR               |
| 465       | 43305            | NR               | 595       | 119774           | NR               | 725       | 7062             | NR               | 855       | 2336             | NR               | 985       | 3496             | NR               |
| 470       | 31089            | NR               | 600       | 115733           | NR               | 730       | 6004             | NR               | 860       | 2118             | NR               | 990       | 2913             | NR               |
| 475       | 26278            | NR               | 605       | 109231           | NR               | 735       | 5594             | NR               | 865       | 3144             | NR               | 995       | 4659             | NR               |
| 480       | 27060            | NR               | 610       | 102408           | NR               | 740       | 5165             | NR               | 870       | 3069             | NR               | 1000      | 1308             | NR               |
| 485       | 30698            | NR               | 615       | 96015            | NR               | 745       | 4687             | NR               | 875       | 3311             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-4-R4

**Melanopic Flux vs. Wavelength**

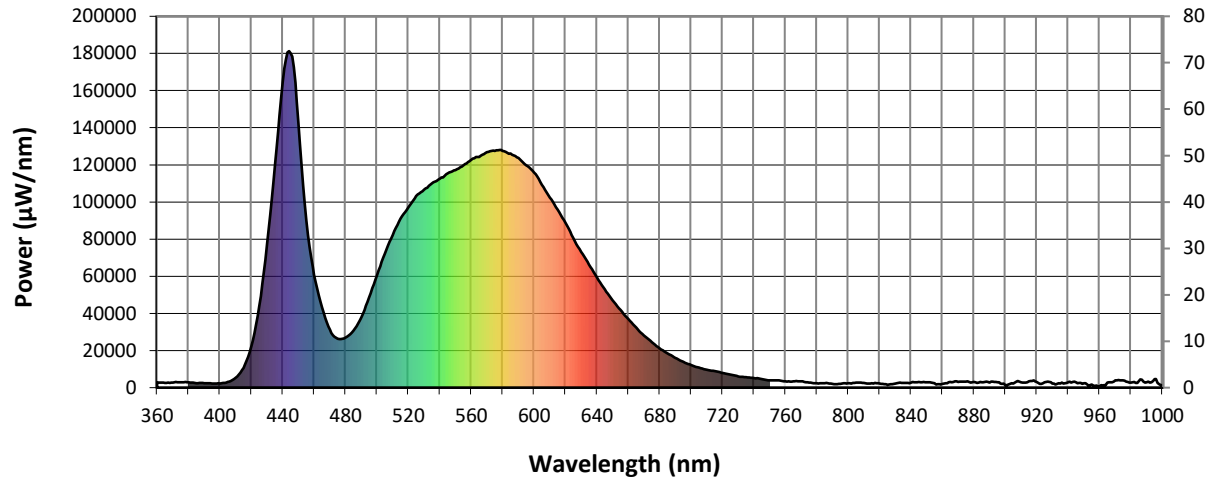

**Melanopic Lumens: 5378.9 M/P: 0.71**


| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2945             | NR               | 490       | 37941            | NR               | 620       | 88803            | NR               | 750       | 3908             | NR               | 880       | 2997             | NR               |
| 365       | 2596             | NR               | 495       | 48525            | NR               | 625       | 80578            | NR               | 755       | 3988             | NR               | 885       | 2927             | NR               |
| 370       | 2732             | NR               | 500       | 60609            | NR               | 630       | 73127            | NR               | 760       | 3335             | NR               | 890       | 2649             | NR               |
| 375       | 2894             | NR               | 505       | 72036            | NR               | 635       | 66244            | NR               | 765       | 3438             | NR               | 895       | 2828             | NR               |
| 380       | 2822             | NR               | 510       | 82168            | NR               | 640       | 59440            | NR               | 770       | 3427             | NR               | 900       | 1407             | NR               |
| 385       | 2394             | NR               | 515       | 90898            | NR               | 645       | 52864            | NR               | 775       | 2759             | NR               | 905       | 2224             | NR               |
| 390       | 2370             | NR               | 520       | 97142            | NR               | 650       | 47085            | NR               | 780       | 2340             | NR               | 910       | 2905             | NR               |
| 395       | 2267             | NR               | 525       | 103255           | NR               | 655       | 41789            | NR               | 785       | 2412             | NR               | 915       | 3350             | NR               |
| 400       | 2262             | NR               | 530       | 106697           | NR               | 660       | 37064            | NR               | 790       | 1999             | NR               | 920       | 3114             | NR               |
| 405       | 3000             | NR               | 535       | 110081           | NR               | 665       | 32299            | NR               | 795       | 2054             | NR               | 925       | 2834             | NR               |
| 410       | 5324             | NR               | 540       | 112494           | NR               | 670       | 28142            | NR               | 800       | 2331             | NR               | 930       | 2271             | NR               |
| 415       | 10725            | NR               | 545       | 115513           | NR               | 675       | 24505            | NR               | 805       | 2648             | NR               | 935       | 2228             | NR               |
| 420       | 22128            | NR               | 550       | 117203           | NR               | 680       | 21162            | NR               | 810       | 2485             | NR               | 940       | 2833             | NR               |
| 425       | 44095            | NR               | 555       | 119753           | NR               | 685       | 18400            | NR               | 815       | 2409             | NR               | 945       | 2941             | NR               |
| 430       | 77002            | NR               | 560       | 122602           | NR               | 690       | 16065            | NR               | 820       | 2221             | NR               | 950       | 2323             | NR               |
| 435       | 119881           | NR               | 565       | 124314           | NR               | 695       | 13860            | NR               | 825       | 1562             | NR               | 955       | 1667             | NR               |
| 440       | 164454           | NR               | 570       | 126775           | NR               | 700       | 12177            | NR               | 830       | 2249             | NR               | 960       | 749              | NR               |
| 445       | 179997           | NR               | 575       | 127511           | NR               | 705       | 10757            | NR               | 835       | 2573             | NR               | 965       | 2669             | NR               |
| 450       | 142822           | NR               | 580       | 127577           | NR               | 710       | 9601             | NR               | 840       | 2764             | NR               | 970       | 3968             | NR               |
| 455       | 90008            | NR               | 585       | 126153           | NR               | 715       | 8944             | NR               | 845       | 3109             | NR               | 975       | 3886             | NR               |
| 460       | 60557            | NR               | 590       | 123678           | NR               | 720       | 7947             | NR               | 850       | 2963             | NR               | 980       | 2788             | NR               |
| 465       | 43305            | NR               | 595       | 119774           | NR               | 725       | 7062             | NR               | 855       | 2336             | NR               | 985       | 3496             | NR               |
| 470       | 31089            | NR               | 600       | 115733           | NR               | 730       | 6004             | NR               | 860       | 2118             | NR               | 990       | 2913             | NR               |
| 475       | 26278            | NR               | 605       | 109231           | NR               | 735       | 5594             | NR               | 865       | 3144             | NR               | 995       | 4659             | NR               |
| 480       | 27060            | NR               | 610       | 102408           | NR               | 740       | 5165             | NR               | 870       | 3069             | NR               | 1000      | 1308             | NR               |
| 485       | 30698            | NR               | 615       | 96015            | NR               | 745       | 4687             | NR               | 875       | 3311             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-4-R4





**TM-30-18**

**Summary**

$R_f = 74.9$   
 $R_g = 96.3$   
 $CIE R_a = 73.5$   
 $R_g = -28.4$

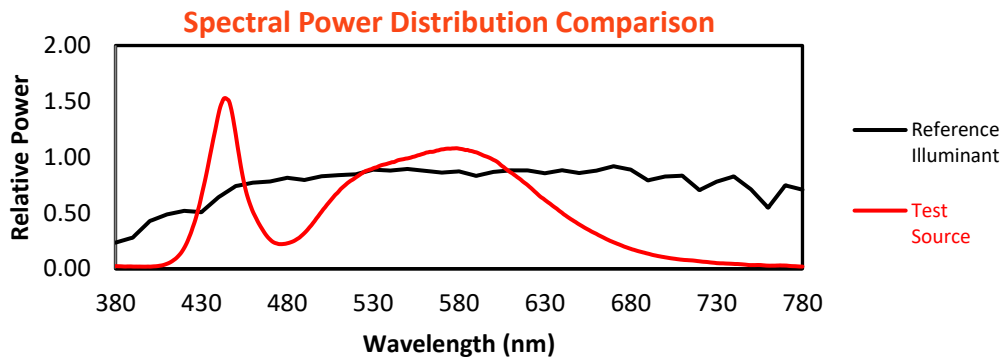

**Color Vector Graphics**

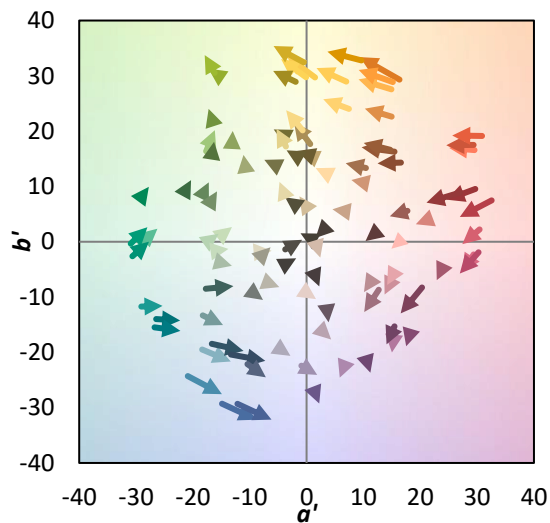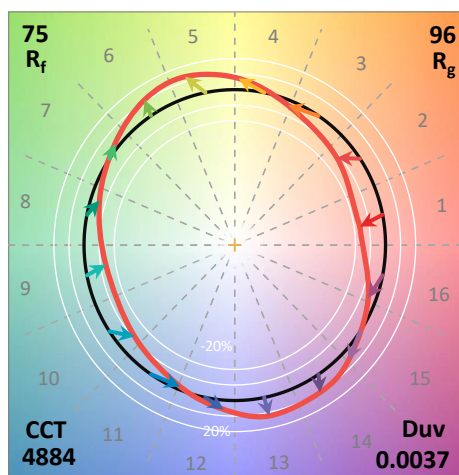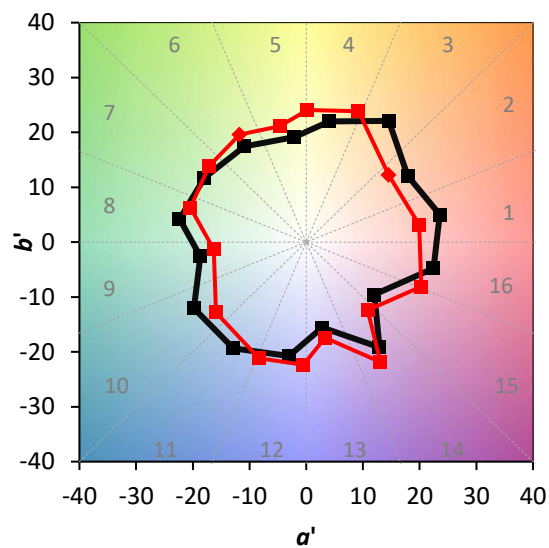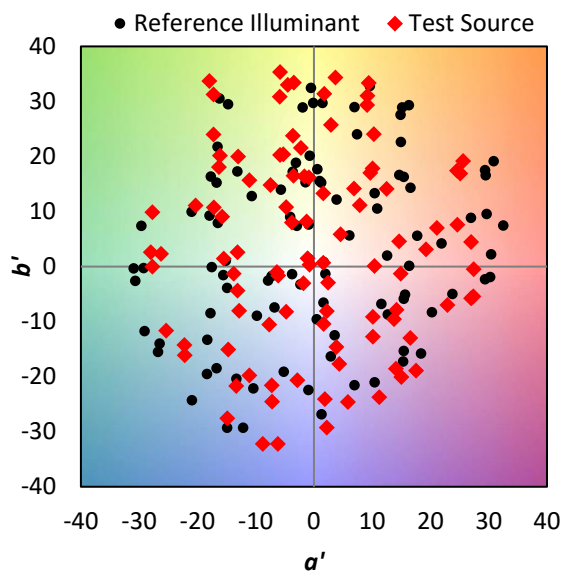


REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 61 | CES51 = 90 | CES76 = 52 |
| CES02 = 60 | CES27 = 84 | CES52 = 91 | CES77 = 71 |
| CES03 = 30 | CES28 = 81 | CES53 = 79 | CES78 = 54 |
| CES04 = 69 | CES29 = 58 | CES54 = 83 | CES79 = 80 |
| CES05 = 46 | CES30 = 67 | CES55 = 83 | CES80 = 77 |
| CES06 = 50 | CES31 = 63 | CES56 = 73 | CES81 = 77 |
| CES07 = 39 | CES32 = 59 | CES57 = 72 | CES82 = 90 |
| CES08 = 38 | CES33 = 69 | CES58 = 73 | CES83 = 86 |
| CES09 = 29 | CES34 = 69 | CES59 = 88 | CES84 = 88 |
| CES10 = 73 | CES35 = 83 | CES60 = 93 | CES85 = 84 |
| CES11 = 56 | CES36 = 95 | CES61 = 88 | CES86 = 75 |
| CES12 = 61 | CES37 = 78 | CES62 = 85 | CES87 = 78 |
| CES13 = 41 | CES38 = 76 | CES63 = 77 | CES88 = 79 |
| CES14 = 74 | CES39 = 93 | CES64 = 74 | CES89 = 75 |
| CES15 = 70 | CES40 = 86 | CES65 = 67 | CES90 = 77 |
| CES16 = 46 | CES41 = 87 | CES66 = 69 | CES91 = 89 |
| CES17 = 49 | CES42 = 78 | CES67 = 67 | CES92 = 66 |
| CES18 = 55 | CES43 = 75 | CES68 = 73 | CES93 = 80 |
| CES19 = 71 | CES44 = 99 | CES69 = 81 | CES94 = 57 |
| CES20 = 64 | CES45 = 83 | CES70 = 63 | CES95 = 71 |
| CES21 = 85 | CES46 = 81 | CES71 = 60 | CES96 = 78 |
| CES22 = 77 | CES47 = 80 | CES72 = 86 | CES97 = 85 |
| CES23 = 91 | CES48 = 72 | CES73 = 53 | CES98 = 75 |
| CES24 = 90 | CES49 = 81 | CES74 = 96 | CES99 = 62 |
| CES25 = 71 | CES50 = 89 | CES75 = 58 |            |



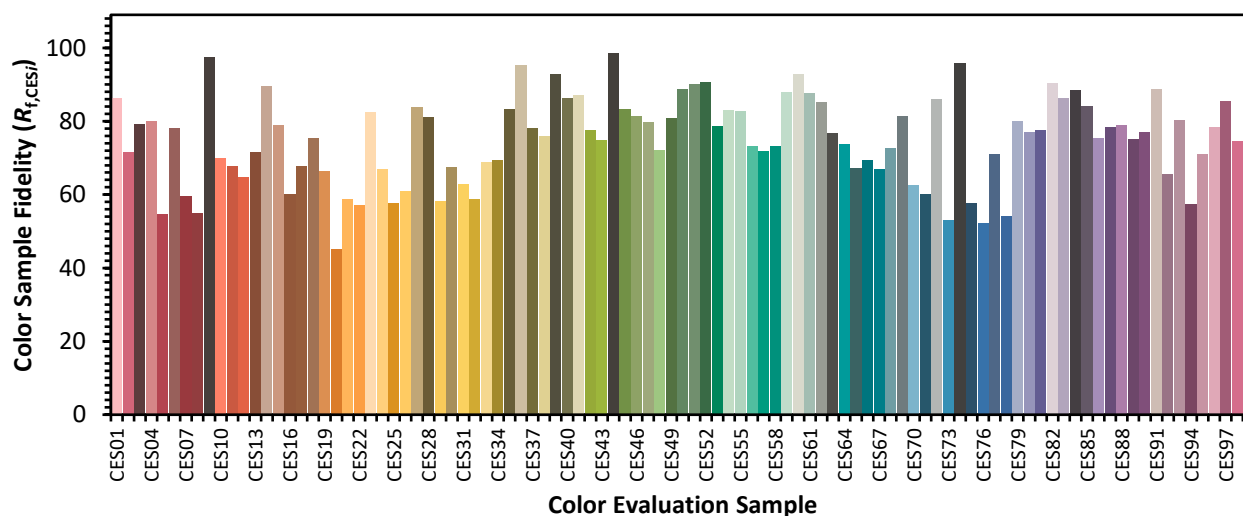




REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**



Color Rendition by Hue-Angle Bin

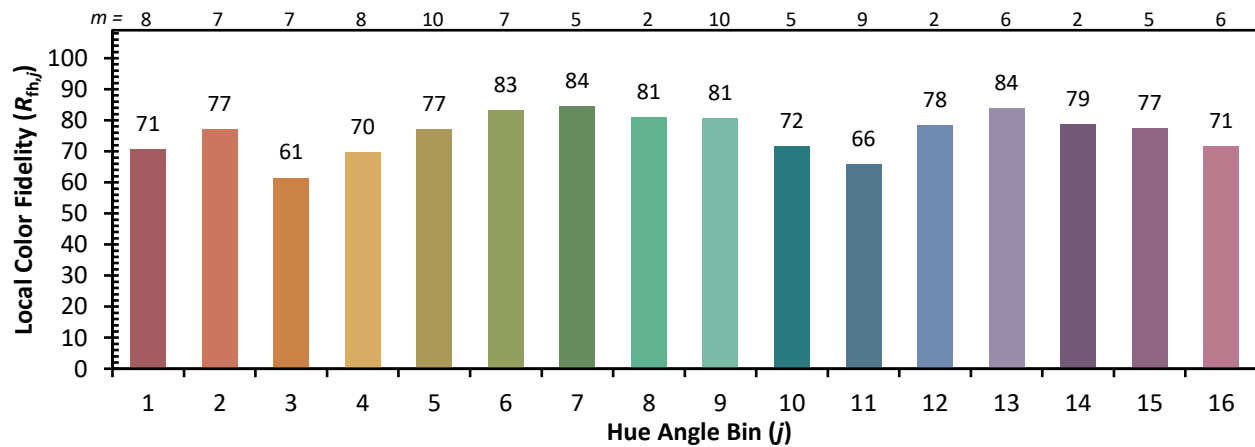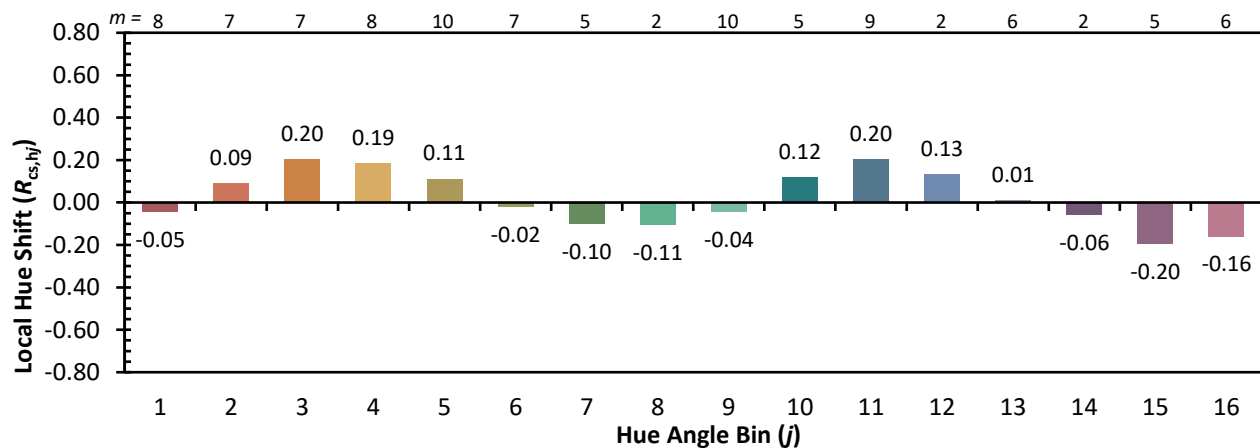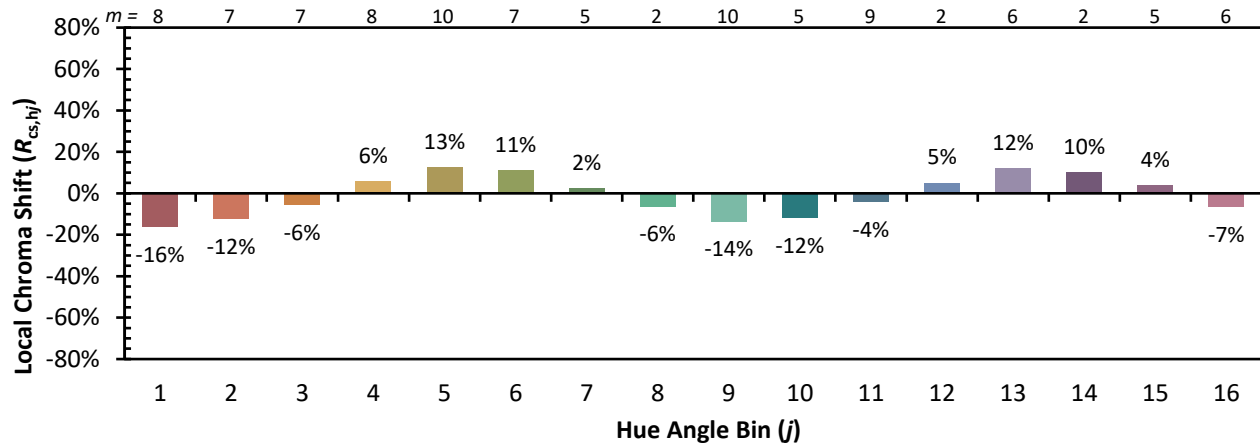

REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**

**Measure Comparisons**

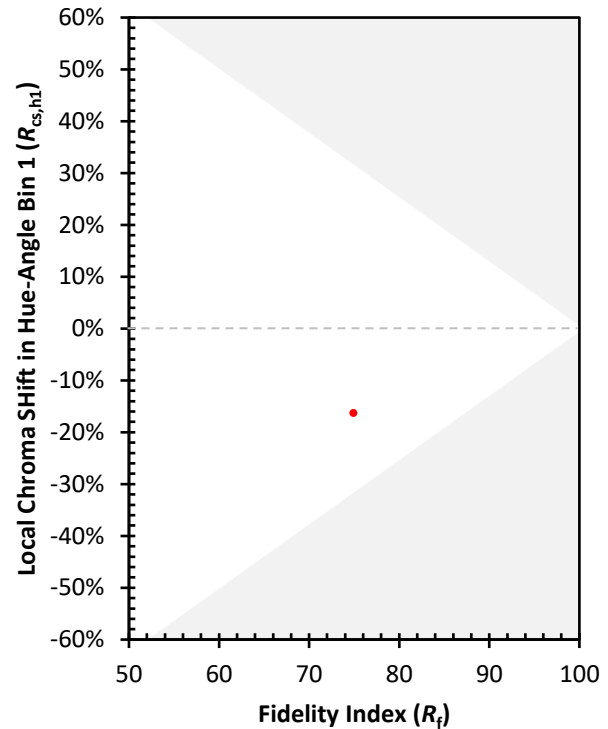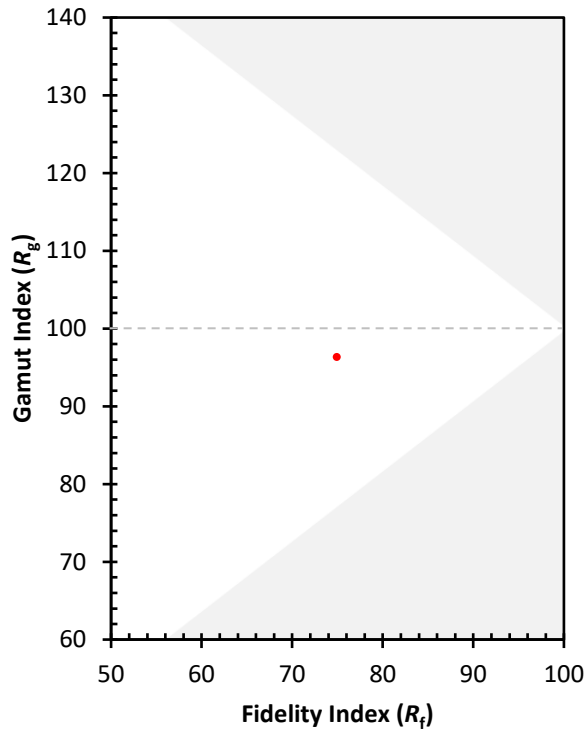

(END OF REPORT)