

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: McGRAW-EDISON

Report Number: P317289

Luminaire Tested: **GLEON-SA5C-830-U-RW**

Issue Date: 3/3/2020

**Test Information**

Test Method: LM-79-08  
Report Number: P317289  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-1903-205-7)  
Test Lab: INNOVATION CENTER  
Issue Date: 3/3/2020  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: McGRAW-EDISON  
Catalog Number: GLEON-SA5C-830-U-RW  
Description: GALLEON AREA AND ROADWAY LUMINAIRE  
(5) 80 CRI, 3000K, 1050mA LIGHTSQUARES WITH 16 LEDS EACH AND RECTANGULAR  
WIDE OPTICS  
Light Source: -  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 28716 lumens  
Efficiency: N/A  
Efficacy: 102.9 lumens/watt  
Luminous Opening: Rectangular (W 1.5' x L: 1' x H: 0')  
IES Classification: Type III - Short  
BUG Rating: B5 - U0 - G5


Input Watts (W): 279  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



REPORT NUMBER: P317289  
 CATALOG NUMBER: GLEON-SA5C-830-U-RW

## Iso-Footcandle Lines of Horizontal Illumination


× Max cd  
 - - - 1/2 Max cd

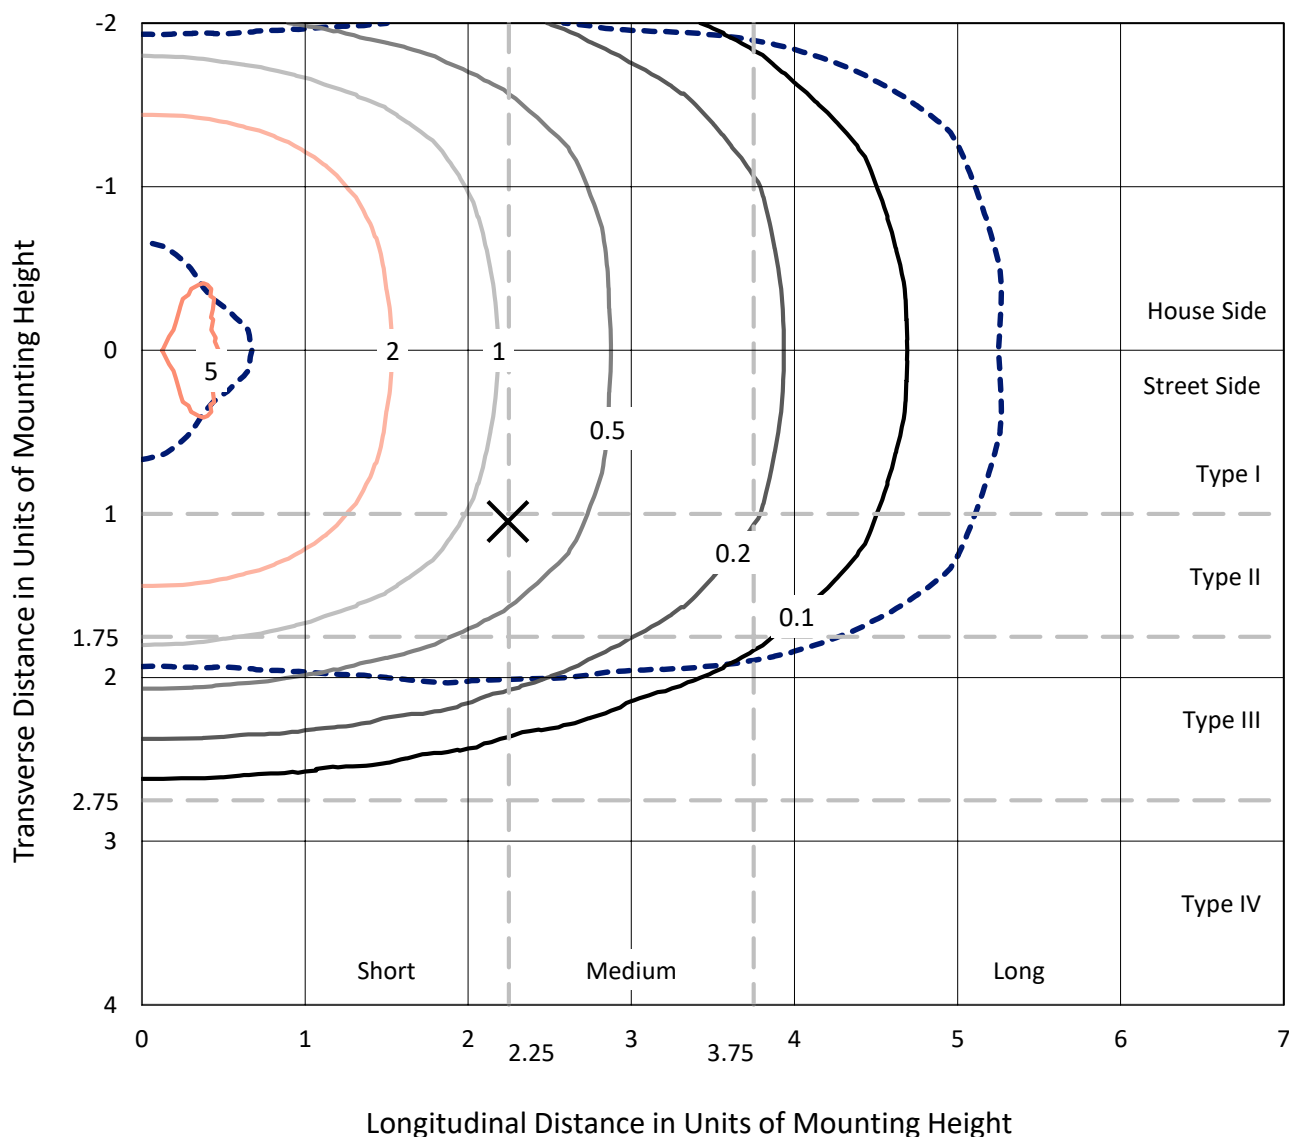

Based on 25 foot mounting height. Maximum calculated value = 5.4 fc  
 Type III - Short - N/A

REPORT NUMBER: P317289  
CATALOG NUMBER: GLEON-SA5C-830-U-RW

## Luminous Intensity Polar Plot

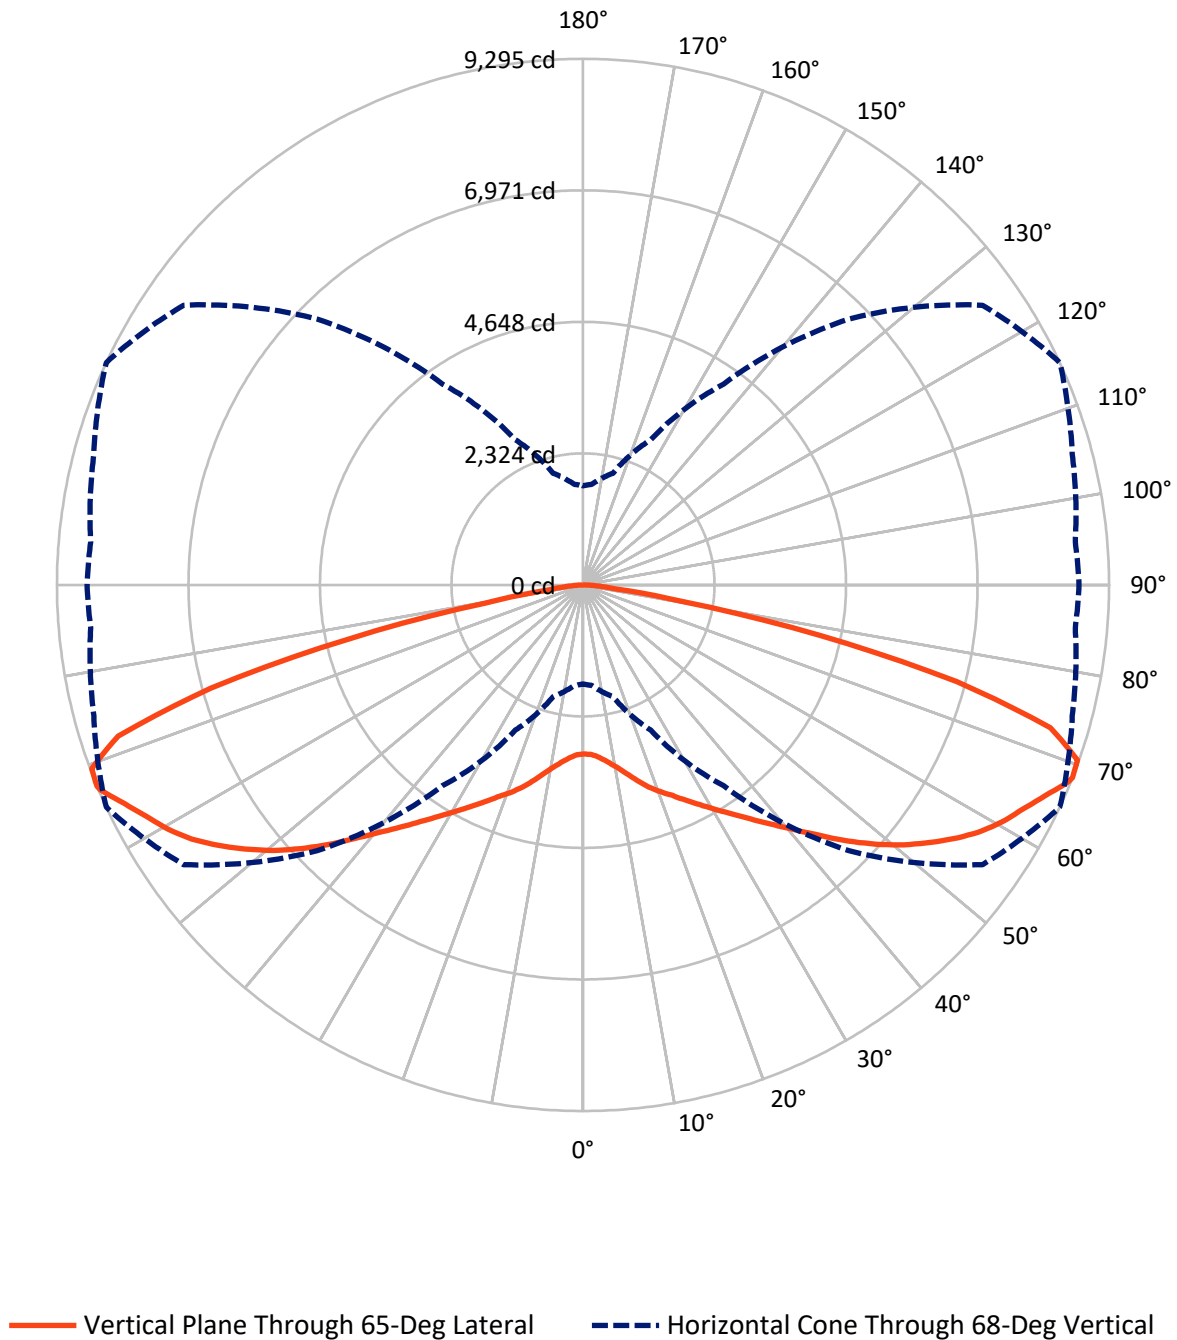

REPORT NUMBER: P317289

CATALOG NUMBER: GLEON-SA5C-830-U-RW

**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total   |
|--------------------|-----------|----------|--------|---------|
| <b>House Side</b>  | Lumens    | 14358.0  | 0.0    | 14358.0 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Street Side</b> | Lumens    | 14358.0  | 0.0    | 14358.0 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Total</b>       | Lumens    | 28716.0  | 0.0    | 28716.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0   |

**ZONAL LUMENS:**

| Zone      | Lumens  | % Fixture |
|-----------|---------|-----------|
| 0°-10°    | 292.3   | 1.0       |
| 10°-20°   | 978.8   | 3.4       |
| 20°-30°   | 1908.5  | 6.6       |
| 30°-40°   | 3206.1  | 11.2      |
| 40°-50°   | 5051.7  | 17.6      |
| 50°-60°   | 6755.8  | 23.5      |
| 60°-70°   | 6567.5  | 22.9      |
| 70°-80°   | 3590.1  | 12.5      |
| 80°-90°   | 365.1   | 1.3       |
| 90°-100°  | 0.0     | 0.0       |
| 100°-110° | 0.0     | 0.0       |
| 110°-120° | 0.0     | 0.0       |
| 120°-130° | 0.0     | 0.0       |
| 130°-140° | 0.0     | 0.0       |
| 140°-150° | 0.0     | 0.0       |
| 150°-160° | 0.0     | 0.0       |
| 160°-170° | 0.0     | 0.0       |
| 170°-180° | 0.0     | 0.0       |
| 0°-90°    | 28716.0 | 100.0     |
| 0°-180°   | 28716.0 | 100.0     |

**Coefficient of Utilization**



REPORT NUMBER: P317289


CATALOG NUMBER: GLEON-SA5C-830-U-RW

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 1589.8 | 5.5       |                         |      |         |
| FM   | (30°-60°)   | 7506.8 | 26.1      |                         |      |         |
| FH   | (60°-80°)   | 5078.8 | 17.7      |                         |      | G3/7500 |
| FVH  | (80°-90°)   | 182.6  | 0.6       |                         |      | G2/225  |
| BL   | (0°-30°)    | 1589.8 | 5.5       | B3/2500                 |      |         |
| BM   | (30°-60°)   | 7506.8 | 26.1      | B4/8500                 |      |         |
| BH   | (60°-80°)   | 5078.8 | 17.7      | B5                      |      | G5      |
| BVH  | (80°-90°)   | 182.6  | 0.6       |                         |      | G2/225  |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B5-U0-G5**

Type III Short

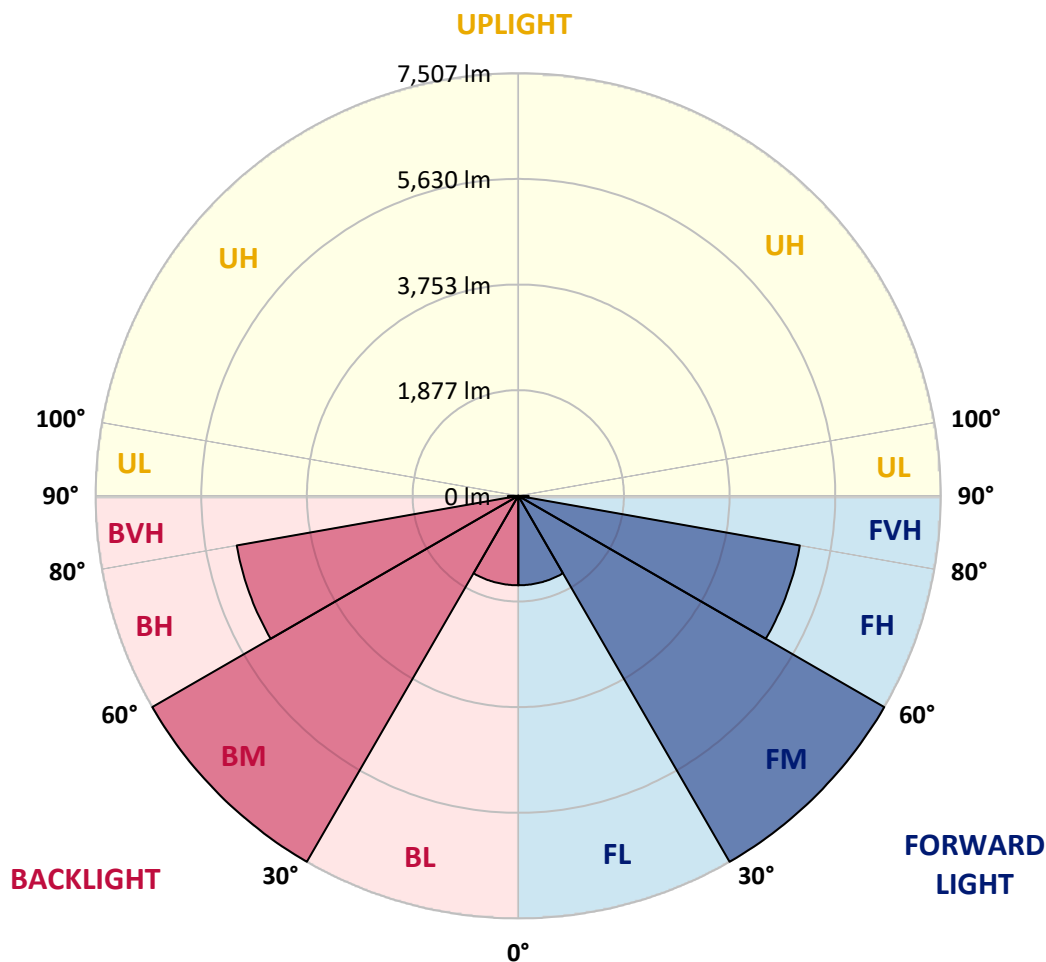

REPORT NUMBER: P317289

CATALOG NUMBER: GLEON-SA5C-830-U-RW

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 5°     | 15°    | 25°    | 35°    | 45°    | 55°    | 65°    | 75°    | 85°    | 90°    |
|-------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| 0°    | 2985.8 | 2985.8 | 2985.8 | 2985.8 | 2985.8 | 2985.8 | 2985.8 | 2985.8 | 2985.8 | 2985.8 | 2985.8 |
| 2.5°  | 2964.6 | 2965.6 | 2970.4 | 2976.2 | 2981.0 | 2993.5 | 2996.4 | 3001.2 | 3003.1 | 3007.9 | 3007.9 |
| 5°    | 2938.6 | 2940.5 | 2952.1 | 2967.5 | 2984.8 | 3015.6 | 3037.8 | 3062.8 | 3075.3 | 3088.8 | 3087.9 |
| 7.5°  | 2935.7 | 2940.5 | 2956.9 | 2981.9 | 3010.8 | 3061.9 | 3108.1 | 3158.1 | 3191.8 | 3222.6 | 3220.7 |
| 10°   | 2965.6 | 2973.3 | 2996.4 | 3033.9 | 3077.3 | 3140.8 | 3209.2 | 3276.6 | 3335.3 | 3382.5 | 3384.4 |
| 12.5° | 3010.8 | 3020.5 | 3057.0 | 3113.8 | 3179.3 | 3261.2 | 3342.0 | 3418.1 | 3499.0 | 3569.3 | 3575.1 |
| 15°   | 3070.5 | 3083.0 | 3137.9 | 3222.6 | 3322.8 | 3420.0 | 3506.7 | 3584.7 | 3678.1 | 3775.3 | 3785.0 |
| 17.5° | 3159.1 | 3176.4 | 3248.6 | 3363.2 | 3495.1 | 3602.0 | 3692.5 | 3751.3 | 3829.2 | 3929.4 | 3947.7 |
| 20°   | 3293.9 | 3316.0 | 3407.5 | 3544.2 | 3705.0 | 3816.7 | 3886.1 | 3898.6 | 3937.1 | 4026.6 | 4047.8 |
| 22.5° | 3469.1 | 3488.4 | 3590.5 | 3753.2 | 3933.2 | 4054.5 | 4091.1 | 4041.1 | 4037.2 | 4109.4 | 4129.7 |
| 25°   | 3664.6 | 3681.9 | 3800.4 | 3983.3 | 4176.8 | 4310.7 | 4309.7 | 4212.5 | 4145.1 | 4200.9 | 4222.1 |
| 27.5° | 3884.1 | 3911.1 | 4024.7 | 4217.3 | 4424.3 | 4556.2 | 4548.5 | 4398.3 | 4270.2 | 4284.7 | 4303.0 |
| 30°   | 4136.4 | 4166.2 | 4277.0 | 4472.4 | 4679.4 | 4808.5 | 4798.8 | 4600.5 | 4407.9 | 4369.4 | 4382.9 |
| 32.5° | 4449.3 | 4484.9 | 4589.9 | 4782.5 | 4965.4 | 5081.9 | 5054.0 | 4820.0 | 4573.5 | 4489.8 | 4502.3 |
| 35°   | 4825.8 | 4847.0 | 4957.7 | 5147.4 | 5295.7 | 5375.6 | 5316.8 | 5074.2 | 4783.4 | 4682.3 | 4682.3 |
| 37.5° | 5207.1 | 5223.4 | 5347.7 | 5531.6 | 5675.0 | 5717.4 | 5602.8 | 5352.5 | 5057.8 | 4914.4 | 4917.3 |
| 40°   | 5573.0 | 5617.2 | 5756.9 | 5945.6 | 6087.1 | 6098.7 | 5946.5 | 5670.2 | 5363.1 | 5214.8 | 5232.1 |
| 42.5° | 5955.2 | 5998.5 | 6165.1 | 6378.9 | 6504.0 | 6523.3 | 6345.2 | 6026.5 | 5707.8 | 5587.4 | 5606.7 |
| 45°   | 6296.1 | 6330.7 | 6523.3 | 6771.7 | 6927.7 | 6977.8 | 6766.9 | 6434.7 | 6080.4 | 5962.9 | 5967.7 |
| 47.5° | 6533.9 | 6579.1 | 6791.0 | 7083.7 | 7310.9 | 7387.9 | 7180.9 | 6832.4 | 6447.2 | 6304.7 | 6317.2 |
| 50°   | 6749.6 | 6773.6 | 6988.3 | 7308.0 | 7596.9 | 7755.7 | 7578.6 | 7225.2 | 6817.9 | 6666.8 | 6680.2 |
| 52.5° | 6869.9 | 6900.7 | 7108.7 | 7441.8 | 7783.7 | 8039.8 | 7931.9 | 7578.6 | 7176.1 | 7028.8 | 7045.2 |
| 55°   | 6786.1 | 6809.3 | 7058.6 | 7471.7 | 7899.2 | 8215.0 | 8231.4 | 7924.2 | 7527.5 | 7398.5 | 7444.7 |
| 57.5° | 6404.9 | 6433.7 | 6738.0 | 7279.1 | 7913.6 | 8333.4 | 8456.7 | 8244.9 | 7855.9 | 7750.9 | 7777.9 |
| 60°   | 5808.9 | 5827.1 | 6151.6 | 6760.1 | 7632.5 | 8382.5 | 8600.1 | 8506.8 | 8177.5 | 8072.5 | 8109.1 |
| 62.5° | 4746.8 | 4773.8 | 5161.8 | 5977.4 | 7038.4 | 8237.2 | 8738.8 | 8723.4 | 8476.9 | 8380.6 | 8413.4 |
| 65°   | 3244.8 | 3292.0 | 3721.4 | 4752.6 | 6122.7 | 7792.3 | 8864.9 | 8975.7 | 8741.7 | 8620.4 | 8663.7 |
| 67.5° | 1959.4 | 1994.1 | 2305.1 | 3137.9 | 4685.2 | 6894.9 | 8734.9 | 9262.6 | 8928.5 | 8733.0 | 8768.6 |
| 68°   | 1751.4 | 1783.2 | 2043.2 | 2831.7 | 4333.8 | 6641.7 | 8616.5 | 9295.3 | 8948.7 | 8731.1 | 8762.9 |
| 70°   | 1058.2 | 1079.4 | 1253.6 | 1750.5 | 2889.5 | 5268.7 | 7808.7 | 9268.4 | 9077.7 | 8758.1 | 8776.3 |
| 72.5° | 689.4  | 696.1  | 725.0  | 898.3  | 1476.0 | 2946.3 | 5860.8 | 8636.7 | 9271.3 | 8915.0 | 8912.1 |
| 75°   | 572.9  | 569.0  | 571.9  | 592.2  | 727.9  | 1292.1 | 3424.8 | 6822.7 | 8838.0 | 8667.5 | 8606.9 |
| 77.5° | 484.3  | 481.4  | 480.5  | 481.4  | 487.2  | 623.9  | 1486.6 | 4250.0 | 6763.0 | 7667.2 | 7721.1 |
| 80°   | 391.9  | 388.0  | 400.5  | 394.8  | 377.4  | 388.0  | 623.0  | 1767.8 | 3188.0 | 3429.7 | 3214.0 |
| 82.5° | 285.0  | 270.6  | 324.5  | 309.1  | 294.6  | 273.4  | 343.7  | 571.0  | 760.6  | 521.9  | 366.8  |
| 85°   | 219.5  | 204.1  | 246.5  | 236.9  | 202.2  | 139.6  | 204.1  | 279.2  | 308.1  | 176.2  | 138.6  |
| 87.5° | 89.5   | 94.4   | 178.1  | 140.6  | 118.4  | 67.4   | 83.8   | 111.7  | 150.2  | 75.1   | 57.8   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

MCGRAW EDISON

Report Number: SP1-2408-195-9

Test Date: 08/07/2024

Luminaire Tested: GALN-SB1A-830-U-5WQ

Data in this report applies to families of products including GALN-SB1A-830-U-5WQ.

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2408-195-9  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 08/07/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: MCGRAW EDISON  
 Catalog Number: **GALN-SB1A-830-U-5WQ**  
 Description: GALLEON AREA AND ROADWAY LUMINAIRE. (1) 80 CRI, 3000K, 350MA HIGH DENSITY LIGHTSQUARE WITH 26 LEDS AND TYPE V WIDE OPTICS

### Spectral Parameters

CCT (K): 3050  
 CIE  $u'$ : 0.2476  
 CIE  $v'$ : 0.5251  
 Duv: 0.0034  
 CIE x: 0.4383  
 CIE y: 0.4131  
 CIE z: 0.1487  
 Peak Wavelength (nm): 603  
 Dominant Wavelength (nm): 581  
 Purity: 55.55201  
 R<sub>f</sub>: 81.5  
 R<sub>g</sub>: 99.2

CRI (Ra): 81.0  
 R1: 79.6  
 R2: 85.6  
 R3: 92.0  
 R4: 82.6  
 R5: 78.9  
 R6: 81.7  
 R7: 85.2  
 R8: 62.0  
 R9: 7.1  
 R10: 67.0  
 R11: 82.7  
 R12: 63.2  
 R13: 80.3  
 R14: 95.0  
 R15: 71.7



### Test Conditions

Stabilization Time: 20M  
 Operation Time: 1H 20M  
 Sphere Temperature (°C): 24.2

REPORT NUMBER: SP1-2408-195-9

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/18/2024        | 12/18/2024           |
| Power Meter                    | INXT2011004           | 2/8/2024         | 2/8/2025             |
| AC Power Source                | IN0063                | 10/24/2023       | 10/24/2024           |
| DC Power Source                | IN0208                | 10/24/2023       | 10/24/2024           |
| Sphere Thermometer             | IN0085                | 10/24/2023       | 10/24/2024           |
| Room Thermometer               | IN0046                | 10/24/2023       | 10/24/2024           |

REPORT NUMBER: SP1-2408-195-9

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2408-195-9

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 168                                    | NR                             | 620               | 940                                    | NR                             | 750               | 35                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 233                                    | NR                             | 625               | 897                                    | NR                             | 755               | 30                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 300                                    | NR                             | 630               | 847                                    | NR                             | 760               | 26                                     | NR                             | 890               | 1                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 372                                    | NR                             | 635               | 790                                    | NR                             | 765               | 22                                     | NR                             | 895               | 1                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 430                                    | NR                             | 640               | 730                                    | NR                             | 770               | 19                                     | NR                             | 900               | 1                                      | NR                             |
| 385               | 0                                      | NR                             | 515               | 483                                    | NR                             | 645               | 668                                    | NR                             | 775               | 16                                     | NR                             | 905               | 1                                      | NR                             |
| 390               | 0                                      | NR                             | 520               | 524                                    | NR                             | 650               | 605                                    | NR                             | 780               | 14                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 2                                      | NR                             | 525               | 555                                    | NR                             | 655               | 545                                    | NR                             | 785               | 12                                     | NR                             | 915               | 0                                      | NR                             |
| 400               | 4                                      | NR                             | 530               | 581                                    | NR                             | 660               | 485                                    | NR                             | 790               | 10                                     | NR                             | 920               | 0                                      | NR                             |
| 405               | 7                                      | NR                             | 535               | 604                                    | NR                             | 665               | 430                                    | NR                             | 795               | 9                                      | NR                             | 925               | 0                                      | NR                             |
| 410               | 17                                     | NR                             | 540               | 623                                    | NR                             | 670               | 378                                    | NR                             | 800               | 8                                      | NR                             | 930               | 0                                      | NR                             |
| 415               | 34                                     | NR                             | 545               | 645                                    | NR                             | 675               | 331                                    | NR                             | 805               | 7                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 68                                     | NR                             | 550               | 667                                    | NR                             | 680               | 290                                    | NR                             | 810               | 6                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 128                                    | NR                             | 555               | 693                                    | NR                             | 685               | 251                                    | NR                             | 815               | 5                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 214                                    | NR                             | 560               | 719                                    | NR                             | 690               | 218                                    | NR                             | 820               | 4                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 339                                    | NR                             | 565               | 754                                    | NR                             | 695               | 188                                    | NR                             | 825               | 4                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 507                                    | NR                             | 570               | 791                                    | NR                             | 700               | 162                                    | NR                             | 830               | 3                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 573                                    | NR                             | 575               | 830                                    | NR                             | 705               | 139                                    | NR                             | 835               | 3                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 356                                    | NR                             | 580               | 873                                    | NR                             | 710               | 119                                    | NR                             | 840               | 3                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 217                                    | NR                             | 585               | 913                                    | NR                             | 715               | 102                                    | NR                             | 845               | 2                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 168                                    | NR                             | 590               | 948                                    | NR                             | 720               | 88                                     | NR                             | 850               | 2                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 113                                    | NR                             | 595               | 974                                    | NR                             | 725               | 76                                     | NR                             | 855               | 2                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 85                                     | NR                             | 600               | 994                                    | NR                             | 730               | 65                                     | NR                             | 860               | 1                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 85                                     | NR                             | 605               | 998                                    | NR                             | 735               | 55                                     | NR                             | 865               | 1                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 94                                     | NR                             | 610               | 994                                    | NR                             | 740               | 47                                     | NR                             | 870               | 1                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 120                                    | NR                             | 615               | 973                                    | NR                             | 745               | 41                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2408-195-9

### Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.27

| λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) |
|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|
| 360    | 0                        | NR            | 490    | 168                      | NR            | 620    | 940                      | NR            | 750    | 35                       | NR            | 880    | 1                        | NR            |
| 365    | 0                        | NR            | 495    | 233                      | NR            | 625    | 897                      | NR            | 755    | 30                       | NR            | 885    | 1                        | NR            |
| 370    | 0                        | NR            | 500    | 300                      | NR            | 630    | 847                      | NR            | 760    | 26                       | NR            | 890    | 1                        | NR            |
| 375    | 0                        | NR            | 505    | 372                      | NR            | 635    | 790                      | NR            | 765    | 22                       | NR            | 895    | 1                        | NR            |
| 380    | 0                        | NR            | 510    | 430                      | NR            | 640    | 730                      | NR            | 770    | 19                       | NR            | 900    | 1                        | NR            |
| 385    | 0                        | NR            | 515    | 483                      | NR            | 645    | 668                      | NR            | 775    | 16                       | NR            | 905    | 1                        | NR            |
| 390    | 0                        | NR            | 520    | 524                      | NR            | 650    | 605                      | NR            | 780    | 14                       | NR            | 910    | 0                        | NR            |
| 395    | 2                        | NR            | 525    | 555                      | NR            | 655    | 545                      | NR            | 785    | 12                       | NR            | 915    | 0                        | NR            |
| 400    | 4                        | NR            | 530    | 581                      | NR            | 660    | 485                      | NR            | 790    | 10                       | NR            | 920    | 0                        | NR            |
| 405    | 7                        | NR            | 535    | 604                      | NR            | 665    | 430                      | NR            | 795    | 9                        | NR            | 925    | 0                        | NR            |
| 410    | 17                       | NR            | 540    | 623                      | NR            | 670    | 378                      | NR            | 800    | 8                        | NR            | 930    | 0                        | NR            |
| 415    | 34                       | NR            | 545    | 645                      | NR            | 675    | 331                      | NR            | 805    | 7                        | NR            | 935    | 0                        | NR            |
| 420    | 68                       | NR            | 550    | 667                      | NR            | 680    | 290                      | NR            | 810    | 6                        | NR            | 940    | 0                        | NR            |
| 425    | 128                      | NR            | 555    | 693                      | NR            | 685    | 251                      | NR            | 815    | 5                        | NR            | 945    | 0                        | NR            |
| 430    | 214                      | NR            | 560    | 719                      | NR            | 690    | 218                      | NR            | 820    | 4                        | NR            | 950    | 0                        | NR            |
| 435    | 339                      | NR            | 565    | 754                      | NR            | 695    | 188                      | NR            | 825    | 4                        | NR            | 955    | 0                        | NR            |
| 440    | 507                      | NR            | 570    | 791                      | NR            | 700    | 162                      | NR            | 830    | 3                        | NR            | 960    | 0                        | NR            |
| 445    | 573                      | NR            | 575    | 830                      | NR            | 705    | 139                      | NR            | 835    | 3                        | NR            | 965    | 0                        | NR            |
| 450    | 356                      | NR            | 580    | 873                      | NR            | 710    | 119                      | NR            | 840    | 3                        | NR            | 970    | 0                        | NR            |
| 455    | 217                      | NR            | 585    | 913                      | NR            | 715    | 102                      | NR            | 845    | 2                        | NR            | 975    | 0                        | NR            |
| 460    | 168                      | NR            | 590    | 948                      | NR            | 720    | 88                       | NR            | 850    | 2                        | NR            | 980    | 0                        | NR            |
| 465    | 113                      | NR            | 595    | 974                      | NR            | 725    | 76                       | NR            | 855    | 2                        | NR            | 985    | 0                        | NR            |
| 470    | 85                       | NR            | 600    | 994                      | NR            | 730    | 65                       | NR            | 860    | 1                        | NR            | 990    | 0                        | NR            |
| 475    | 85                       | NR            | 605    | 998                      | NR            | 735    | 55                       | NR            | 865    | 1                        | NR            | 995    | 0                        | NR            |
| 480    | 94                       | NR            | 610    | 994                      | NR            | 740    | 47                       | NR            | 870    | 1                        | NR            | 1000   | 0                        | NR            |
| 485    | 120                      | NR            | 615    | 973                      | NR            | 745    | 41                       | NR            | 875    | 1                        | NR            |        |                          |               |

REPORT NUMBER: SP1-2408-195-9

### Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 2.32

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 168                                  | NR                             | 620               | 940                                  | NR                             | 750               | 35                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 233                                  | NR                             | 625               | 897                                  | NR                             | 755               | 30                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 300                                  | NR                             | 630               | 847                                  | NR                             | 760               | 26                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 372                                  | NR                             | 635               | 790                                  | NR                             | 765               | 22                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 430                                  | NR                             | 640               | 730                                  | NR                             | 770               | 19                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 483                                  | NR                             | 645               | 668                                  | NR                             | 775               | 16                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 524                                  | NR                             | 650               | 605                                  | NR                             | 780               | 14                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 2                                    | NR                             | 525               | 555                                  | NR                             | 655               | 545                                  | NR                             | 785               | 12                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 4                                    | NR                             | 530               | 581                                  | NR                             | 660               | 485                                  | NR                             | 790               | 10                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 7                                    | NR                             | 535               | 604                                  | NR                             | 665               | 430                                  | NR                             | 795               | 9                                    | NR                             | 925               | 0                                    | NR                             |
| 410               | 17                                   | NR                             | 540               | 623                                  | NR                             | 670               | 378                                  | NR                             | 800               | 8                                    | NR                             | 930               | 0                                    | NR                             |
| 415               | 34                                   | NR                             | 545               | 645                                  | NR                             | 675               | 331                                  | NR                             | 805               | 7                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 68                                   | NR                             | 550               | 667                                  | NR                             | 680               | 290                                  | NR                             | 810               | 6                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 128                                  | NR                             | 555               | 693                                  | NR                             | 685               | 251                                  | NR                             | 815               | 5                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 214                                  | NR                             | 560               | 719                                  | NR                             | 690               | 218                                  | NR                             | 820               | 4                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 339                                  | NR                             | 565               | 754                                  | NR                             | 695               | 188                                  | NR                             | 825               | 4                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 507                                  | NR                             | 570               | 791                                  | NR                             | 700               | 162                                  | NR                             | 830               | 3                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 573                                  | NR                             | 575               | 830                                  | NR                             | 705               | 139                                  | NR                             | 835               | 3                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 356                                  | NR                             | 580               | 873                                  | NR                             | 710               | 119                                  | NR                             | 840               | 3                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 217                                  | NR                             | 585               | 913                                  | NR                             | 715               | 102                                  | NR                             | 845               | 2                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 168                                  | NR                             | 590               | 948                                  | NR                             | 720               | 88                                   | NR                             | 850               | 2                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 113                                  | NR                             | 595               | 974                                  | NR                             | 725               | 76                                   | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 85                                   | NR                             | 600               | 994                                  | NR                             | 730               | 65                                   | NR                             | 860               | 1                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 85                                   | NR                             | 605               | 998                                  | NR                             | 735               | 55                                   | NR                             | 865               | 1                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 94                                   | NR                             | 610               | 994                                  | NR                             | 740               | 47                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 120                                  | NR                             | 615               | 973                                  | NR                             | 745               | 41                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2408-195-9


TM-30-18

### Summary

$R_f = 81.5$   
 $R_g = 99.2$   
 $CIE\ R_a = 81.0$   
 $R_9 = 7.1$



### Color Vector Graphics

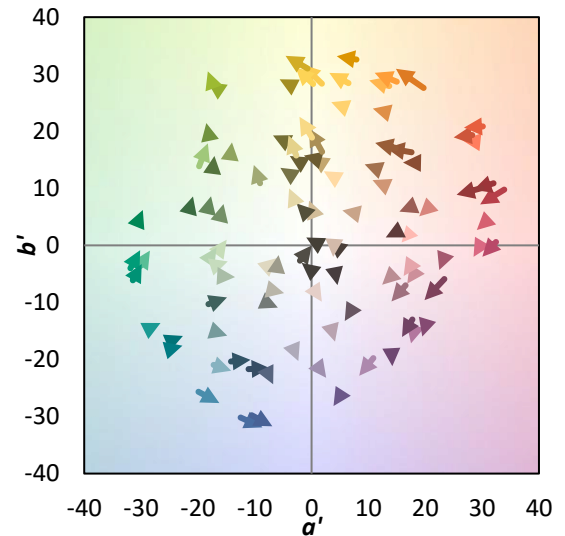


**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 74 | CES51 = 89 | CES76 = 70 |
| CES02 = 63 | CES27 = 88 | CES52 = 92 | CES77 = 86 |
| CES03 = 31 | CES28 = 89 | CES53 = 81 | CES78 = 72 |
| CES04 = 70 | CES29 = 67 | CES54 = 87 | CES79 = 90 |
| CES05 = 50 | CES30 = 68 | CES55 = 85 | CES80 = 88 |
| CES06 = 51 | CES31 = 71 | CES56 = 78 | CES81 = 78 |
| CES07 = 42 | CES32 = 70 | CES57 = 76 | CES82 = 95 |
| CES08 = 41 | CES33 = 71 | CES58 = 78 | CES83 = 90 |
| CES09 = 29 | CES34 = 82 | CES59 = 92 | CES84 = 94 |
| CES10 = 76 | CES35 = 90 | CES60 = 95 | CES85 = 86 |
| CES11 = 59 | CES36 = 93 | CES61 = 93 | CES86 = 72 |
| CES12 = 65 | CES37 = 87 | CES62 = 83 | CES87 = 85 |
| CES13 = 43 | CES38 = 75 | CES63 = 77 | CES88 = 83 |
| CES14 = 74 | CES39 = 94 | CES64 = 83 | CES89 = 75 |
| CES15 = 71 | CES40 = 89 | CES65 = 77 | CES90 = 81 |
| CES16 = 47 | CES41 = 85 | CES66 = 80 | CES91 = 96 |
| CES17 = 50 | CES42 = 86 | CES67 = 79 | CES92 = 73 |
| CES18 = 56 | CES43 = 81 | CES68 = 84 | CES93 = 84 |
| CES19 = 72 | CES44 = 99 | CES69 = 91 | CES94 = 64 |
| CES20 = 66 | CES45 = 87 | CES70 = 78 | CES95 = 80 |
| CES21 = 87 | CES46 = 82 | CES71 = 76 | CES96 = 84 |
| CES22 = 79 | CES47 = 77 | CES72 = 92 | CES97 = 87 |
| CES23 = 92 | CES48 = 71 | CES73 = 71 | CES98 = 81 |
| CES24 = 91 | CES49 = 81 | CES74 = 93 | CES99 = 74 |
| CES25 = 72 | CES50 = 89 | CES75 = 74 |            |



Color Rendition by Hue-Angle Bin

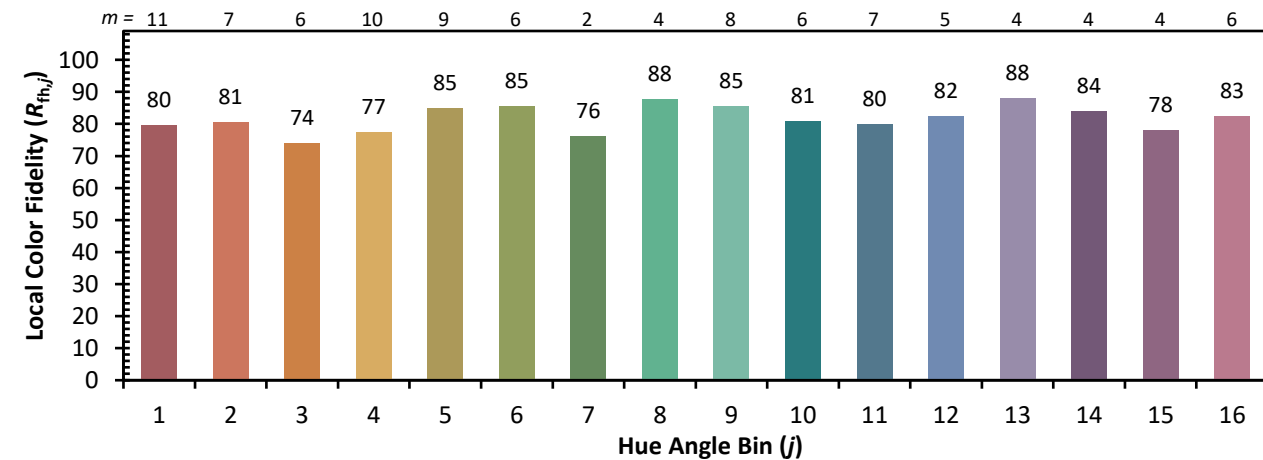

**Measure Comparisons**



(END OF REPORT)