

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

Brand: McGRAW-EDISON

Report Number: P631084

Luminaire Tested: GWS-SA1F-722-U-5MQ-W-GRSWH

Issue Date: 1/10/2023

**Test Information**

Test Method: LM-79-2019  
Report Number: P631084  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2209-782-6)  
Test Lab: COOPER LIGHTING SOLUTIONS  
Issue Date: 1/10/2023  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: McGRAW-EDISON  
Catalog Number: GWS-SA1F-722-U-5MQ-W-GRSWH  
Description: GALLEON WALL SLIM LUMINAIRE. (1) LIGHTSQUARES WITH 16 LEDS EACH AND  
TYPE V MEDIUM OPTICS W/ FACTORY INSTALLED GLARE SHIELD, WH  
Light Source: (16) 2200K CCT, 70 CRI LEDS  
Ballast/Driver: -

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 5433.7 lumens  
Efficiency: N/A  
Efficacy: 80.9 lumens/watt  
Luminous Opening: Rectangular (W 0.5' x L: 0.5' x H: 0')  
IES Classification: Type V - Short  
BUG Rating: B2 - U0 - G1

Input Watts (W): 67.2  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 0  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 28.75 FT




REPORT NUMBER: P631084

CATALOG NUMBER: GWS-SA1F-722-U-5MQ-W-GRSWH

## Iso-Footcandle Lines of Horizontal Illumination

✕ Max cd

--- 1/2 Max cd

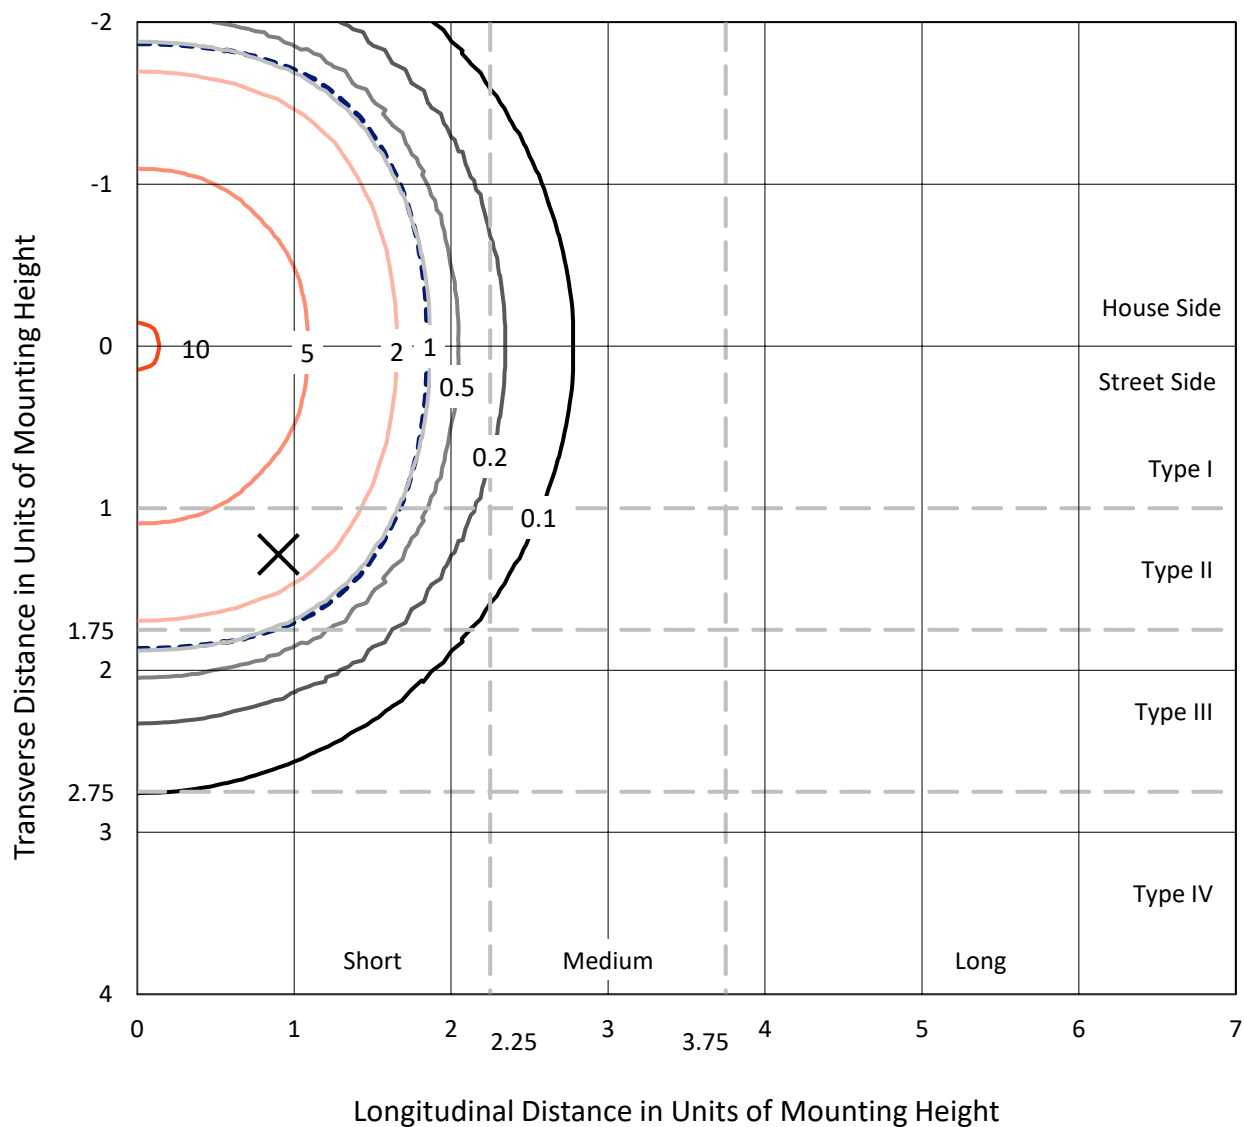


Based on 10 foot mounting height. Maximum calculated value = 10.4 fc  
 Type V - Short - N/A

REPORT NUMBER: P631084

CATALOG NUMBER: GWS-SA1F-722-U-5MQ-W-GRSWH

## Luminous Intensity Polar Plot

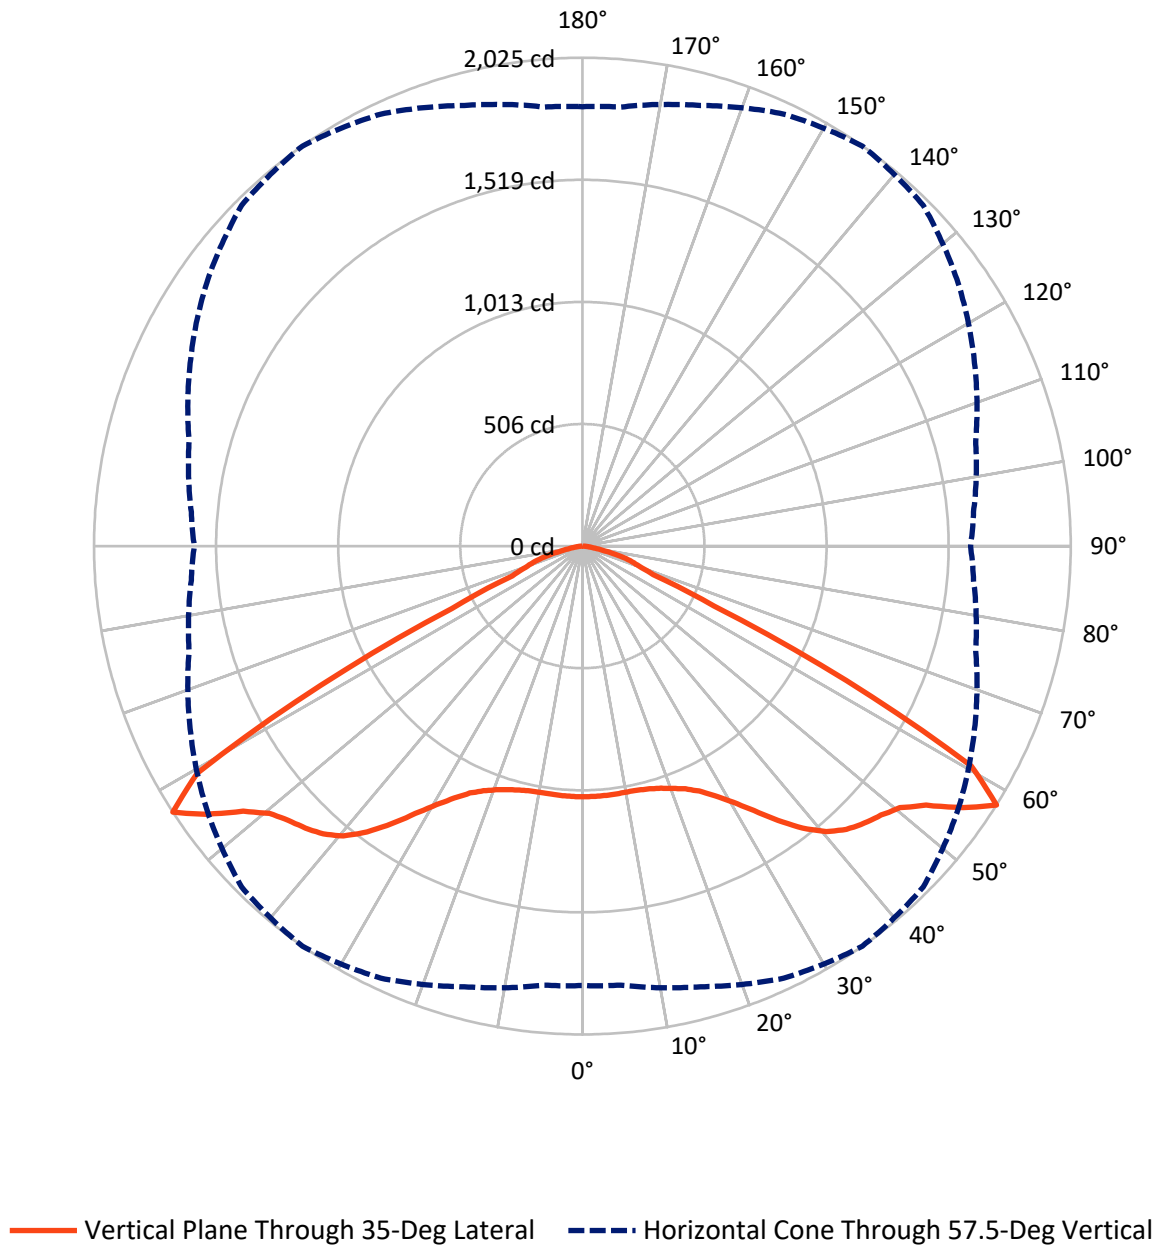

REPORT NUMBER: P631084

CATALOG NUMBER: GWS-SA1F-722-U-5MQ-W-GRSWH


**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total  |
|--------------------|-----------|----------|--------|--------|
| <b>House Side</b>  | Lumens    | 2716.8   | 0.0    | 2716.8 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Street Side</b> | Lumens    | 2716.8   | 0.0    | 2716.8 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Total</b>       | Lumens    | 5433.7   | 0.0    | 5433.7 |
|                    | % Fixture | 100.0    | 0.0    | 100.0  |

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 98.9   | 1.8       |
| 10°-20°   | 295.1  | 5.4       |
| 20°-30°   | 514.9  | 9.5       |
| 30°-40°   | 844.3  | 15.5      |
| 40°-50°   | 1243.4 | 22.9      |
| 50°-60°   | 1586.8 | 29.2      |
| 60°-70°   | 668.8  | 12.3      |
| 70°-80°   | 159.8  | 2.9       |
| 80°-90°   | 21.7   | 0.4       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-90°    | 5433.7 | 100.0     |
| 0°-180°   | 5433.7 | 100.0     |

**Coefficient of Utilization**

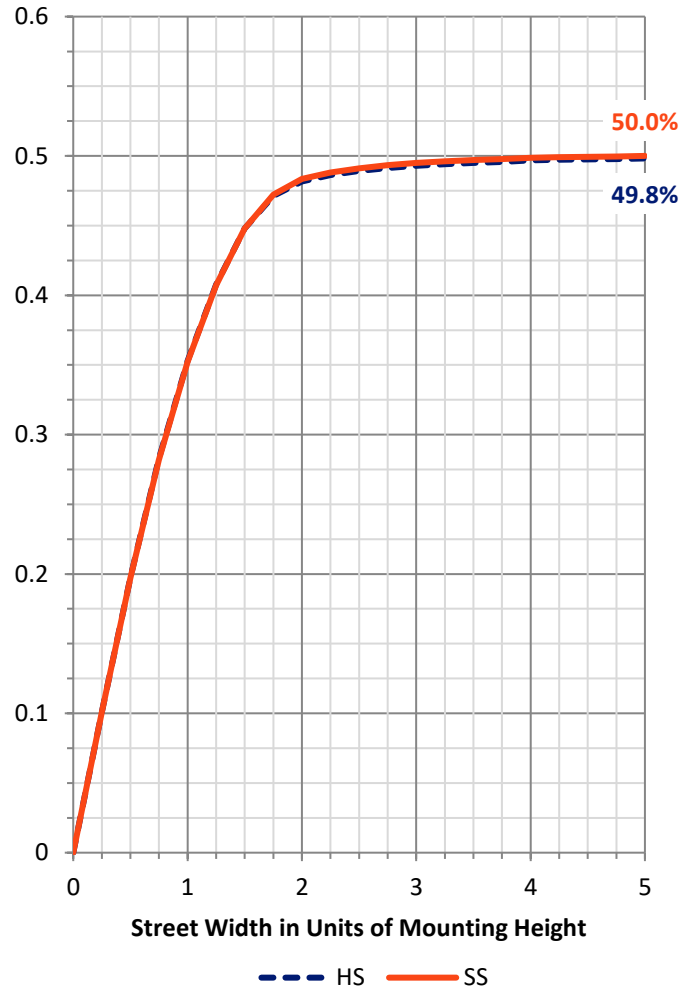

REPORT NUMBER: P631084


CATALOG NUMBER: GWS-SA1F-722-U-5MQ-W-GRSWH

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |        |
|------|-------------|--------|-----------|-------------------------|------|--------|
|      |             |        |           | B                       | U    | G      |
| FL   | (0°-30°)    | 454.4  | 8.4       |                         |      |        |
| FM   | (30°-60°)   | 1837.3 | 33.8      |                         |      |        |
| FH   | (60°-80°)   | 414.3  | 7.6       |                         |      | G0/660 |
| FVH  | (80°-90°)   | 10.9   | 0.2       |                         |      | G1/100 |
| BL   | (0°-30°)    | 454.4  | 8.4       | B1/500                  |      |        |
| BM   | (30°-60°)   | 1837.3 | 33.8      | B2/2500                 |      |        |
| BH   | (60°-80°)   | 414.3  | 7.6       | B1/500                  |      | G0/660 |
| BVH  | (80°-90°)   | 10.9   | 0.2       |                         |      | G1/100 |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |        |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |        |

**BUG Rating: B2-U0-G1**

Type V Short

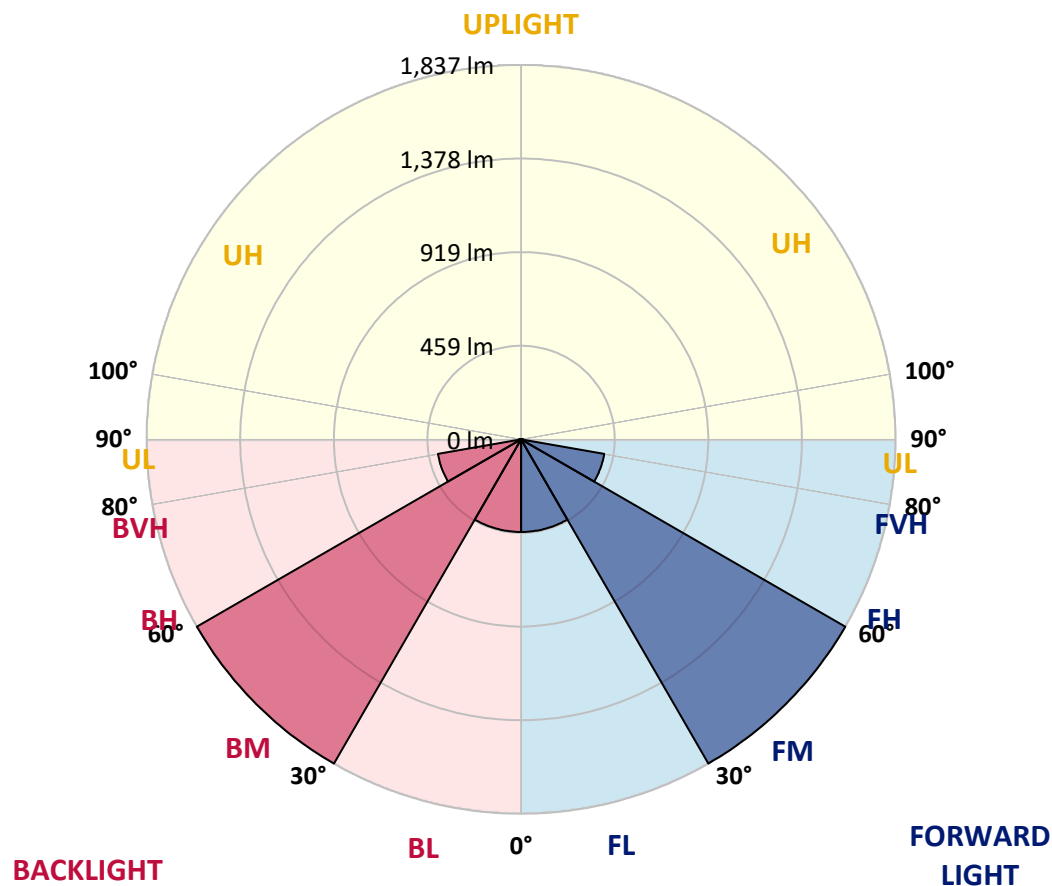



REPORT NUMBER: P631084

CATALOG NUMBER: GWS-SA1F-722-U-5MQ-W-GRSWH

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 5°     | 15°    | 25°    | 35°    | 45°    | 55°    | 65°    | 75°    | 85°    | 90°    |
|-------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| 0°    | 1039.7 | 1039.7 | 1039.7 | 1039.7 | 1039.7 | 1039.7 | 1039.7 | 1039.7 | 1039.7 | 1039.7 | 1039.7 |
| 2.5°  | 1033.4 | 1033.4 | 1035.7 | 1037.9 | 1038.8 | 1042.8 | 1042.3 | 1041.0 | 1040.1 | 1037.5 | 1041.0 |
| 5°    | 1035.7 | 1035.7 | 1037.5 | 1038.8 | 1038.3 | 1041.5 | 1040.1 | 1037.9 | 1036.6 | 1033.9 | 1037.9 |
| 7.5°  | 1035.2 | 1035.2 | 1036.6 | 1037.9 | 1037.0 | 1039.7 | 1037.5 | 1034.3 | 1032.1 | 1029.4 | 1033.0 |
| 10°   | 1029.4 | 1030.3 | 1031.7 | 1034.8 | 1036.1 | 1040.1 | 1037.0 | 1032.1 | 1028.6 | 1025.4 | 1029.0 |
| 12.5° | 1028.6 | 1029.4 | 1031.2 | 1035.2 | 1037.5 | 1043.2 | 1039.2 | 1031.2 | 1025.9 | 1021.9 | 1025.4 |
| 15°   | 1032.6 | 1033.4 | 1036.1 | 1041.0 | 1044.6 | 1050.8 | 1045.0 | 1033.9 | 1026.3 | 1021.0 | 1024.1 |
| 17.5° | 1037.5 | 1038.8 | 1042.8 | 1049.9 | 1055.7 | 1062.4 | 1055.2 | 1041.9 | 1031.2 | 1024.1 | 1026.8 |
| 20°   | 1042.8 | 1044.6 | 1050.8 | 1061.5 | 1072.2 | 1080.6 | 1071.7 | 1053.9 | 1041.0 | 1031.7 | 1034.3 |
| 22.5° | 1052.1 | 1054.4 | 1062.4 | 1077.5 | 1093.5 | 1106.0 | 1094.8 | 1070.8 | 1053.9 | 1041.9 | 1044.1 |
| 25°   | 1071.3 | 1073.9 | 1084.2 | 1102.4 | 1125.1 | 1140.2 | 1124.6 | 1097.5 | 1073.9 | 1059.3 | 1061.5 |
| 27.5° | 1105.1 | 1106.4 | 1119.8 | 1143.8 | 1171.8 | 1189.2 | 1170.5 | 1138.4 | 1112.2 | 1095.3 | 1097.1 |
| 30°   | 1149.6 | 1153.6 | 1166.9 | 1198.5 | 1231.9 | 1255.0 | 1230.5 | 1192.7 | 1162.5 | 1142.0 | 1143.8 |
| 32.5° | 1203.8 | 1206.5 | 1226.5 | 1259.4 | 1307.5 | 1334.2 | 1300.8 | 1255.9 | 1219.4 | 1194.5 | 1196.3 |
| 35°   | 1275.0 | 1277.2 | 1296.4 | 1338.2 | 1396.5 | 1421.4 | 1383.1 | 1331.5 | 1289.3 | 1265.7 | 1272.3 |
| 37.5° | 1360.0 | 1364.0 | 1377.8 | 1419.2 | 1484.1 | 1508.6 | 1464.5 | 1416.5 | 1372.4 | 1350.6 | 1355.5 |
| 40°   | 1451.2 | 1450.7 | 1461.9 | 1498.3 | 1557.5 | 1572.6 | 1533.0 | 1494.8 | 1457.0 | 1442.7 | 1450.7 |
| 42.5° | 1529.5 | 1527.3 | 1535.3 | 1565.5 | 1606.4 | 1607.8 | 1581.5 | 1560.2 | 1533.5 | 1523.7 | 1531.3 |
| 45°   | 1584.2 | 1585.1 | 1597.1 | 1618.0 | 1638.9 | 1627.8 | 1619.8 | 1616.2 | 1595.3 | 1582.0 | 1583.3 |
| 47.5° | 1627.4 | 1630.9 | 1650.0 | 1664.3 | 1667.0 | 1648.3 | 1659.4 | 1664.7 | 1647.4 | 1626.9 | 1621.1 |
| 50°   | 1665.6 | 1671.4 | 1696.3 | 1711.4 | 1705.7 | 1682.1 | 1703.9 | 1711.9 | 1673.6 | 1634.5 | 1622.9 |
| 52.5° | 1735.0 | 1741.7 | 1771.9 | 1791.5 | 1784.8 | 1761.3 | 1781.7 | 1753.3 | 1688.8 | 1640.7 | 1626.0 |
| 55°   | 1845.8 | 1848.9 | 1885.8 | 1917.9 | 1914.7 | 1885.8 | 1869.4 | 1806.2 | 1727.9 | 1678.1 | 1664.3 |
| 57.5° | 1822.2 | 1827.6 | 1891.6 | 1977.0 | 2025.1 | 1998.8 | 1902.3 | 1794.6 | 1688.3 | 1628.2 | 1609.6 |
| 60°   | 1433.8 | 1446.7 | 1526.4 | 1676.7 | 1852.9 | 1852.5 | 1673.2 | 1505.9 | 1377.8 | 1298.1 | 1290.1 |
| 62.5° | 837.3  | 846.2  | 918.7  | 1070.8 | 1228.7 | 1238.5 | 1112.6 | 997.9  | 885.7  | 831.9  | 806.1  |
| 65°   | 396.4  | 395.9  | 424.9  | 493.4  | 600.1  | 608.6  | 570.8  | 508.0  | 441.8  | 423.5  | 418.6  |
| 67.5° | 292.7  | 292.7  | 290.5  | 295.4  | 315.9  | 320.3  | 315.9  | 305.6  | 299.4  | 303.4  | 300.7  |
| 70°   | 254.0  | 254.5  | 251.8  | 250.5  | 250.5  | 249.1  | 250.9  | 254.9  | 257.6  | 262.9  | 260.3  |
| 72.5° | 206.0  | 206.4  | 206.4  | 206.9  | 207.3  | 205.5  | 208.2  | 210.4  | 210.9  | 212.7  | 210.9  |
| 75°   | 146.4  | 147.3  | 149.9  | 152.1  | 153.9  | 153.9  | 154.8  | 155.3  | 153.5  | 155.7  | 152.1  |
| 77.5° | 80.5   | 81.4   | 86.3   | 90.3   | 94.3   | 94.8   | 96.1   | 97.0   | 96.1   | 97.9   | 95.2   |
| 80°   | 44.5   | 45.4   | 47.6   | 49.4   | 52.5   | 55.2   | 56.9   | 57.8   | 57.8   | 59.2   | 57.8   |
| 82.5° | 25.4   | 26.2   | 27.6   | 28.5   | 31.1   | 33.4   | 35.1   | 36.5   | 36.5   | 36.9   | 36.0   |
| 85°   | 12.0   | 12.0   | 12.9   | 13.8   | 15.1   | 16.0   | 18.2   | 19.6   | 19.6   | 20.5   | 19.6   |
| 87.5° | 1.8    | 2.2    | 2.7    | 2.7    | 3.6    | 4.4    | 5.3    | 5.8    | 6.7    | 7.1    | 7.1    |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2008: Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGRAW-EDISON

Report Number: SP1-1908-441-10-R4

Test Date: 10/25/2019

Luminaire Tested: SA1C-722-U-5WQ

Data in this report applies to families of products SA1C-722-U-5WQ.

### Test Information

Test Method: LM-79-2008 Report  
 Number: SP1-1908-441-10-R4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/28/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: MCGRAW-EDISON  
 Catalog Number: **SA1C-722-U-5WQ**  
 Description: MCGRAW EDISON ROADWAY AND AREA LUMINAIRE

\*\*\*THIS IS A REVISION OF SP1-1908-441-4-R3. TO UPDATE THE CATALOG INFORMATION.\*\*\*TESTED IN SITU. ROADWAY AND AREA LUMINAIRE. (1) 70 CRI, 5000K, 1050MA LIGHTSQUARE WITH 16 LEDS AND TYPE V WIDE OPTICS.

### Spectral Parameters

|                           |         |           |      |      |       |
|---------------------------|---------|-----------|------|------|-------|
| CCT (K):                  | 2237    | CRI (Ra): | 72.0 |      |       |
| CIE u':                   | 0.2876  | R1:       | 68.9 | R9:  | -17.4 |
| CIE v':                   | 0.5346  | R2:       | 83.0 | R10: | 61.3  |
| Duv:                      | -0.0006 | R3:       | 95.2 | R11: | 59.8  |
| CIE x:                    | 0.5005  | R4:       | 66.2 | R12: | 50.5  |
| CIE y:                    | 0.4134  | R5:       | 65.9 | R13: | 71.1  |
| CIE z:                    | 0.0860  | R6:       | 76.3 | R14: | 96.9  |
| Peak Wavelength (nm):     | 603     | R7:       | 76.7 |      |       |
| Dominant Wavelength (nm): | 587     | R8:       | 43.8 |      |       |
| Purity:                   | 74.5    |           |      |      |       |
| Rf:                       | 69.8    |           |      |      |       |
| Rg:                       | 99.2    |           |      |      |       |



### Test Conditions


Stabilization Time: 71M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.7/41%  
 Sphere Temperature (°C): 25.6

REPORT NUMBER: SP1-1908-441-10-R4

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/28/2019        | 12/28/2019           |
| Power Meter                    | IN0071                | 12/5/2018        | 12/5/2019            |
| AC Power Source                | IN0063                | 12/5/2018        | 12/5/2019            |
| DC Power Source                | IN0208                | 12/5/2018        | 12/5/2019            |
| Sphere Thermometer             | IN0085                | 12/5/2018        | 12/5/2019            |
| Room Thermometer               | IN0046                | 12/5/2018        | 12/5/2019            |

REPORT NUMBER: SP1-1908-441-10-R4

**CIE 1931 Chromaticity Diagram**

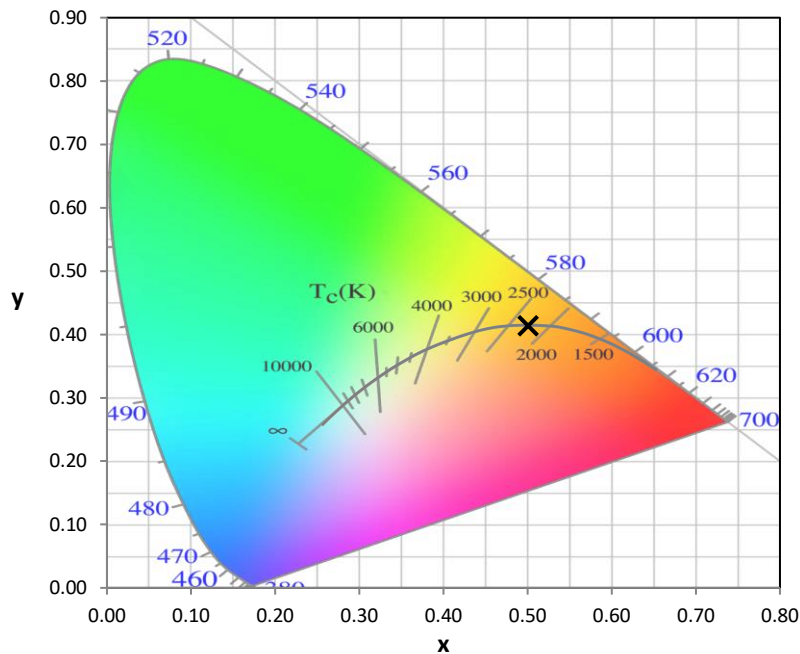

**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 2200K 4-step quadrangle

REPORT NUMBER: SP1-1908-441-10-R4

**Photopic Flux vs. Wavelength**



#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1768             | NR               | 490       | 5206             | NR               | 620       | 130919           | NR               | 750       | 8553             | NR               | 880       | 2713             | NR               |
| 365       | 1569             | NR               | 495       | 7286             | NR               | 625       | 125335           | NR               | 755       | 7696             | NR               | 885       | 2316             | NR               |
| 370       | 1594             | NR               | 500       | 10654            | NR               | 630       | 118388           | NR               | 760       | 6978             | NR               | 890       | 2539             | NR               |
| 375       | 1744             | NR               | 505       | 15189            | NR               | 635       | 111855           | NR               | 765       | 6377             | NR               | 895       | 1933             | NR               |
| 380       | 1659             | NR               | 510       | 20541            | NR               | 640       | 104062           | NR               | 770       | 5600             | NR               | 900       | 2216             | NR               |
| 385       | 1504             | NR               | 515       | 26492            | NR               | 645       | 96365            | NR               | 775       | 5000             | NR               | 905       | 2067             | NR               |
| 390       | 1541             | NR               | 520       | 32294            | NR               | 650       | 88651            | NR               | 780       | 4709             | NR               | 910       | 1959             | NR               |
| 395       | 1355             | NR               | 525       | 38123            | NR               | 655       | 81152            | NR               | 785       | 4305             | NR               | 915       | 1874             | NR               |
| 400       | 1243             | NR               | 530       | 43232            | NR               | 660       | 73523            | NR               | 790       | 4040             | NR               | 920       | 1484             | NR               |
| 405       | 1417             | NR               | 535       | 48012            | NR               | 665       | 66123            | NR               | 795       | 3642             | NR               | 925       | 1914             | NR               |
| 410       | 2147             | NR               | 540       | 52623            | NR               | 670       | 58677            | NR               | 800       | 3594             | NR               | 930       | 1948             | NR               |
| 415       | 3837             | NR               | 545       | 57516            | NR               | 675       | 52349            | NR               | 805       | 3190             | NR               | 935       | 2079             | NR               |
| 420       | 7159             | NR               | 550       | 62613            | NR               | 680       | 46159            | NR               | 810       | 3241             | NR               | 940       | 2263             | NR               |
| 425       | 12599            | NR               | 555       | 68554            | NR               | 685       | 40525            | NR               | 815       | 2732             | NR               | 945       | 1688             | NR               |
| 430       | 19019            | NR               | 560       | 75325            | NR               | 690       | 35615            | NR               | 820       | 2612             | NR               | 950       | 1560             | NR               |
| 435       | 24875            | NR               | 565       | 82533            | NR               | 695       | 31158            | NR               | 825       | 2966             | NR               | 955       | 2826             | NR               |
| 440       | 29103            | NR               | 570       | 90909            | NR               | 700       | 27409            | NR               | 830       | 2574             | NR               | 960       | 1477             | NR               |
| 445       | 29901            | NR               | 575       | 99621            | NR               | 705       | 24204            | NR               | 835       | 2633             | NR               | 965       | 1568             | NR               |
| 450       | 24862            | NR               | 580       | 108484           | NR               | 710       | 21558            | NR               | 840       | 2526             | NR               | 970       | 2030             | NR               |
| 455       | 15942            | NR               | 585       | 116679           | NR               | 715       | 19222            | NR               | 845       | 2631             | NR               | 975       | 1986             | NR               |
| 460       | 9916             | NR               | 590       | 123752           | NR               | 720       | 17310            | NR               | 850       | 2079             | NR               | 980       | 2540             | NR               |
| 465       | 7051             | NR               | 595       | 129324           | NR               | 725       | 15280            | NR               | 855       | 2309             | NR               | 985       | 1139             | NR               |
| 470       | 5227             | NR               | 600       | 134082           | NR               | 730       | 13282            | NR               | 860       | 2528             | NR               | 990       | 2018             | NR               |
| 475       | 4257             | NR               | 605       | 135698           | NR               | 735       | 11753            | NR               | 865       | 2121             | NR               | 995       | 3445             | NR               |
| 480       | 4052             | NR               | 610       | 135144           | NR               | 740       | 10654            | NR               | 870       | 2751             | NR               | 1000      | 3704             | NR               |
| 485       | 4298             | NR               | 615       | 134180           | NR               | 745       | 9451             | NR               | 875       | 2317             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-10-R4

**Scotopic Flux vs. Wavelength**



**Scotopic Lumens: 4696.9**

**S/P: 0.85**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1768             | NR               | 490       | 5206             | NR               | 620       | 130919           | NR               | 750       | 8553             | NR               | 880       | 2713             | NR               |
| 365       | 1569             | NR               | 495       | 7286             | NR               | 625       | 125335           | NR               | 755       | 7696             | NR               | 885       | 2316             | NR               |
| 370       | 1594             | NR               | 500       | 10654            | NR               | 630       | 118388           | NR               | 760       | 6978             | NR               | 890       | 2539             | NR               |
| 375       | 1744             | NR               | 505       | 15189            | NR               | 635       | 111855           | NR               | 765       | 6377             | NR               | 895       | 1933             | NR               |
| 380       | 1659             | NR               | 510       | 20541            | NR               | 640       | 104062           | NR               | 770       | 5600             | NR               | 900       | 2216             | NR               |
| 385       | 1504             | NR               | 515       | 26492            | NR               | 645       | 96365            | NR               | 775       | 5000             | NR               | 905       | 2067             | NR               |
| 390       | 1541             | NR               | 520       | 32294            | NR               | 650       | 88651            | NR               | 780       | 4709             | NR               | 910       | 1959             | NR               |
| 395       | 1355             | NR               | 525       | 38123            | NR               | 655       | 81152            | NR               | 785       | 4305             | NR               | 915       | 1874             | NR               |
| 400       | 1243             | NR               | 530       | 43232            | NR               | 660       | 73523            | NR               | 790       | 4040             | NR               | 920       | 1484             | NR               |
| 405       | 1417             | NR               | 535       | 48012            | NR               | 665       | 66123            | NR               | 795       | 3642             | NR               | 925       | 1914             | NR               |
| 410       | 2147             | NR               | 540       | 52623            | NR               | 670       | 58677            | NR               | 800       | 3594             | NR               | 930       | 1948             | NR               |
| 415       | 3837             | NR               | 545       | 57516            | NR               | 675       | 52349            | NR               | 805       | 3190             | NR               | 935       | 2079             | NR               |
| 420       | 7159             | NR               | 550       | 62613            | NR               | 680       | 46159            | NR               | 810       | 3241             | NR               | 940       | 2263             | NR               |
| 425       | 12599            | NR               | 555       | 68554            | NR               | 685       | 40525            | NR               | 815       | 2732             | NR               | 945       | 1688             | NR               |
| 430       | 19019            | NR               | 560       | 75325            | NR               | 690       | 35615            | NR               | 820       | 2612             | NR               | 950       | 1560             | NR               |
| 435       | 24875            | NR               | 565       | 82533            | NR               | 695       | 31158            | NR               | 825       | 2966             | NR               | 955       | 2826             | NR               |
| 440       | 29103            | NR               | 570       | 90909            | NR               | 700       | 27409            | NR               | 830       | 2574             | NR               | 960       | 1477             | NR               |
| 445       | 29901            | NR               | 575       | 99621            | NR               | 705       | 24204            | NR               | 835       | 2633             | NR               | 965       | 1568             | NR               |
| 450       | 24862            | NR               | 580       | 108484           | NR               | 710       | 21558            | NR               | 840       | 2526             | NR               | 970       | 2030             | NR               |
| 455       | 15942            | NR               | 585       | 116679           | NR               | 715       | 19222            | NR               | 845       | 2631             | NR               | 975       | 1986             | NR               |
| 460       | 9916             | NR               | 590       | 123752           | NR               | 720       | 17310            | NR               | 850       | 2079             | NR               | 980       | 2540             | NR               |
| 465       | 7051             | NR               | 595       | 129324           | NR               | 725       | 15280            | NR               | 855       | 2309             | NR               | 985       | 1139             | NR               |
| 470       | 5227             | NR               | 600       | 134082           | NR               | 730       | 13282            | NR               | 860       | 2528             | NR               | 990       | 2018             | NR               |
| 475       | 4257             | NR               | 605       | 135698           | NR               | 735       | 11753            | NR               | 865       | 2121             | NR               | 995       | 3445             | NR               |
| 480       | 4052             | NR               | 610       | 135144           | NR               | 740       | 10654            | NR               | 870       | 2751             | NR               | 1000      | 3704             | NR               |
| 485       | 4298             | NR               | 615       | 134180           | NR               | 745       | 9451             | NR               | 875       | 2317             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-10-R4

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 1470.8 M/P: 0.27**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1768             | NR               | 490       | 5206             | NR               | 620       | 130919           | NR               | 750       | 8553             | NR               | 880       | 2713             | NR               |
| 365       | 1569             | NR               | 495       | 7286             | NR               | 625       | 125335           | NR               | 755       | 7696             | NR               | 885       | 2316             | NR               |
| 370       | 1594             | NR               | 500       | 10654            | NR               | 630       | 118388           | NR               | 760       | 6978             | NR               | 890       | 2539             | NR               |
| 375       | 1744             | NR               | 505       | 15189            | NR               | 635       | 111855           | NR               | 765       | 6377             | NR               | 895       | 1933             | NR               |
| 380       | 1659             | NR               | 510       | 20541            | NR               | 640       | 104062           | NR               | 770       | 5600             | NR               | 900       | 2216             | NR               |
| 385       | 1504             | NR               | 515       | 26492            | NR               | 645       | 96365            | NR               | 775       | 5000             | NR               | 905       | 2067             | NR               |
| 390       | 1541             | NR               | 520       | 32294            | NR               | 650       | 88651            | NR               | 780       | 4709             | NR               | 910       | 1959             | NR               |
| 395       | 1355             | NR               | 525       | 38123            | NR               | 655       | 81152            | NR               | 785       | 4305             | NR               | 915       | 1874             | NR               |
| 400       | 1243             | NR               | 530       | 43232            | NR               | 660       | 73523            | NR               | 790       | 4040             | NR               | 920       | 1484             | NR               |
| 405       | 1417             | NR               | 535       | 48012            | NR               | 665       | 66123            | NR               | 795       | 3642             | NR               | 925       | 1914             | NR               |
| 410       | 2147             | NR               | 540       | 52623            | NR               | 670       | 58677            | NR               | 800       | 3594             | NR               | 930       | 1948             | NR               |
| 415       | 3837             | NR               | 545       | 57516            | NR               | 675       | 52349            | NR               | 805       | 3190             | NR               | 935       | 2079             | NR               |
| 420       | 7159             | NR               | 550       | 62613            | NR               | 680       | 46159            | NR               | 810       | 3241             | NR               | 940       | 2263             | NR               |
| 425       | 12599            | NR               | 555       | 68554            | NR               | 685       | 40525            | NR               | 815       | 2732             | NR               | 945       | 1688             | NR               |
| 430       | 19019            | NR               | 560       | 75325            | NR               | 690       | 35615            | NR               | 820       | 2612             | NR               | 950       | 1560             | NR               |
| 435       | 24875            | NR               | 565       | 82533            | NR               | 695       | 31158            | NR               | 825       | 2966             | NR               | 955       | 2826             | NR               |
| 440       | 29103            | NR               | 570       | 90909            | NR               | 700       | 27409            | NR               | 830       | 2574             | NR               | 960       | 1477             | NR               |
| 445       | 29901            | NR               | 575       | 99621            | NR               | 705       | 24204            | NR               | 835       | 2633             | NR               | 965       | 1568             | NR               |
| 450       | 24862            | NR               | 580       | 108484           | NR               | 710       | 21558            | NR               | 840       | 2526             | NR               | 970       | 2030             | NR               |
| 455       | 15942            | NR               | 585       | 116679           | NR               | 715       | 19222            | NR               | 845       | 2631             | NR               | 975       | 1986             | NR               |
| 460       | 9916             | NR               | 590       | 123752           | NR               | 720       | 17310            | NR               | 850       | 2079             | NR               | 980       | 2540             | NR               |
| 465       | 7051             | NR               | 595       | 129324           | NR               | 725       | 15280            | NR               | 855       | 2309             | NR               | 985       | 1139             | NR               |
| 470       | 5227             | NR               | 600       | 134082           | NR               | 730       | 13282            | NR               | 860       | 2528             | NR               | 990       | 2018             | NR               |
| 475       | 4257             | NR               | 605       | 135698           | NR               | 735       | 11753            | NR               | 865       | 2121             | NR               | 995       | 3445             | NR               |
| 480       | 4052             | NR               | 610       | 135144           | NR               | 740       | 10654            | NR               | 870       | 2751             | NR               | 1000      | 3704             | NR               |
| 485       | 4298             | NR               | 615       | 134180           | NR               | 745       | 9451             | NR               | 875       | 2317             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-10-R4

**TM-30-18**

### Summary

$R_f = 69.8$   
 $R_g = 99.2$   
 CIE  $R_a = 72.0$   
 $R_g = -17.4$



### Color Vector Graphics



REPORT NUMBER: SP1-1908-441-10-R4

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**



|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 87 | CES26 = 56 | CES51 = 74 | CES76 = 56 |
| CES02 = 65 | CES27 = 76 | CES52 = 76 | CES77 = 81 |
| CES03 = 32 | CES28 = 83 | CES53 = 65 | CES78 = 63 |
| CES04 = 72 | CES29 = 46 | CES54 = 78 | CES79 = 84 |
| CES05 = 52 | CES30 = 48 | CES55 = 75 | CES80 = 84 |
| CES06 = 52 | CES31 = 51 | CES56 = 65 | CES81 = 63 |
| CES07 = 44 | CES32 = 51 | CES57 = 62 | CES82 = 92 |
| CES08 = 42 | CES33 = 53 | CES58 = 66 | CES83 = 83 |
| CES09 = 29 | CES34 = 70 | CES59 = 84 | CES84 = 92 |
| CES10 = 78 | CES35 = 85 | CES60 = 90 | CES85 = 81 |
| CES11 = 61 | CES36 = 78 | CES61 = 84 | CES86 = 56 |
| CES12 = 68 | CES37 = 80 | CES62 = 70 | CES87 = 78 |
| CES13 = 45 | CES38 = 53 | CES63 = 68 | CES88 = 72 |
| CES14 = 75 | CES39 = 90 | CES64 = 69 | CES89 = 62 |
| CES15 = 72 | CES40 = 84 | CES65 = 67 | CES90 = 67 |
| CES16 = 49 | CES41 = 75 | CES66 = 64 | CES91 = 90 |
| CES17 = 51 | CES42 = 79 | CES67 = 63 | CES92 = 67 |
| CES18 = 57 | CES43 = 64 | CES68 = 69 | CES93 = 79 |
| CES19 = 74 | CES44 = 98 | CES69 = 80 | CES94 = 52 |
| CES20 = 68 | CES45 = 73 | CES70 = 63 | CES95 = 76 |
| CES21 = 89 | CES46 = 67 | CES71 = 63 | CES96 = 78 |
| CES22 = 81 | CES47 = 60 | CES72 = 87 | CES97 = 77 |
| CES23 = 92 | CES48 = 48 | CES73 = 56 | CES98 = 71 |
| CES24 = 92 | CES49 = 64 | CES74 = 87 | CES99 = 65 |
| CES25 = 74 | CES50 = 74 | CES75 = 66 |            |



REPORT NUMBER: SP1-1908-441-10-R4

**TM-30-18**

Color Rendition by Hue-Angle Bin

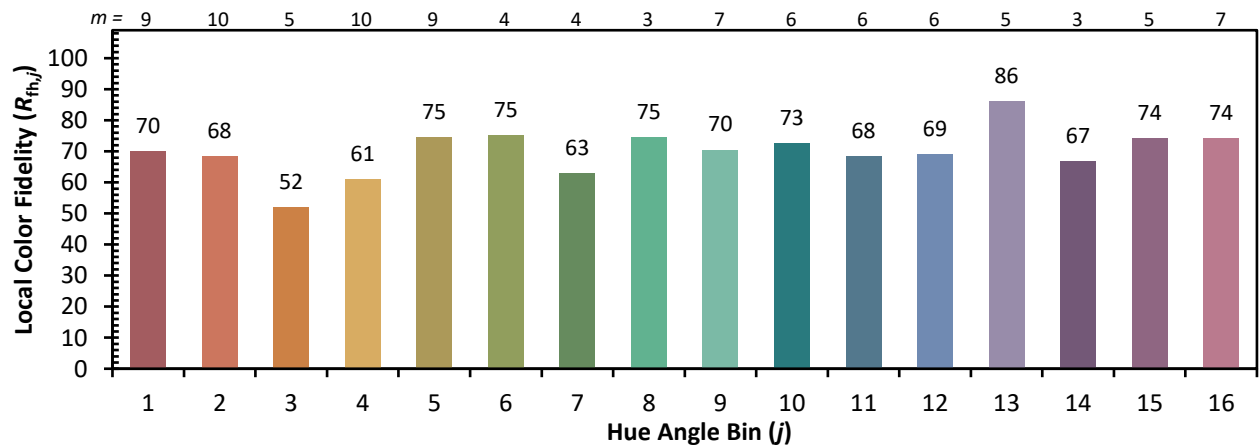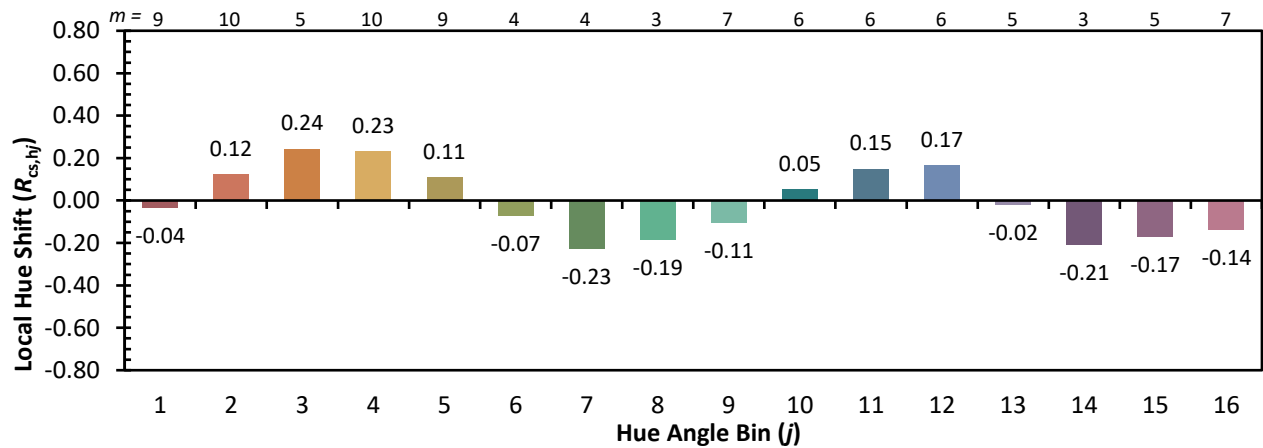

REPORT NUMBER: SP1-1908-441-10-R4

**TM-30-18**

**Measure Comparisons**



(END OF REPORT)