

Signify Classified - Internal  
Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: McGRAW-EDISON

Report Number: P437190

Luminaire Tested: **ISC-SA1B-750-U-RW**

Issue Date: 12/9/2020

**Test Information**

Test Method: LM-79-08  
Report Number: P437190  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2011-074-24)  
Test Lab: INNOVATION CENTER  
Issue Date: 12/9/2020  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: McGRAW-EDISON  
Catalog Number: ISC-SA1B-750-U-RW  
Description: IMPACT ELITE LED CYLINDER LUMINAIRE  
(1) 70 CRI, 5000K, 450mA LIGHTSQUARE WITH 16 LEDS AND RECTANGULAR WIDE OPTICS  
Light Source: -  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 3601 lumens  
Efficiency: N/A  
Efficacy: 141.8 lumens/watt  
Luminous Opening: Rectangular (W 0.5' x L: 0.5' x H: 0')  
IES Classification: Type III - Medium  
BUG Rating: B2 - U0 - G2


Input Watts (W): 25.4  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 28.75 FT



REPORT NUMBER: P437190  
 CATALOG NUMBER: ISC-SA1B-750-U-RW

### Iso-Footcandle Lines of Horizontal Illumination


✕ Max cd  
 - - - 1/2 Max cd

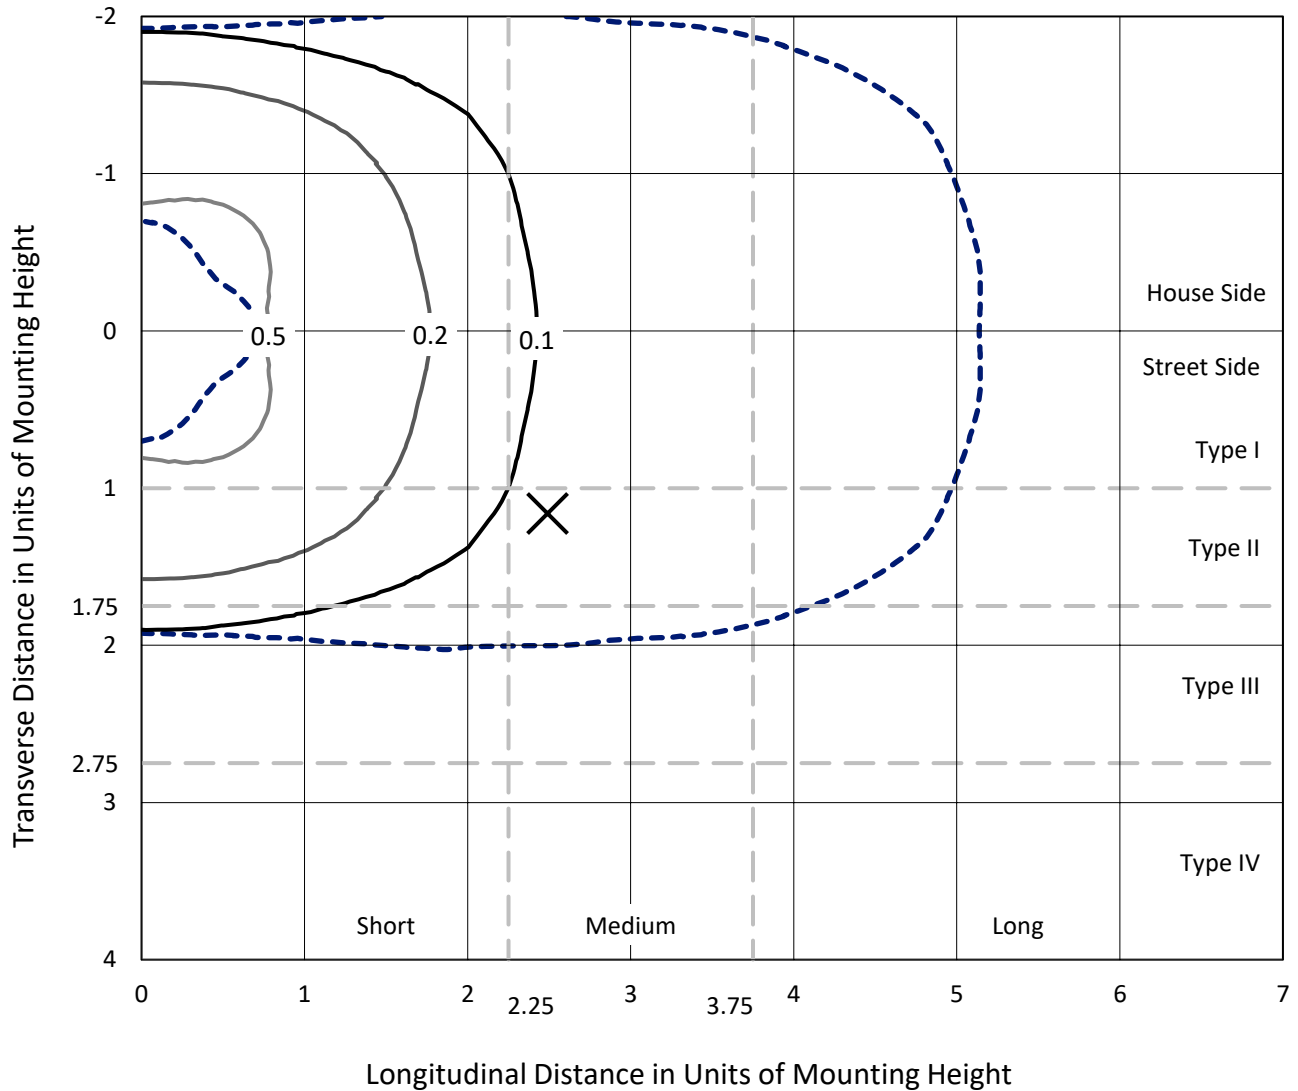

Based on 25 foot mounting height. Maximum calculated value = 0.7 fc  
 Type III - Medium - N/A

REPORT NUMBER: P437190  
CATALOG NUMBER: ISC-SA1B-750-U-RW

### Luminous Intensity Polar Plot

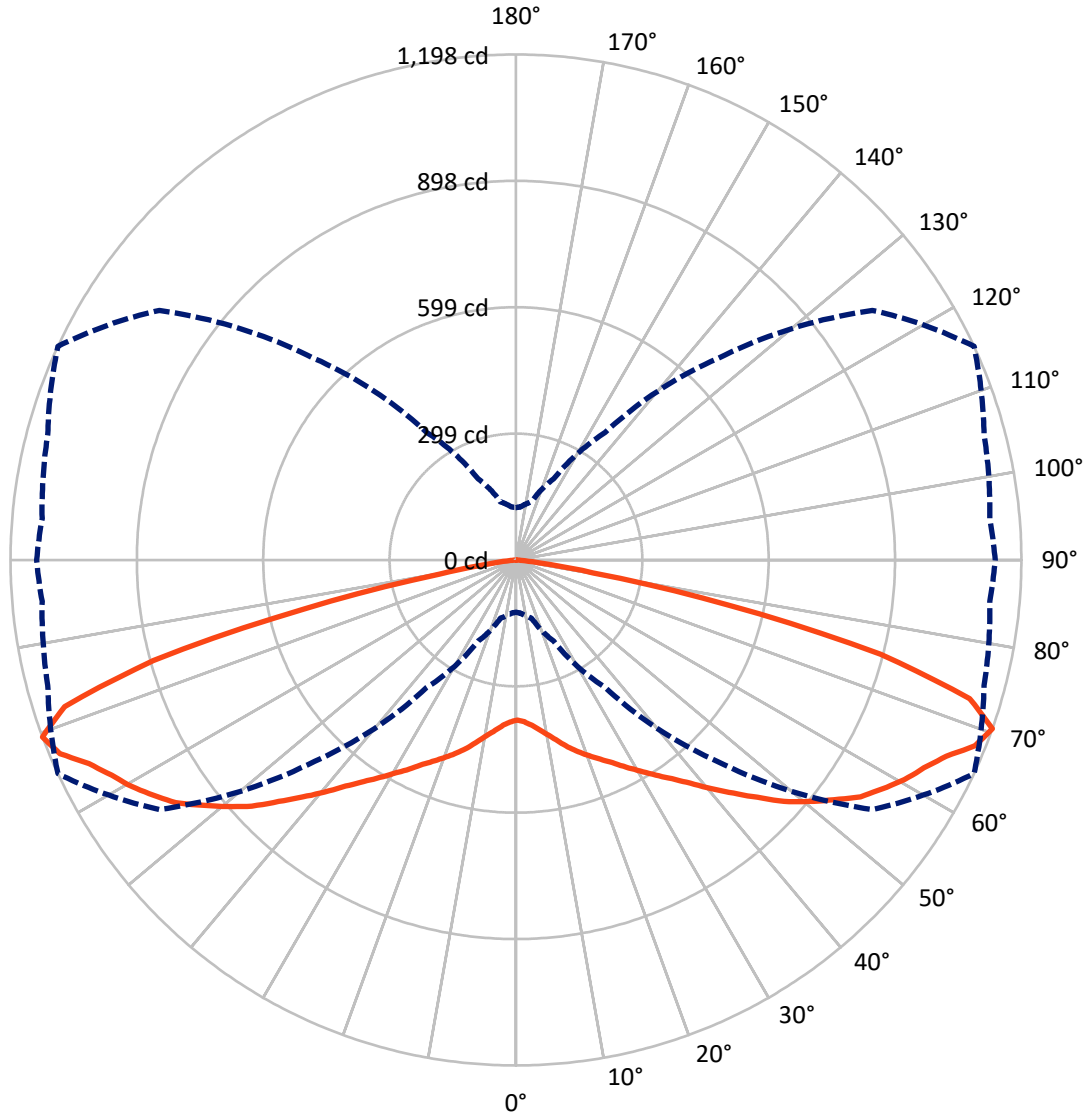

— Vertical Plane Through 65-Deg Lateral      - - - Horizontal Cone Through 70-Deg Vertical

REPORT NUMBER: P437190  
 CATALOG NUMBER: ISC-SA1B-750-U-RW

**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total  |
|--------------------|-----------|----------|--------|--------|
| <b>House Side</b>  | Lumens    | 1800.5   | 0.0    | 1800.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Street Side</b> | Lumens    | 1800.5   | 0.0    | 1800.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Total</b>       | Lumens    | 3601.0   | 0.0    | 3601.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0  |

**Coefficient of Utilization**

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 37.4   | 1.0       |
| 10°-20°   | 124.6  | 3.5       |
| 20°-30°   | 240.6  | 6.7       |
| 30°-40°   | 401.5  | 11.1      |
| 40°-50°   | 628.3  | 17.4      |
| 50°-60°   | 849.6  | 23.6      |
| 60°-70°   | 837.9  | 23.3      |
| 70°-80°   | 451.7  | 12.5      |
| 80°-90°   | 29.4   | 0.8       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-90°    | 3601.0 | 100.0     |
| 0°-180°   | 3601.0 | 100.0     |




REPORT NUMBER: P437190  
 CATALOG NUMBER: ISC-SA1B-750-U-RW

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone           | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|----------------|--------|-----------|-------------------------|------|---------|
|                |        |           | B                       | U    | G       |
| FL (0°-30°)    | 201.3  | 5.6       |                         |      |         |
| FM (30°-60°)   | 939.7  | 26.1      |                         |      |         |
| FH (60°-80°)   | 644.8  | 17.9      |                         |      | G0/660  |
| FVH (80°-90°)  | 14.7   | 0.4       |                         |      | G1/100  |
| BL (0°-30°)    | 201.3  | 5.6       | B1/500                  |      |         |
| BM (30°-60°)   | 939.7  | 26.1      | B1/1000                 |      |         |
| BH (60°-80°)   | 644.8  | 17.9      | B2/1000                 |      | G2/1000 |
| BVH (80°-90°)  | 14.7   | 0.4       |                         |      | G1/100  |
| UL (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B2-U0-G2**  
 Type III Medium

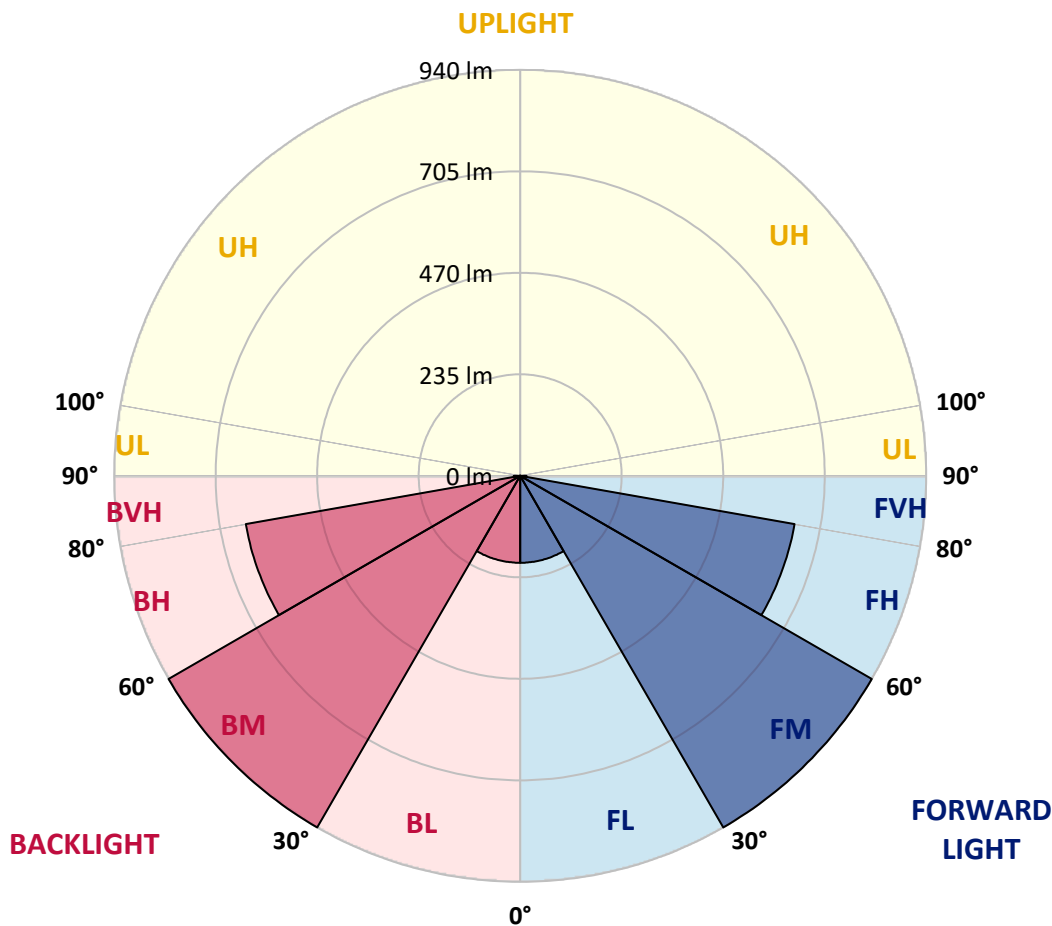



REPORT NUMBER: P437190  
 CATALOG NUMBER: ISC-SA1B-750-U-RW

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 5°    | 15°   | 25°   | 35°    | 45°    | 55°    | 65°    | 75°    | 85°    | 90°    |
|-------|-------|-------|-------|-------|--------|--------|--------|--------|--------|--------|--------|
| 0°    | 379.1 | 379.1 | 379.1 | 379.1 | 379.1  | 379.1  | 379.1  | 379.1  | 379.1  | 379.1  | 379.1  |
| 2.5°  | 380.3 | 382.9 | 380.3 | 380.3 | 382.9  | 381.6  | 384.1  | 384.1  | 384.1  | 385.4  | 384.1  |
| 5°    | 377.8 | 377.8 | 377.8 | 380.3 | 384.1  | 386.7  | 389.2  | 393.0  | 393.0  | 396.8  | 394.2  |
| 7.5°  | 375.3 | 375.3 | 376.5 | 380.3 | 385.4  | 390.4  | 398.0  | 406.9  | 409.4  | 411.9  | 411.9  |
| 10°   | 379.1 | 379.1 | 381.6 | 386.7 | 393.0  | 400.6  | 410.7  | 422.0  | 430.9  | 434.7  | 433.4  |
| 12.5° | 384.1 | 385.4 | 389.2 | 396.8 | 405.6  | 415.7  | 425.8  | 439.7  | 451.1  | 457.4  | 457.4  |
| 15°   | 389.2 | 390.4 | 396.8 | 408.1 | 424.6  | 434.7  | 446.0  | 459.9  | 472.6  | 481.4  | 481.4  |
| 17.5° | 399.3 | 400.6 | 409.4 | 425.8 | 444.8  | 458.7  | 468.8  | 477.6  | 489.0  | 500.4  | 500.4  |
| 20°   | 413.2 | 417.0 | 428.4 | 449.8 | 470.1  | 484.0  | 491.5  | 495.3  | 501.6  | 510.5  | 513.0  |
| 22.5° | 434.7 | 437.2 | 449.8 | 472.6 | 496.6  | 513.0  | 518.1  | 513.0  | 513.0  | 521.9  | 521.9  |
| 25°   | 461.2 | 461.2 | 476.4 | 502.9 | 528.2  | 542.1  | 543.3  | 532.0  | 526.9  | 533.2  | 533.2  |
| 27.5° | 485.2 | 487.7 | 500.4 | 529.4 | 556.0  | 572.4  | 571.1  | 556.0  | 539.6  | 543.3  | 544.6  |
| 30°   | 516.8 | 516.8 | 533.2 | 561.0 | 590.1  | 602.7  | 605.3  | 580.0  | 557.2  | 556.0  | 556.0  |
| 32.5° | 553.5 | 557.2 | 571.1 | 596.4 | 624.2  | 641.9  | 638.1  | 607.8  | 578.7  | 573.7  | 577.5  |
| 35°   | 593.9 | 596.4 | 614.1 | 640.6 | 662.1  | 676.0  | 668.4  | 636.8  | 605.3  | 597.7  | 600.2  |
| 37.5° | 640.6 | 641.9 | 655.8 | 683.6 | 710.1  | 713.9  | 702.6  | 671.0  | 636.8  | 625.5  | 630.5  |
| 40°   | 682.3 | 691.2 | 708.9 | 732.9 | 754.4  | 764.5  | 743.0  | 712.7  | 674.8  | 668.4  | 673.5  |
| 42.5° | 735.4 | 735.4 | 755.6 | 782.2 | 804.9  | 811.2  | 792.3  | 755.6  | 717.7  | 713.9  | 719.0  |
| 45°   | 773.3 | 778.4 | 802.4 | 831.4 | 855.4  | 861.8  | 845.3  | 802.4  | 763.2  | 758.2  | 763.2  |
| 47.5° | 813.8 | 817.5 | 836.5 | 871.9 | 902.2  | 908.5  | 893.4  | 855.4  | 806.2  | 806.2  | 810.0  |
| 50°   | 840.3 | 845.3 | 868.1 | 902.2 | 941.4  | 955.3  | 937.6  | 899.7  | 855.4  | 850.4  | 856.7  |
| 52.5° | 865.6 | 868.1 | 890.8 | 924.9 | 973.0  | 998.2  | 981.8  | 943.9  | 898.4  | 900.9  | 903.5  |
| 55°   | 859.2 | 863.0 | 893.4 | 942.6 | 997.0  | 1026.0 | 1017.2 | 990.7  | 941.4  | 947.7  | 957.8  |
| 57.5° | 823.9 | 825.1 | 864.3 | 923.7 | 1003.3 | 1047.5 | 1051.3 | 1023.5 | 980.5  | 990.7  | 1003.3 |
| 60°   | 744.3 | 754.4 | 793.5 | 865.6 | 980.5  | 1062.7 | 1074.1 | 1057.6 | 1022.2 | 1039.9 | 1046.3 |
| 62.5° | 607.8 | 612.8 | 665.9 | 770.8 | 914.8  | 1058.9 | 1098.1 | 1085.4 | 1055.1 | 1075.3 | 1088.0 |
| 65°   | 398.0 | 414.5 | 480.2 | 607.8 | 797.3  | 1012.1 | 1139.8 | 1120.8 | 1093.0 | 1103.1 | 1117.0 |
| 67.5° | 241.3 | 245.1 | 290.6 | 399.3 | 610.3  | 906.0  | 1139.8 | 1173.9 | 1122.1 | 1120.8 | 1129.6 |
| 70°   | 123.8 | 126.4 | 142.8 | 212.3 | 369.0  | 674.8  | 1031.1 | 1197.9 | 1148.6 | 1127.1 | 1136.0 |
| 72.5° | 83.4  | 80.9  | 84.7  | 99.8  | 168.1  | 358.9  | 765.7  | 1124.6 | 1194.1 | 1156.2 | 1160.0 |
| 75°   | 61.9  | 61.9  | 65.7  | 68.2  | 83.4   | 160.5  | 439.7  | 892.1  | 1146.1 | 1128.4 | 1114.5 |
| 77.5° | 45.5  | 46.8  | 49.3  | 50.5  | 54.3   | 72.0   | 176.9  | 515.5  | 845.3  | 981.8  | 978.0  |
| 80°   | 30.3  | 31.6  | 36.6  | 35.4  | 35.4   | 40.4   | 68.2   | 184.5  | 328.5  | 353.8  | 336.1  |
| 82.5° | 17.7  | 16.4  | 21.5  | 21.5  | 20.2   | 20.2   | 30.3   | 56.9   | 89.7   | 61.9   | 45.5   |
| 85°   | 1.3   | 2.5   | 3.8   | 3.8   | 3.8    | 3.8    | 7.6    | 12.6   | 22.7   | 17.7   | 13.9   |
| 87.5° | 0.0   | 0.0   | 0.0   | 0.0   | 0.0    | 1.3    | 1.3    | 1.3    | 2.5    | 2.5    | 2.5    |
| 90°   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2008: Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGRAW-EDISON

Report Number: SP1-1908-441-4-R4

Test Date: 10/02/2019

Luminaire Tested: SA1C-750-U-5WQ

Data in this report applies to families of products SA1C-760-U-5WQ .



**Test Information**

Test Method: LM-79-2008  
 Report Number: SP1-1908-441-4-R4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry: 4π  
 Issue Date: 10/28/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: McGRAW-EDISON  
 Catalog Number: **SA1C-750-U-5WQ**  
 Description: McGRAW EDISON ROADWAY AND AREA LUMINAIRE

\*\*\*THIS IS A REVISION OF SP1-1908-441-4-R3. TO UPDATE THE CATALOG INFORMATION.\*\*\*TESTED IN SITU. ROADWAY AND AREA LUMINAIRE. (1) 70 CRI, 5000K, 1050MA LIGHTSQUARE WITH 16 LEDS AND TYPE V WIDE OPTICS.

**Spectral Parameters**

|                           |        |           |      |      |       |
|---------------------------|--------|-----------|------|------|-------|
| CCT (K):                  | 4884   | CRI (Ra): | 73.5 | R9:  | -28.4 |
| CIE u':                   | 0.2101 | R1:       | 70.5 | R10: | 48.6  |
| CIE v':                   | 0.4904 | R2:       | 77.7 | R11: | 73.2  |
| Duv:                      | 0.0037 | R3:       | 84.6 | R12: | 50.7  |
| CIE x:                    | 0.3493 | R4:       | 74.7 | R13: | 71.2  |
| CIE y:                    | 0.3624 | R5:       | 71.9 | R14: | 91.4  |
| CIE z:                    | 0.2884 | R6:       | 70.7 |      |       |
| Peak Wavelength (nm):     | 444    | R7:       | 81.2 |      |       |
| Dominant Wavelength (nm): | 571    | R8:       | 56.9 |      |       |
| Purity:                   | 13.7   |           |      |      |       |
| Rf:                       | 74.9   |           |      |      |       |
| Rg:                       | 96.3   |           |      |      |       |



**Test Conditions**

Stabilization Time: 240M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 25.0./44%  
 Sphere Temperature (°C): 25.7

REPORT NUMBER: SP1-1908-441-4-R4

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/28/2019        | 12/28/2019           |
| Power Meter                    | IN0071                | 12/5/2018        | 12/5/2019            |
| AC Power Source                | IN0063                | 12/5/2018        | 12/5/2019            |
| DC Power Source                | IN0208                | 12/5/2018        | 12/5/2019            |
| Sphere Thermometer             | IN0085                | 12/5/2018        | 12/5/2019            |
| Room Thermometer               | IN0046                | 12/5/2018        | 12/5/2019            |

REPORT NUMBER: SP1-1908-441-4-R4

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-1908-441-4-R4

**Photopic Flux vs. Wavelength**



#####

| $\lambda$<br>(nm) | Power<br>( $\mu\text{W}/\text{nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>( $\mu\text{W}/\text{nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>( $\mu\text{W}/\text{nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>( $\mu\text{W}/\text{nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>( $\mu\text{W}/\text{nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 2945                                 | NR                             | 490               | 37941                                | NR                             | 620               | 88803                                | NR                             | 750               | 3908                                 | NR                             | 880               | 2997                                 | NR                             |
| 365               | 2596                                 | NR                             | 495               | 48525                                | NR                             | 625               | 80578                                | NR                             | 755               | 3988                                 | NR                             | 885               | 2927                                 | NR                             |
| 370               | 2732                                 | NR                             | 500               | 60609                                | NR                             | 630               | 73127                                | NR                             | 760               | 3335                                 | NR                             | 890               | 2649                                 | NR                             |
| 375               | 2894                                 | NR                             | 505               | 72036                                | NR                             | 635               | 66244                                | NR                             | 765               | 3438                                 | NR                             | 895               | 2828                                 | NR                             |
| 380               | 2822                                 | NR                             | 510               | 82168                                | NR                             | 640               | 59440                                | NR                             | 770               | 3427                                 | NR                             | 900               | 1407                                 | NR                             |
| 385               | 2394                                 | NR                             | 515               | 90898                                | NR                             | 645               | 52864                                | NR                             | 775               | 2759                                 | NR                             | 905               | 2224                                 | NR                             |
| 390               | 2370                                 | NR                             | 520               | 97142                                | NR                             | 650               | 47085                                | NR                             | 780               | 2340                                 | NR                             | 910               | 2905                                 | NR                             |
| 395               | 2267                                 | NR                             | 525               | 103255                               | NR                             | 655               | 41789                                | NR                             | 785               | 2412                                 | NR                             | 915               | 3350                                 | NR                             |
| 400               | 2262                                 | NR                             | 530               | 106697                               | NR                             | 660               | 37064                                | NR                             | 790               | 1999                                 | NR                             | 920               | 3114                                 | NR                             |
| 405               | 3000                                 | NR                             | 535               | 110081                               | NR                             | 665               | 32299                                | NR                             | 795               | 2054                                 | NR                             | 925               | 2834                                 | NR                             |
| 410               | 5324                                 | NR                             | 540               | 112494                               | NR                             | 670               | 28142                                | NR                             | 800               | 2331                                 | NR                             | 930               | 2271                                 | NR                             |
| 415               | 10725                                | NR                             | 545               | 115513                               | NR                             | 675               | 24505                                | NR                             | 805               | 2648                                 | NR                             | 935               | 2228                                 | NR                             |
| 420               | 22128                                | NR                             | 550               | 117203                               | NR                             | 680               | 21162                                | NR                             | 810               | 2485                                 | NR                             | 940               | 2833                                 | NR                             |
| 425               | 44095                                | NR                             | 555               | 119753                               | NR                             | 685               | 18400                                | NR                             | 815               | 2409                                 | NR                             | 945               | 2941                                 | NR                             |
| 430               | 77002                                | NR                             | 560               | 122602                               | NR                             | 690               | 16065                                | NR                             | 820               | 2221                                 | NR                             | 950               | 2323                                 | NR                             |
| 435               | 119881                               | NR                             | 565               | 124314                               | NR                             | 695               | 13860                                | NR                             | 825               | 1562                                 | NR                             | 955               | 1667                                 | NR                             |
| 440               | 164454                               | NR                             | 570               | 126775                               | NR                             | 700               | 12177                                | NR                             | 830               | 2249                                 | NR                             | 960               | 749                                  | NR                             |
| 445               | 179997                               | NR                             | 575               | 127511                               | NR                             | 705               | 10757                                | NR                             | 835               | 2573                                 | NR                             | 965               | 2669                                 | NR                             |
| 450               | 142822                               | NR                             | 580               | 127577                               | NR                             | 710               | 9601                                 | NR                             | 840               | 2764                                 | NR                             | 970               | 3968                                 | NR                             |
| 455               | 90008                                | NR                             | 585               | 126153                               | NR                             | 715               | 8944                                 | NR                             | 845               | 3109                                 | NR                             | 975               | 3886                                 | NR                             |
| 460               | 60557                                | NR                             | 590               | 123678                               | NR                             | 720               | 7947                                 | NR                             | 850               | 2963                                 | NR                             | 980               | 2788                                 | NR                             |
| 465               | 43305                                | NR                             | 595               | 119774                               | NR                             | 725               | 7062                                 | NR                             | 855               | 2336                                 | NR                             | 985               | 3496                                 | NR                             |
| 470               | 31089                                | NR                             | 600               | 115733                               | NR                             | 730               | 6004                                 | NR                             | 860               | 2118                                 | NR                             | 990               | 2913                                 | NR                             |
| 475               | 26278                                | NR                             | 605               | 109231                               | NR                             | 735               | 5594                                 | NR                             | 865               | 3144                                 | NR                             | 995               | 4659                                 | NR                             |
| 480               | 27060                                | NR                             | 610               | 102408                               | NR                             | 740               | 5165                                 | NR                             | 870               | 3069                                 | NR                             | 1000              | 1308                                 | NR                             |
| 485               | 30698                                | NR                             | 615               | 96015                                | NR                             | 745               | 4687                                 | NR                             | 875               | 3311                                 | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-1908-441-4-R4

Scotopic Flux vs. Wavelength



Scotopic Lumens: 13493.5 S/P: 1.77

| λ (nm) | Power (µW/nm) | Lumens (φ/nm) | λ (nm) | Power (µW/nm) | Lumens (φ/nm) | λ (nm) | Power (µW/nm) | Lumens (φ/nm) | λ (nm) | Power (µW/nm) | Lumens (φ/nm) | λ (nm) | Power (µW/nm) | Lumens (φ/nm) |
|--------|---------------|---------------|--------|---------------|---------------|--------|---------------|---------------|--------|---------------|---------------|--------|---------------|---------------|
| 360    | 2945          | NR            | 490    | 37941         | NR            | 620    | 88803         | NR            | 750    | 3908          | NR            | 880    | 2997          | NR            |
| 365    | 2596          | NR            | 495    | 48525         | NR            | 625    | 80578         | NR            | 755    | 3988          | NR            | 885    | 2927          | NR            |
| 370    | 2732          | NR            | 500    | 60609         | NR            | 630    | 73127         | NR            | 760    | 3335          | NR            | 890    | 2649          | NR            |
| 375    | 2894          | NR            | 505    | 72036         | NR            | 635    | 66244         | NR            | 765    | 3438          | NR            | 895    | 2828          | NR            |
| 380    | 2822          | NR            | 510    | 82168         | NR            | 640    | 59440         | NR            | 770    | 3427          | NR            | 900    | 1407          | NR            |
| 385    | 2394          | NR            | 515    | 90898         | NR            | 645    | 52864         | NR            | 775    | 2759          | NR            | 905    | 2224          | NR            |
| 390    | 2370          | NR            | 520    | 97142         | NR            | 650    | 47085         | NR            | 780    | 2340          | NR            | 910    | 2905          | NR            |
| 395    | 2267          | NR            | 525    | 103255        | NR            | 655    | 41789         | NR            | 785    | 2412          | NR            | 915    | 3350          | NR            |
| 400    | 2262          | NR            | 530    | 106697        | NR            | 660    | 37064         | NR            | 790    | 1999          | NR            | 920    | 3114          | NR            |
| 405    | 3000          | NR            | 535    | 110081        | NR            | 665    | 32299         | NR            | 795    | 2054          | NR            | 925    | 2834          | NR            |
| 410    | 5324          | NR            | 540    | 112494        | NR            | 670    | 28142         | NR            | 800    | 2331          | NR            | 930    | 2271          | NR            |
| 415    | 10725         | NR            | 545    | 115513        | NR            | 675    | 24505         | NR            | 805    | 2648          | NR            | 935    | 2228          | NR            |
| 420    | 22128         | NR            | 550    | 117203        | NR            | 680    | 21162         | NR            | 810    | 2485          | NR            | 940    | 2833          | NR            |
| 425    | 44095         | NR            | 555    | 119753        | NR            | 685    | 18400         | NR            | 815    | 2409          | NR            | 945    | 2941          | NR            |
| 430    | 77002         | NR            | 560    | 122602        | NR            | 690    | 16065         | NR            | 820    | 2221          | NR            | 950    | 2323          | NR            |
| 435    | 119881        | NR            | 565    | 124314        | NR            | 695    | 13860         | NR            | 825    | 1562          | NR            | 955    | 1667          | NR            |
| 440    | 164454        | NR            | 570    | 126775        | NR            | 700    | 12177         | NR            | 830    | 2249          | NR            | 960    | 749           | NR            |
| 445    | 179997        | NR            | 575    | 127511        | NR            | 705    | 10757         | NR            | 835    | 2573          | NR            | 965    | 2669          | NR            |
| 450    | 142822        | NR            | 580    | 127577        | NR            | 710    | 9601          | NR            | 840    | 2764          | NR            | 970    | 3968          | NR            |
| 455    | 90008         | NR            | 585    | 126153        | NR            | 715    | 8944          | NR            | 845    | 3109          | NR            | 975    | 3886          | NR            |
| 460    | 60557         | NR            | 590    | 123678        | NR            | 720    | 7947          | NR            | 850    | 2963          | NR            | 980    | 2788          | NR            |
| 465    | 43305         | NR            | 595    | 119774        | NR            | 725    | 7062          | NR            | 855    | 2336          | NR            | 985    | 3496          | NR            |
| 470    | 31089         | NR            | 600    | 115733        | NR            | 730    | 6004          | NR            | 860    | 2118          | NR            | 990    | 2913          | NR            |
| 475    | 26278         | NR            | 605    | 109231        | NR            | 735    | 5594          | NR            | 865    | 3144          | NR            | 995    | 4659          | NR            |
| 480    | 27060         | NR            | 610    | 102408        | NR            | 740    | 5165          | NR            | 870    | 3069          | NR            | 1000   | 1308          | NR            |
| 485    | 30698         | NR            | 615    | 96015         | NR            | 745    | 4687          | NR            | 875    | 3311          | NR            |        |               |               |

REPORT NUMBER: SP1-1908-441-4-R4

Melanopic Flux vs. Wavelength



Melanopic Lumens: 5378.9 M/P: 0.71

| λ (nm) | Power (µW/nm) | Lumens (φ/nm) | λ (nm) | Power (µW/nm) | Lumens (φ/nm) | λ (nm) | Power (µW/nm) | Lumens (φ/nm) | λ (nm) | Power (µW/nm) | Lumens (φ/nm) | λ (nm) | Power (µW/nm) | Lumens (φ/nm) |
|--------|---------------|---------------|--------|---------------|---------------|--------|---------------|---------------|--------|---------------|---------------|--------|---------------|---------------|
| 360    | 2945          | NR            | 490    | 37941         | NR            | 620    | 88803         | NR            | 750    | 3908          | NR            | 880    | 2997          | NR            |
| 365    | 2596          | NR            | 495    | 48525         | NR            | 625    | 80578         | NR            | 755    | 3988          | NR            | 885    | 2927          | NR            |
| 370    | 2732          | NR            | 500    | 60609         | NR            | 630    | 73127         | NR            | 760    | 3335          | NR            | 890    | 2649          | NR            |
| 375    | 2894          | NR            | 505    | 72036         | NR            | 635    | 66244         | NR            | 765    | 3438          | NR            | 895    | 2828          | NR            |
| 380    | 2822          | NR            | 510    | 82168         | NR            | 640    | 59440         | NR            | 770    | 3427          | NR            | 900    | 1407          | NR            |
| 385    | 2394          | NR            | 515    | 90898         | NR            | 645    | 52864         | NR            | 775    | 2759          | NR            | 905    | 2224          | NR            |
| 390    | 2370          | NR            | 520    | 97142         | NR            | 650    | 47085         | NR            | 780    | 2340          | NR            | 910    | 2905          | NR            |
| 395    | 2267          | NR            | 525    | 103255        | NR            | 655    | 41789         | NR            | 785    | 2412          | NR            | 915    | 3350          | NR            |
| 400    | 2262          | NR            | 530    | 106697        | NR            | 660    | 37064         | NR            | 790    | 1999          | NR            | 920    | 3114          | NR            |
| 405    | 3000          | NR            | 535    | 110081        | NR            | 665    | 32299         | NR            | 795    | 2054          | NR            | 925    | 2834          | NR            |
| 410    | 5324          | NR            | 540    | 112494        | NR            | 670    | 28142         | NR            | 800    | 2331          | NR            | 930    | 2271          | NR            |
| 415    | 10725         | NR            | 545    | 115513        | NR            | 675    | 24505         | NR            | 805    | 2648          | NR            | 935    | 2228          | NR            |
| 420    | 22128         | NR            | 550    | 117203        | NR            | 680    | 21162         | NR            | 810    | 2485          | NR            | 940    | 2833          | NR            |
| 425    | 44095         | NR            | 555    | 119753        | NR            | 685    | 18400         | NR            | 815    | 2409          | NR            | 945    | 2941          | NR            |
| 430    | 77002         | NR            | 560    | 122602        | NR            | 690    | 16065         | NR            | 820    | 2221          | NR            | 950    | 2323          | NR            |
| 435    | 119881        | NR            | 565    | 124314        | NR            | 695    | 13860         | NR            | 825    | 1562          | NR            | 955    | 1667          | NR            |
| 440    | 164454        | NR            | 570    | 126775        | NR            | 700    | 12177         | NR            | 830    | 2249          | NR            | 960    | 749           | NR            |
| 445    | 179997        | NR            | 575    | 127511        | NR            | 705    | 10757         | NR            | 835    | 2573          | NR            | 965    | 2669          | NR            |
| 450    | 142822        | NR            | 580    | 127577        | NR            | 710    | 9601          | NR            | 840    | 2764          | NR            | 970    | 3968          | NR            |
| 455    | 90008         | NR            | 585    | 126153        | NR            | 715    | 8944          | NR            | 845    | 3109          | NR            | 975    | 3886          | NR            |
| 460    | 60557         | NR            | 590    | 123678        | NR            | 720    | 7947          | NR            | 850    | 2963          | NR            | 980    | 2788          | NR            |
| 465    | 43305         | NR            | 595    | 119774        | NR            | 725    | 7062          | NR            | 855    | 2336          | NR            | 985    | 3496          | NR            |
| 470    | 31089         | NR            | 600    | 115733        | NR            | 730    | 6004          | NR            | 860    | 2118          | NR            | 990    | 2913          | NR            |
| 475    | 26278         | NR            | 605    | 109231        | NR            | 735    | 5594          | NR            | 865    | 3144          | NR            | 995    | 4659          | NR            |
| 480    | 27060         | NR            | 610    | 102408        | NR            | 740    | 5165          | NR            | 870    | 3069          | NR            | 1000   | 1308          | NR            |
| 485    | 30698         | NR            | 615    | 96015         | NR            | 745    | 4687          | NR            | 875    | 3311          | NR            |        |               |               |

REPORT NUMBER: SP1-1908-441-4-R4

TM-30-18

**Summary**

$R_f = 74.9$   
 $R_g = 96.3$   
 CIE  $R_a = 73.5$   
 $R_g = -28.4$



**Color Vector Graphics**



REPORT NUMBER: SP1-1908-441-4-R4

TM-30-18

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 61 | CES51 = 90 | CES76 = 52 |
| CES02 = 60 | CES27 = 84 | CES52 = 91 | CES77 = 71 |
| CES03 = 30 | CES28 = 81 | CES53 = 79 | CES78 = 54 |
| CES04 = 69 | CES29 = 58 | CES54 = 83 | CES79 = 80 |
| CES05 = 46 | CES30 = 67 | CES55 = 83 | CES80 = 77 |
| CES06 = 50 | CES31 = 63 | CES56 = 73 | CES81 = 77 |
| CES07 = 39 | CES32 = 59 | CES57 = 72 | CES82 = 90 |
| CES08 = 38 | CES33 = 69 | CES58 = 73 | CES83 = 86 |
| CES09 = 29 | CES34 = 69 | CES59 = 88 | CES84 = 88 |
| CES10 = 73 | CES35 = 83 | CES60 = 93 | CES85 = 84 |
| CES11 = 56 | CES36 = 95 | CES61 = 88 | CES86 = 75 |
| CES12 = 61 | CES37 = 78 | CES62 = 85 | CES87 = 78 |
| CES13 = 41 | CES38 = 76 | CES63 = 77 | CES88 = 79 |
| CES14 = 74 | CES39 = 93 | CES64 = 74 | CES89 = 75 |
| CES15 = 70 | CES40 = 86 | CES65 = 67 | CES90 = 77 |
| CES16 = 46 | CES41 = 87 | CES66 = 69 | CES91 = 89 |
| CES17 = 49 | CES42 = 78 | CES67 = 67 | CES92 = 66 |
| CES18 = 55 | CES43 = 75 | CES68 = 73 | CES93 = 80 |
| CES19 = 71 | CES44 = 99 | CES69 = 81 | CES94 = 57 |
| CES20 = 64 | CES45 = 83 | CES70 = 63 | CES95 = 71 |
| CES21 = 85 | CES46 = 81 | CES71 = 60 | CES96 = 78 |
| CES22 = 77 | CES47 = 80 | CES72 = 86 | CES97 = 85 |
| CES23 = 91 | CES48 = 72 | CES73 = 53 | CES98 = 75 |
| CES24 = 90 | CES49 = 81 | CES74 = 96 | CES99 = 62 |
| CES25 = 71 | CES50 = 89 | CES75 = 58 |            |





REPORT NUMBER: SP1-1908-441-4-R4

TM-30-18

Color Rendition by Hue-Angle Bin



REPORT NUMBER: SP1-1908-441-4-R4

TM-30-18

Measure Comparisons



(END OF REPORT)